

OPERATING SPEEDS

| Unit Code | 7.00 | 7.00 | 7.00 | 7.00 | 7.42 | 7.42 | 7.42 | 7.42 | 7.50 | 7.50 | 7.50 |
|----------------|-------|-------|--------|--------|-------|-------|--------|--------|-------|-------|--------|
| O.P.M. | 390 | 428.6 | 636 | 643 | 368 | 404 | 460 | 600 | 364 | 400 | 600 |
| Baud | 45.5 | 50.0 | 74.2 | 75.0 | 45.5 | 50.0 | 56.9 | 74.2 | 45.5 | 50.0 | 75.0 |
| Pulse Lgth | 0.022 | 0.020 | 0.0135 | 0.0133 | 0.022 | 0.020 | 0.0175 | 0.0135 | 0.022 | 0.020 | 0.0133 |
| Freq | 22.75 | 25.0 | 37.1 | 37.5 | 22.75 | 25.0 | 28.45 | 37.1 | 22.75 | 25.0 | 37.5 |
| Char. Per Sec. | 6.5 | 7.1 | 10.6 | 10.7 | 6.0 | 6.7 | 7.7 | 10.0 | 6.1 | 6.7 | 10.0 |
| Words Per Min. | 65 | 71.4 | 106 | 107 | 60 | 67.3 | 75 | 100 | 60.6 | 66.6 | 100 |

Miscellaneous TTY Manuals & Publications

- **List - quick index of info**
- List - [Apparatus Codes](#) (work in progress)
- List - [Wiring Diagrams & Downloads](#) (work in progress)
- List - Screws & Nuts - [part number list](#) (work in progress)
- List - Paint Finish [Color Code Chart](#)
- List - Bills of Materials - [directory](#)
- List - [700EE](#) - 3/51 change of part numbering system
- List - 1973 Publications Price List - [0.5MB pdf](#)
- List - 1980 Publications Price List - [0.8MB pdf](#)
- List - 1982 Publications Price List - [0.6MB pdf](#)
- List - 1961 Parts List - shows changed numbers and "no longer furnished" - no descriptions - [3MB pdf](#)
- List - 1969 Parts Price List - one word descriptions
 - TP 25M-164532 - [12MB pdf](#) - [text](#)
 - TP 164533 -313014 - [14MB pdf](#) - [text](#)
 - TP 313015-702640, old number to new number conversion - [14MB pdf](#) - [text](#)
- List - 1975 Parts Price List - one word descriptions - [22MB pdf](#)
- List - 1976 Parts Price List - one word descriptions - [7MB pdf](#)
- List - 1978 Parts Price List - one word descriptions - [10MB pdf](#)
- List - 1981 Parts Price List - one word descriptions - [4MB pdf](#)
- List - 1982 Parts Price List - one word descriptions - [4MB pdf](#)
- List - 1984 Parts Price List - one word descriptions - [2MB pdf](#)
- List - 1982 Product Price List - M40, M42, M43, 4400 - [0.5MB pdf](#)
- List - 1972 excess inventory sale price list - [0.2MB pdf](#)
-
- **Catalogs - equipment info**
- Catalog - 1948 Teletype Equipment Data Sheets (partial) - [4 MB pdf](#) - *thanks to Don K9TTY*
- Catalog - 1969 Equipment Price List and Product Descriptions (PD) - M28, M32, M33, M35 - *thanks to David Christ*
 - Index - [2MB pdf](#)
 - PD 1 - PD 33 - [3MB pdf](#)
 - PD 34 - PD 67 - [4MB pdf](#)
 - PD 68 - PD 105D - [5MB pdf](#)
 - PD 106 - PD 129 - [3MB pdf](#)
 - PD 130 - PD 157 - [3MB pdf](#)
 - Component Price List (sec II/1 - II/59) - [2MB pdf](#)
 - Component Price List (sec II/60 - III/13) - [1MB pdf](#)
 - Bulletin, Brochure, Case History, & Packing Charge Price Lists - [2MB pdf](#)
- Catalog - 28 apparatus specs (WE RS 581.0 Sec 23) - [20 MB pdf summary descriptions](#)
- Catalog - TTY Switching Systems (WE RS 581.0 Sec 24) - [summary descriptions](#)
- Catalog - DATAspeed Tape-to-Tape system (WE RS-581.0 Sec 25A)- [summary descriptions](#)
- Catalog - 33 apparatus specs (WE RS 581.0 Sec 26) - [summary descriptions](#)
- Catalog - 35 apparatus specs (WE RS 581.0 Sec 27) - [summary descriptions](#)
- Catalog - 4420, 4424, 4430 terminals (11/81) - [features & selection guide](#)
- W2DLT Surplus Catalog 1971 - [pdf](#)
-
- **Brochure - descriptions, features, benefits**
- Brochure - Teletype Corp. Five Level Equipment [4MB pdf](#) - *thanks to Don K9TTY*
- Brochure - Teletype High Speed Tape Punch and Tape Reader [11MB pdf](#) - *thanks to Ralph Irish*
- Brochure - 28 TASP (Teletype Automatic Switching Package) [5MB pdf](#) - *thanks to Ralph Irish*
- Brochure - 28 Wall Mounted Page Printer (28WM) [5MB pdf](#) - *thanks to Ralph Irish*

- Brochure - 28 RT (28RT) [5MB pdf](#) - thanks to Don K9TTY
- Brochure - 28 KSR and RO (28LP) [6.3MB pdf](#) - thanks to Jim Haynes
- Brochure - 28 KSR and RO (28LP) [4.5MB pdf](#) - thanks to David Christ
- Brochure - 28 Stunt Box (28SB) [13 MB pdf](#) - thanks to David Christ
- Brochure - 35 Brochure + 35 Catalog [14MB pdf](#) - thanks to Don K9TTY
- Brochure - Teletype Product Service "Don't Get Caught Short" - [1MB pdf](#)
-
- **Analysis Chart - cross reference a model number to included options/features**
- Analysis Chart - 28 Printer - model (LPxx), stunt box, and applicable wiring diagram - [3143WD](#)
- Analysis Chart - 28 Keyboard (LAKxx) features - [LAK/AC](#)
- Analysis Chart - 29 and 25 Printers (LP8xx) features - [LP800/AC](#)
- Analysis Chart - 32 and 33 station set model numbers - [32/33/AC](#)
- Analysis Chart - 32 Typewheels - [7171WD](#)
- Analysis Chart - 33 Typewheels - [7172WD](#)
- Analysis Chart - 32 Keytops - [7173WD](#)
- Analysis Chart - 33 Keytops - [7174WD](#)
- Analysis Chart - 32 and 33 Call Control Unit features - [UCC/AC](#)
- Analysis Chart - 32 and 33 Keyboard features - [UK/AC](#)
- Analysis Chart - 32 and 33 Printer features - [UP/AC](#)
-
- **Gears - selections for various operating speeds**
- Gears - 14, 15, 28 [Gear List](#) - thanks to Don K9TTY
- Gears - 28 Gear Set [Chart](#) - thanks to Russ WB3FRP
- Gears - 28 Gear [List](#) - thanks to Don K9TTY
- Gears - 28 Reperf Gear [Charts](#) - LRB, LMRB, ASR Dome Reperf
- Gears - 28 TD Gear [Charts](#) - LXB, LMXB, ASR TD
- Gears - 28 Three Speed Gear Shift (162641 or 163359) Installation - Specification 5948S -
- Gears - 28 Three Speed Gear Shift (195415) Installation - Specification 50204S - [pdf](#)
- Gears - Misc Gear [listing](#) - thanks to Don K9TTY
- Gears - 28 Military Gears [article](#) - thanks to Don K9TTY
-
- **Type - Type Box, Type Wheel, and Keytop charts**
- Type - 26 [Typewheel Info](#)
- Type - 28 [Type Box Codes and configurations](#)
- Type - 28 [Typewheel - Type Box - Keytop code cross-reference](#) - 1961
- Type - 28 [Typewheel - Type Box - Keytop code cross-reference](#) - 1964
- Type - 28 [Typewheel codes / part numbers](#) - LPR
- Type - 28 [Typewheel positioning chart](#) - LPR
- Type - 14, 15, 20, 28 [Keytops and Type Pallets](#) - 1164B
-
- **Wiring - [Wiring Diagram Downloads](#) (work in progress)**
- Wiring - Various TTY machine connections [SD-70551-012 pdf](#) - thanks to Larry Godek & Don K9TTY
- Wiring - 15 Wiring Diagrams - [2.7MB pdf](#) - thanks to Don K9TTY
- Wiring - 28 Typing Unit Wiring Diagram [3214WD jpeg](#) or [3214WD pdf](#) - thanks to Don K9TTY
- Wiring - 28 ASR Wiring [W0700 pdf](#) - thanks to Don K9TTY
- Wiring - 28 LESU Cable Info - [web page](#)
- Wiring - 32 Wiring Diagram 7083WD [712K pdf](#)
- Wiring - 33 Wiring Diagram Package 0316WDP - [10MB pdf](#)
- Wiring - 33 Selector Magnet Driver Schematic 181821 [110K pdf](#)
-
- **Training - Instructional documents**
- Training - Basic Teletypewriter Reading Course (Mar 1948) - [GPP43.671](#) - uses AB documents listed [below](#)
- Training - 28 TTY Description (P70.034) - a good overview - [11 MB pdf](#) - thanks to Bob Erickson & James Tanton
- Training - 28 Keyboard & Printer Maintenance Course - [25MB pdf](#)
- Training - 28 Keyboard Instructional Document [0.6MB pdf](#) - thanks to Jim Haynes
- Training - 28 Printer Instructional Document [2.2MB pdf](#) - thanks to Jim Haynes
- Training - 28 KSR Trainee's Guide [3.7MB pdf](#) - thanks to Tim Swarhout
- Training - 28 ASR Trainee's Guide - [10 MB pdf](#)
- Training - 28 TTY Instructor's Illustrations - [8 MB pdf](#) - thanks to Bob Erickson & James Tanton
- Training - 28 Keyboard & Page Typer USAF training (theory of operation) - 28ASR (AN/FGC-58) - [20MB pdf](#) - thanks to James Tanton
- Training - 28 Typing Reperf USAF training (theory of operation) - 28ASR (AN/FGC-58) - [9MB pdf](#) - thanks to James Tanton
- Training - 28 TD USAF training (theory of operation) - 28ASR (AN/FGC-58) - [9 MB pdf](#) - thanks to James Tanton
- Training - 33 & 32 Training Manual - [8.6 MB pdf](#) - thanks to Don K9TTY and Wayne KB1FDW
- Maintenance - 28 maintenance notes from Navy EIMB - [8 MB pdf](#) - thanks to Don K9TTY
-
- **Miscellaneous TTY and RTTY Info**

- Selector Magnet Driver (15, 19, 20, 28) - Specification 50043S - [1.4MB pdf](#) - Theory & testing info- *thanks to K9KOM*
- GPE (Iron Horse) Perforator docs - [2.6MB pdf](#) - *thanks to Don K9TTY*
- 12 Type Page Printer Specifications, Jan. 1929 (AT&T 4797) [2.7MB pdf](#) - *thanks to Steve Hilsz & Don K9TTY*
- 14 TD principles of operation - [10MB pdf](#) - *thanks to James Tanton*
- 14 Synchronized RT system - 132A2 subscriber set for radioteletype - manual X-63681 - to be scanned
- 14 TD manual - TM 11-2222 [manual](#) covering TT-21/FG and others
- 15 Projection Set - [27MB pdf](#)
- 17 Radio Printer System Manual No. 6 (index to documents) - [0.8MB.pdf](#) - *thanks to Jim Haynes*
- 28 Keytops & Keylever Assemblies - [24KB pdf](#)
- 28 Stunt Box Guide [2MB pdf](#) - *thanks to Don K9TTY*
- 28 Stunt Box Illustrations [1.5 MB pdf](#) - *thanks to Bob Erickson & James Tanton*
- 28 Stunt Box configurations - Bell/WE specs - [5MB pdf](#)
- 28 TD configuration guide - [link](#)
- 28 Dual Shaft TD parts (extracted from RT manual) - [link](#)
- 28 ASR K-KT-T Switching guide - [200KB pdf](#)
- 28 LBAC Multiple Page Printer (Waterfall) Parts, Adjustments, Lubrication pages - [6MB pdf](#)
- 28 LPR Printwheel positioning chart - [20KB pdf](#)
- 28 and 35 Signal Generator Modification - [2MB pdf](#) - *thanks to Don K9TTY*
- 28 Western Union Model 28 Installation Drawings 11753B - [Index Pages \(6.5MB pdf\)](#) - *thanks to Russ WA3FRP*
- 28 Western Union Model 28 Installation Drawings 11753B - [Drawings \(26.8MB pdf\)](#) - *thanks to Russ WA3FRP*
- 28 Western Union Model 28 Chart of Component Units - [174316-8 \(800KB pdf\)](#)
- 28 Western Union Model 28 Parts Catalog 92D - [Index & Intro \(4MB pdf\)](#)
- 28, 35, 37 - FAA Maintenance of Data-Handling Terminal Equipment (Teletypewriter) 1978 - [8MB pdf](#)
- 33 ASR Sprocket Modifications - [3MB pdf](#) - *thanks to Don K9TTY*
- 35 Selective Calling Info [1MB pdf](#) - *thanks to David Christ*
- 40 "Outburst" AMPS message system - [4MB pdf](#) - *thanks to Jim Haynes*
- AP200 high speed matrix printer (1/82) - [spec sheet](#)
- Selective Calling without Zero Code Bar [1.7MB](#) - *thanks to David Christ*
- Selective Calling Note [148KB pdf](#) - *thanks to David Christ*
- Teletype Corp. discontinues Models 28, 32, 33, 35 - [July 31, 1980 letter](#)
- Teletype Corp. Five Level Code Chart [jpeg](#) - *thanks to Don K9TTY*
- TH Tape Handling equipment -[0.4MB pdf](#) - *thanks to Don K9TTY*
- Misc Plan 115 installation info - [9MB pdf](#) - *thanks to Don K9TTY*
- Bell System Data Set Quick Reference - [6MB pdf](#) - *thanks to Don K9TTY*
- AT&T 5310 & 5320 Service Manual - [11MB pdf](#) - *thanks to Don K9TTY*
- Dovetron manuals - [web page](#)
- Frederick Electronics manuals - [web page](#)
- HAL manuals - available from HAL - contact Bill Henry - ghenry@halcomm.com phone 217-367-7373
-
- **Books**
- RTTY The Easy Way -[0.2MB pdf](#)- *thanks to Don K9TTY*
- RTTY Handbook 1982 - [8MB pdf](#) - *thanks to Don K9TTY*
- Teletypewriters Made Easy (TTY for the Deaf) - [33MB pdf](#) - *thanks to Jim Haynes*
- 1953 Kleinschmidt commercial products catalog - [1.5MB pdf](#) - *thanks to Duncan Brown*
- 1970 Kleinschmidt catalog - [76MB pdf](#)
- 1954 US Army "Principles of Telegraphy (Teletypewriter)" (NOT same as 1967 NAVSHIPS book) [TM 11-655 - 38MB pdf](#)
- 1947 US Army "Teletypewriter Circuits and Equipment" [TM 11-680 - 16 MB pdf](#) - *thanks to Google Books*
- 1967 US Navy "Principles of Telegraphy (Teletypewriter)" [NAVSHIPS 0967-255-0010 - 33MB pdf](#) - *thanks to Don K9TTY*
 - diagram [Page B-27](#), diagram [page F-11](#)
- 1961 US Navy Teletype, Facsimile, and Associated Equipment - [1961 NAVSHIPS 93434\(A\) download 7.5MB pdf](#)
 - *Index of USN TTY gear with cross reference to Teletype model, etc.*
- 1971 Government Nomenclature of Teletype Corporation Sets - [Download 13 MB pdf](#)
 - *Description and component listing of sets (info is probably incorporated in 1977 Index)*
- 1977 US Navy Teletypewriter, Facsimile, and Associated Equipment (1977) - [Navelex 0967-LP-104-0010 - Index & Download](#)
 - *Index of USN TTY gear with cross reference to Teletype model, manuals, etc. - thanks to Jerry Murphy*

With many many additions thanks to Jim Haynes (/manuals/jh/)

Contents Abbreviations:

- | | |
|---|-----------------------------------|
| • A - Adjustment | • DR - Disassembly and Reassembly |
| • M - Complete Technical Manual | • L - Lubrication |
| • T - Theory or Principles of Operation | • OM - Operator's Manual |
| • D - Description & Use | • TS - Trouble Shooting |
| • P - Parts List | • WD - Wiring Diagrams |
| • I - Installation | • S - Servicing |

• MA - Maintenance

• - - means unsure, probably M

| Publication | Note | Contents | Download | Equipment - Abbreviations denote the Teletype Unit Code Prefix or Special Features |
|---|------|----------|--|---|
| Teletype Corp. Manuals & Bulletins - (later Bulletins were composed of relevant BSP publications listed below) | | | | |
| ERRATA | - | errata | link | change sheets xxxEE for misc. bulletins |
| 5MA (9/42) | xx | M | index | M19 Set Manual - contains 144B, 138B, 1094B, 166B, 1090B, 1986WD, 120B, 1044B, 141B, 1109B, 1883WD, 1077WD, 1794WD, 1795WD, 5288S, 5017S, 5269S - this link also includes pages not contained in separate bulletins |
| 6MA (3/41) | - | M | index | M17 Radio Printer System Manual - includes 5226S, 5288S, 2036WD, 1902WD, 2039WD, 167B, 1093B, 103B, 1018B, 2004WD, 5186S, 2012WD, 5286S, 5287S |
| 9MA (6/45) | x | M | index | M14 Perforator Set Manual - includes 5379S, 167B, 1093B, 1987WD, 5288S, 1077B, 2051WD, 5267S, 5301S - this link also includes pages not contained in separate bulletins |
| 11MA (4/44) (TM 11-352) | xx | M | link | M15 Printer Sets Manual - Army TG-7A, TG-7B, & TG-37B Printers- includes 5345S, 5341S, 5408S, 144B, 138B, 1110B, 2076WD, 2159WD, 2217WD, 5288S, 5346S, 5404S, 5469S |
| 29MA (10/42) | - | M | index | M15, M19, M14 Set Instruction Manual - includes 5381S, 5380S, 5017S, 144B, 138B, 1094B, 166B, 1090B, 1986WD, 120B, 1044B, 141B, 1109B, 2084WD, 5288S, 162B, 147B, 1080B, 2075WD, 1077B, 5187S, 3031WD, 1794WD, 1795WD, 5270S, 5273S, 5237S, 5316S, 5269S, 5299S |
| 38MA (2/44) | - | M | index | Army Reperforator-Transmitter Set TG-26A & TG-27A Manual - includes 5448S, 172B, 165B, 2186WD, 2202WD, 141B, 2215WD, 2197WD, 1117B, 5288S, 2282WD |
| 45MA (10/51) | - | M | index , misc | M19 Page Printer Set Instruction Manual (NAVSHIPS 67243) - includes 5475S, 5288S, 144B, 138B, 1094B, 166B, 1090B, 1620WD, 2143WD, 2386WD, 120B, 1044B, 141B, 1109B, 2084WD, 1077B, 2161WD, 2162WD, 5269S, 5387S, 5472S - this link includes pages not contained in separate bulletins |
| 52MA (5/51) | - | M | index | Signal Distortion Test Set Instruction Manual - includes 18B, 1113B, 1954WD, 2403WD, 5288S |
| 61MA | - | M | no link | M14 Typing Reperforator Manual - includes 165B, 172B, 1088B, 120B, 1044B, 1077B, wiring diagrams |
| 66MA (11/45) | x | M | no link | M14 Perforator Manual - contains 167B, 1093B, 1987WD, |
| 78MA (1948) | xx | M | to be scanned | Sequential Control (SECO) System Manual - contains, 120B, 1044B, 1141B, 5565S, 5288S, 2453WD, 2455WD, 2456WD, 2460WD, 2462WD, 2463WD, 2464WD, 2468WD, 2473WD, 2474WD, 2514WD, 2524WD |
| 99MA (1953) | x | M | no link | 28 Printer Sets (KSR, RO) Manual (USAF format) - contains Description, Theory, Installation, Operation, Operator's Maintenance, Preventative Maintenance, Corrective Maintenance, Parts List |
| 325-054 | - | M | link | Dataspeed 40/4 Synchronous Terminal |
| 325-068 | - | M | link | Dataspeed 40 RO Integrated Synchronous Terminal |
| 325-073 | - | M | link | Dataspeed 40 Terminals Service Manual |
| 325-074 | - | M | no link | 43 Teleprinter Service Manual - Basic and Buffered (replaced by 325-078) |
| 325-077 (1982) | - | M | link | Dataspeed 40/2 Teletypewriter Compatible Terminals Service Manual |
| 325-078 (1982) | x | M | no link | 43 Teleprinter Service Manual - Basic and Buffered including Paper Tape Unit |
| 103B (10/38) | - | A | link | Transmitter Unit Adjustments, for transmitters with one pair of magnets |
| 108B | - | D, A, L | link | Five Unit Tape Perforator |
| 109B (4/26) | - | D | link | 12 Type Bar Page Printer, Model 12 Description |
| 110B | - | A | link | 12 Type Bar Page Printer, Model 12 Adjustments |
| 111B | - | - | link , link , link , link | Morkrum Multiplex Printing Telegraph System |
| 112B | - | D, WD | link , link , link | Morkrum Multiplex Printing Telegraph System |

| | | | | |
|--------------|---|------|--|---|
| 113B | - | A | no link | Transmitter Unit Adjustments, for transmitters with two pairs of magnets |
| 116B | - | - | no link | Automatic Speed Control - Transmitting and Receiving Distributors |
| 118B | - | A | no link | Care and Adjustment of Teletype Polar Relays |
| 120B | - | A | link , link , link | Polar Relays, Care and Adjustment (<i>thanks to Don House</i>) |
| 121B | - | A | no link | Multiplex Auto Control Relay Adjustments (for units using two relays) |
| 125B | x | D, A | link | Wheatstone Tape Perforator, Description & Adjustments (1937) - <i>thanks to Tom Tillson</i> |
| 126B (12/31) | - | D | link | Description, Type Bar Tape Printer, Model 14 |
| 127B (9/46) | - | A | link | Adjustments, Type Bar Tape Printer, Model 14 |
| 127B (8/59) | - | A | link | Adjustments, Type Bar Tape Printer, Model 14 FP, FB, FK |
| 136B | - | D, A | link | Description and Adjustments, Typewheel Tape Printer (Ticker) |
| 137B | - | D, A | link | Description and Adjustments, Typewheel Tape Printer (Ticker) - Serial numbers above 1000 (Model 23?) |
| 138B (10/44) | - | A | link | Adjustments, Type Bar Page Printer, Model 15 |
| 138B (1/58) | - | A | link | Adjustments, Type Bar Page Printer, Model 15 |
| 138B (2/64) | - | A | link | Adjustments, Type Bar Page Printer, Model 15 and Model 20 - supersedes 160B |
| 139B | - | D, A | link | Description and Adjustments, Multiplex Tape Printer (W.U. 21-A) |
| 141B (3/42) | - | D, A | link | Description and Adjustments, Transmitter Distributor |
| 141B (4/64) | - | D, A | link | Description and Adjustments, Transmitter Distributor |
| 143B (11/30) | - | D, A | link | Description & Adjustments of the Reperforator (Model 12) |
| 144B (9/44) | - | D | link , link , link | Description, Type Bar Page Printer, Model 15 |
| 145B | - | A | no link | Multiplex Auto Control Relay Adjustments (for those units using one relay) |
| 147B | - | A | link | Adjustments, Nontyping Reperforator |
| 148B (1/43) | x | D, A | link | 15 Perforator Transmitter Description and Adjustments |
| 155B (2/37) | - | D, A | link | Description and Adjustments, Start-Stop Regenerative Repeater |
| 156B | x | D | link | 24 Description of the Type Wheel Page Printer (Model 24) |
| 158B (1938) | x | D | link | 26 Description of the Type Wheel Page Printer (Model 26) |
| 159B | - | A | link | 26 Adjustments, Type Wheel Page Printer, Model 26 |
| 159B (489EE) | - | A | link | 26 Additions/Corrections to 159B |
| 160B | - | A | link | 20 Adjustments, Type Bar Page Printer, Model 20 - superseded by 138B in 1960 |
| 161B | - | D | link | 20 Description, Type Bar Page Printer, Model 20 |
| 162B | - | D | link | 14 & 20 Description, Single Magnet Reperforator, Model 14 & 20 |
| 163B | - | D, A | link | Description and Adjustments, Type Bar Tape Printer - (Multiplex 7-unit RCA code, similar to W.U. 21-A) |
| 164B | - | - | no link | Tape Perforator |
| 165B (11/59) | x | A | link | 14 Adjustments, Typing Reperforator (Model 14) - Supersedes 220B |
| 166B (5/44) | x | D, A | link | 15 Perforator Transmitter, 15 type |
| 167B (3/41) | x | D, A | link , link | GPE Description and Adjustments, Tape Perforator (Five Unit) (GPE) |
| 170B | - | - | no link | Multiple Transmitter Distributor and Base |
| 171B (9/44) | - | A | link | Typing Reperforator (FPR5H, FPR26GS) Adjustments |
| 172B (10/43) | - | D | link | 14 Description, Typing Reperforator (Model 14) |
| 175B | - | - | no link | Single Unit Transmitter and Base |
| 176B | - | - | no link | Translator Unit, Receiving Distributor and Panel |
| 178B (5/45) | - | A | link | Reperforator Transmitter Distributor (FRXD) - superseded by 203B |
| 181B (3/63) | - | M | link | Signal Distortion Test Set (DXD) |
| 182B | - | D, A | link | Description and Adjustments, Multiplex Start-Stop Extensor Set |

| | | | | |
|--------------|------|----------|--|---|
| 183B | - | - | no link | Portable Signal Distortion Test Set |
| 184B (7/44) | - | D, A | link | Portable Distortion Test Set (ED51) |
| 185B (8/44) | - | D, A | link | Multiple Transmitter Distributor and Base (MXD8, MXD9, MXB8) |
| 185B (12/59) | - | D, A | link | Multiple Transmitter Distributor and Base (MXD, MFD, MXB) |
| 186B | - | - | no link | Two Channel Start-Stop Transmitter Distributor |
| 187B (7/61) | x | D, A | link | Signal Distortion Test Set and Test Message Distributor (Code Disk Operated) (ED) |
| 188B (8/45) | - | D | link | Automatic Wheatstone Perforator Set (Baudot-to-Morse Converter) Description |
| 189B | - | - | no link | XD79 and XD95 Distributors |
| 190B | - | - | no link | ?? |
| 191B | - | - | no link | ?? |
| 192B | - | A | link | Automatic Wheatstone Perforator Set (Baudot-to-Morse Converter) Adjustments |
| 193B | - | - | no link | Reperforator Transmitter Distributor |
| 195B (9/45) | - | D, A | link | Description and Adjustments, Reversible Transmitter (X18 and X19) |
| 197B | - | - | no link | Multiple Reperforator Set |
| 198B | - | A | no link | 27 Type-Wheel Page Printer Adjustments |
| 199B | - | A | no link | Simplex-Diplex Converter Adjustments |
| 200B | - | M | link | 31 Tape Printer - also see addenda |
| 201B | - | - | no link | Sequential Control System (SECO) |
| 202B (4/48) | - | D | link | 14 Reperforator Transmitter (Model 14) (FRXD 9 & 10) Description |
| 203B (6/62) | - | - | link | Tape Perforator (or Reperforator Transmitter) (FRXD) - supersedes 178B |
| 204B | - | D, A | no link | Description and Adjustments, Sequential Selector |
| 210B | - | - | no link | Sequential Selector |
| 211B | - | - | no link | Multiple Reperforator Transmitter |
| 213B (9/52) | - | D | link , link | Description, Sequential Selector (BS6) |
| 215B | - | M | link , link , link | High Speed Tape Punch Set (BRPE, BRPEB) |
| 216B | xxx | D, T | link , link | 28 Page Printer Set (LP, LK, LB, LAC) |
| 217B (1953) | xxxx | A, L | to be scanned | 28 Page Printer Set (LP, LK, LB, LAC, LBAC, LPC) |
| 217B (3/64) | x | A, L, DR | link | 28 Page Printer Set (LP, LK, LB, LAC, LBAC, LPC) |
| 218B (10/53) | - | D, T, A | no link | Word Counter, Description, Theory of Operation, & Adjustments |
| 219B (4/53) | x | D, T | link | 14 Typing Reperforator (FPR63 & FPR64), Description and Theory of Operation |
| 220B (9/53) | - | A | no link | 14 Typing Reperforator (FPR63 & FPR64), Adjustments - superseded by 165B |
| 221B (5/53) | - | D, T | no link | Multiple Transmitter Distributor and Base (MXD26, MXD27, MXD218, MXD219) |
| 222B | - | - | no link | Monoplex |
| 225B | x | D, T | to be scanned | 28 RO Printer Set (Stunt Box C.A.A.) |
| 226B (4/55) | x | I, A, L | link | 28 RO Printer Set (Stunt Box C.A.A.), Installation, Adjustments, & Lubrication |
| 228B | - | - | no link | Test set prototyped for Signal Corps, not produced |
| 229B | - | - | no link | Test set prototyped for Signal Corps, not produced |
| 230B (2/56) | - | - | link | Test set prototyped for Signal Corps, not produced - TS-799/UGM-1 |
| 231B (3/56) | - | D, T | no link | 28 Typing Reperforator, Description & Theory of Operation |
| 232B (3/56) | - | A, L | no link | 28 Typing Reperforator, Adjustments & Lubrication |
| 233B (1/56) | - | M | no link | Multiplex Set AN/UGC-1(XN-1), Description, Operation, & Maintenance |
| 234B (10/63) | x | M | link | 28 Multiple Wire Distributor (LD) |
| 235B (8/58) | xx | A, L | link | 28 Transmitter Distributor Adjustments & Lubrication |

| | | | | |
|--------------|---------|-------------|-----------------------|---|
| | | | | (LXD, LXDB, LXDC) |
| 235B (9/63) | x | A, L | link | 28 Transmitter & Transmitter Distributor Adjustments & Lubrication (LX, LXD, LXDB, LXDC, LMXB) |
| 235B (1968) | x | A L, D, T | link | 28 Transmitter & Transmitter Distributor Manual (LX, LXD, LXDB, LXDC, LMXB) |
| 236B (9/56) | - | A,L | no link | 28 Sequential Selector, Adjustments & Lubrication |
| 237B (8/56) | - | D, T | no link | 28 Printer Set (Rack Mounted), Description & Theory of Operation |
| 238B (8/56) | - | A, L | no link | 28 Printer Set (Rack Mounted), adjustments & Lubrication |
| 239B (7/56) | - | M | no link | High Speed Page Printer Set AN/FGC-36 |
| 242B | - | D, T | link | 28 Transmitter Distributor (LBXD, LBXB, LBXC) (Multi-Contact-Fixed Head) |
| 243B | x | A, L | link | 28 Transmitter Distributor (LBXD, LBXB, LMXB, LCXB, LBAC) (Multi-Contact Fixed Head) |
| 244B | - | D, T | link | 28 Multi-Magnet Reperforator (LARP, LARB) |
| 245B | - | A, L | link | 28 Multi-Magnet Reperforator (LARP, LARB) |
| 246B (11/58) | x | D, T | link | 28 Typing Reperforator Sets (LPR, LRB, LRC, LT) |
| 246B (2/64) | x | D, T | link | 28 Typing Reperforator Sets Change 1 (LPR, LRB, LRC, LT) |
| 246B (5/70) | x | D, T | index | 28 Typing Reperforator Sets Change 2 |
| 247B | xxxxxxx | A, L | link | 28 Typing Reperforator and Tape Printer Sets (LPR, LRB, LRC, LT, LTP, LTRK, LMRB, LBAC) |
| 248B | x | A, L | link | 28 Tape Handling Stand and Reperforator Transmitter Base (LTHS, LRXB, LBAC) |
| 249B (8/58) | xxx | D, T | link | 28 ASR Perforator Transmitter (LAK, LPE, LCXB, LAAC) (Units Peculiar to ASR Sets) |
| 249B (9/67) | xxx | D, T | link | 28 ASR Perforator Transmitter (LAK, LPE, LTPE, LCXB, LRB, LAAC) (Units Peculiar to ASR Sets) |
| 250B (10/58) | xx | A, L | link | 28 ASR Perforator Transmitter (LAK, LPE, LAAC, LTPE) (Units Peculiar to ASR Sets) Change 1 |
| 250B (6/62) | - | A, L | link | 28 ASR Perforator Transmitter (LAK, LPE, LAAC, LTPE) (Units Peculiar to ASR Sets) Change 3 |
| 250B (6/68) | xxx | A, L, DR, D | index | 28 ASR Perforator transmitter (LAK, LPE, LTPE, LCXB, LRB, LAAC) (Units Peculiar to ASR Sets) Change 6 |
| 251B | x | D, T | link | M28 Transmitter Distributor (LAXD) (Pivoted Head, Multi-Contact) |
| 252B (3/58) | xx | A, L | link | M28 Transmitter Distributor (LAXD) (Pivoted Head, Multi-Contact) |
| 252B (11/68) | xx | A, L | link | M28 Transmitter Distributor (LAXD) (Pivoted Head, Multi-Contact) |
| 253B | xx | D, T | link | M28 Transmitter Distributor (LCXD) (Pivoted and Fixed Head, Multi-Contact) |
| 254B | x | A, L | link | M28 Transmitter Distributor (LCXD) (Pivoted and Fixed Head, Multi-Contact) |
| 255B | - | D, T | no link | M28 Non-Typing Reperforator (LRPE) |
| 256B | x | A, L | link | M28 Non-Typing Reperforator (LRPE) |
| 257B (9/60) | - | M | no link | M28 Tape Splicer (LTS) Manual |
| 258B (7/59) | xxx | D, T | link | M28 Transmitter Distributor (LXD, LXDB, LXDC) - Superseded by 235B |
| 259B (12/59) | - | D, A | link | Polar Relay (33RY and 34RY), Description & Adjustments |
| 260B (9/58) | - | M | no link | M28 lightweight KSR - TT-190/TGC - please send email if you have one |
| 261B (7/61) | xx | D, T, M, P | link | Stroboscopic Test Set (LSS) |
| 262B (12/61) | - | M | no link | M28 lightweight KSR - TT-242/UG Model B vol 1, 2 |
| 263B (11/59) | - | M | no link | TH200 Four channel transistor multiplex terminal equipment |
| 264B (4/59) | - | M | no link | RLCU200 Routing line control unit |
| 265B | - | M | no link | AN/UGC-3 16 channel time division multiplex terminal equipment |
| 266B | - | M | no link | AN/UGA-1 terminal equipment |
| 267B | - | M | no link | Tape Reader Set (CX) |

| | | | | |
|--------------|----|------|--|--|
| 268B | - | M | no link | FAA Automatic Data Interchange System (ADIS) Vol 1 |
| 269B (1961) | - | M | link | 28 Projector Set Manual |
| 270B Vol. 1 | x | M | to be scanned | 28 TTY Sets CRITICOMM (ASR, KSR, RO) NAVSHIPS 0967-LP-972-7010 (93788 vol 1) |
| 270B Vol. 2 | x | P | to be scanned | 28 TTY Sets CRITICOMM (ASR, KSR, RO) NAVSHIPS 0967-LP-972-7020 (93788 vol 2) |
| 270B Vol. 3 | xx | WD | to be scanned | 28 TTY Sets CRITICOMM (ASR, KSR, RO) NAVSHIPS 0967-LP-972-7030 (93788 vol 3) |
| 271B Vol. 1 | x | M | to be scanned | 28 RT Sets and Tape Relay Equipment Groups (Transmitting, Monitoring, Receiving) - CRITICOMM NAVSHIPS 93789 v1 |
| 271B Vol. 2 | x | P | to be scanned | 28 RT Sets and Tape Relay Equipment Groups (Transmitting, Monitoring, Receiving) - CRITICOMM NAVSHIPS 93789 v2 |
| 271B Vol. 3 | x | WD | to be scanned | 28 RT Sets and Tape Relay Equipment Groups (Transmitting, Monitoring, Receiving) - CRITICOMM NAVSHIPS 93789 v3 |
| 272B | - | M | no link | 28 and 35 Answer Back Unit (LABD) |
| 273B Vol. 1 | - | M | link , link | 32 and 33 - Superseded by 309B Vol. 1 (M32) Superseded by 310B Vol. 1 (M33) |
| 273B Vol. 2 | - | M | link , link | 32 and 33 - Superseded by 309B Vol. 2 (M32) Superseded by 310B Vol. 2 (M33) |
| 275B Vol. 1 | x | M | link | 28 Torn Tape System Technical Manual - NAVSHIPS 94158 v1 |
| 275B Vol. 2 | x | WD | to be scanned | 28 Torn Tape System Wiring Diagrams - NAVSHIPS 94158 v2 |
| 276B (10/62) | - | M | link | 28 Receiving Selector Set (LRS) |
| 277B | - | M | no link | FAA B Data Interchange System BDIS Vol 2 - Operation & Maintenance |
| 279B | - | M | link | High Speed Tape Punch (DRPE) |
| 280B Vol. 1 | - | M | link | 35 Page Printer Set (ASR) |
| 280B Vol. 2 | - | M | link | 35 Page Printer Set (ASR) |
| 281B Vol. 1 | - | M | link , link | 35 Page Printer Set (KSR, RO) |
| 281B Vol. 2 | - | M | link , link , link | 35 Page Printer Set (KSR, RO) |
| 282B | - | M | link | 35 Receive-Only Typing Reperforator (LPR, LRB, LRC, LT) |
| 283B | - | M | index | 28 & 35 Keyboard Tape Punch (LKPE, LKTP, LKPC) |
| 284B | x | M | link | 28 Compact KSR & RO Sets (NAVSHIPS 0967-059-9010) |
| 284B/RF | - | M | no link | 28 Compact KSR & RO Sets - TEMPEST version (NAVSHIPS 0967-059-9030) |
| 285B Vol. 1 | - | M | link | High Speed Tape to Tape System (TYPE 1 and 2) |
| 285B Vol. 2 | - | WD | no link | High Speed Tape to Tape System (TYPE 1 and 2) |
| 286B | - | M | no link | Data Analysis of Reorder Traps Dart System |
| 287B Vol. 1 | - | M | link | 35 Data Communications Set (ASR) |
| 287B Vol. 2 | - | M | link | 35 Data Communications Set (ASR) |
| 288B (7/64) | - | M | link | 28 Tape Printer (Stock Ticker) (LP, LB, LPC, LMU) |
| 289B | - | M | link | 32 and 33 Self-Contained Keyboard (UK) |
| 290B | - | M | link | 35 Transmitter Distributor Set (LXD, LXDB, LBXD) |
| 291B | - | M | no link | 35 Automatic Send-Receive Set (Circuit Switching) (ASR) |
| 292B Vol. 1 | - | M | no link | Telespeed Tape to Tape System (TYPE 5) |
| 292B Vol. 2 | - | WD | no link | Telespeed Tape to Tape System (TYPE 5) |
| 293B | - | M | no link | Selector Magnet Drivers |
| 294B | - | M | no link | 28 and 35 Multi-Magnet Non-Typing Reperforator Set (LARP) (Early Design M28 Covered by 244B and 235B) |
| 295B (early) | xx | M, P | to be scanned | Motor Units (MU, LMU, YMU) |
| 295B (12/70) | x | M, P | link | Motor Units (MU, LMU, YMU) |
| 296B | - | M | no link | 35 Multiple Wire Distributor |

| | | | | |
|--------------------|---|-------------------------|---|--|
| 297B (Preliminary) | - | M | no link | Discrete Calling Generator (DCG) |
| 298B | - | M | no link | 28 Keyboard Send-Receive (KSR) and Receive-Only (RO) Teletypewriter Sets TT-470/UG and TT-471/UG |
| 299B | - | M | no link | 24-Hour Timer |
| 300B | - | M | no link | 35 Data Preparation Set |
| 301B | - | D, T, A, L, DR | no link | High Speed Tape Reader (DX Type) |
| 302B Vol. 1 | - | M | link | Master and Supplementary High Speed Tape Sender and High Speed Tape Receiver for the Multiple Address Processing System (MAPS) |
| 302B Vol. 2 | - | WD | no link | MAPS Tape Sender |
| 302B Vol. 3 | - | WD | link | MAPS Tape Sender & Receiver |
| 302B/RF Vol. 4 | - | M | link | MAPS Sender & Receiver with RFI Features |
| 302B/RF Vol. 5 | - | WD | no link | MAPS Sender with RFI Features |
| 303B | - | M, A, D, DR, I, L, P, T | no link | 32TAM Receive-Only (RO) Teletypewriter Set |
| 306B | - | M | link | 35 "CARDATA" Reader (LEXD) and Feeder (EPCF) |
| 307B Vol. 1 | - | M | no link | "TELESPEED" Tape-to-Tape Systems with Error Detection and Correction - Type 4 Sender |
| 307B Vol. 2 | - | WD | no link | "TELESPEED" Tape-to-Tape Systems with Error Detection and Correction - Type 4 Sender |
| 308B Vol. 1 | - | M | no link | "TELESPEED" Tape-to-Tape Systems with Error Detection and Correction - Type 4 Receiver |
| 308B Vol. 2 | - | WD | no link | "TELESPEED" Tape-to-Tape Systems with Error Detection and Correction - Type 4 Receiver |
| 309B Vol. 1 | - | D, I, L, T, DR | link , link | 32 Teletype Sets (KSR, RO, ASR) |
| 309B Vol. 2 | - | A | link | 32 Teletype Sets (KSR, RO, ASR) |
| 310B Vol. 1 | - | D, I, L, T, DR | link , link | 33 Teletype Sets (KSR, RO, ASR) |
| 310B Vol. 2 | - | A | link , link | 33 Teletype Sets (KSR, RO, ASR) |
| 311B Vol. 1 | x | M, WD | index | 28 KSR & RO (NAVSHIPS 0967-173-7010) |
| 311B Vol. 2 | x | P | to be scanned | 28 KSR & RO (NAVSHIPS 0967-173-7020) |
| 311B/RF Vol. 3 | - | D, I, T, P | link , link | 28 KSR & RO w/ RFI (NAVSHIPS 0967-173-7030) |
| 311B/RF Vol. 4 | x | WD | to be scanned | 28 KSR & RO w/RFI (NAVSHIPS 0967-173-7040) |
| 312B Vol. 1 | x | D, T, WD | to be scanned | 28 ASR (NAVSHIPS 0967-173-6010) 1967 |
| 312B Vol. 2 | x | A, L | to be scanned | 28 ASR (NAVSHIPS 0967-173-6020) 1967 |
| 312B Vol. 3 | x | P | to be scanned | 28 ASR (NAVSHIPS 0967-173-6030) 1967 |
| 312B/RF Vol. 4 | - | P | no link | 28 ASR w/RFI (NAVSHIPS 0967-173-6040) |
| 312B/RF Vol. 5 | - | WD | no link | 28 ASR w/RFI (NAVSHIPS 0967-173-6050) |
| 314B | - | M | link | 28 Manual Message Address Segregator VSL578 |
| 316B | - | - | no link | 37 Receive-Only Set for Switched Network Service |
| 317B Vol. 1 | - | D, I, T | no link | 37 KYBD Send-Receive (KSR) Set for Switched Network Service |
| 317B Vol. 2 | - | MA | no link | 37 KYBD Send-Receive (KSR) Set for Switched Network Service |
| 318B Vol. 1 | - | D, I, T | no link | 37 Auto. Send-Receive (ASR) Set for Switched Network Service |
| 318B Vol. 2 | - | A, TS | no link | 37 Auto. Send-Receive (ASR) Set for Switched Network Service |

| | | | | |
|---|---|----------------|---|--|
| 318B Vol. 3 | - | L, D&R | no link | 37 Auto. Send-Receive (ASR) Set for Switched Network Service |
| 319B | - | M | no link | High Speed Tape Receiver Sets (DRPE Type) |
| 320B | - | - | no link | 35 Keyboard Send Receive Tape Printer Set |
| 321B Vol. 1 | - | D, T, I, L, DR | no link | 28 Trans-Distr Set (Single Contact LXD) (NAVSHIPS 0967-173-8010) |
| 321B Vol. 2 | - | A, P | no link | 28 Trans-Distr Set (Single Contact LXD) (NAVSHIPS 0967-173-8020) |
| 321B/RF Vol. 3 | - | D, P, WD | no link | 28 Trans-Distr Set (Single Contact LXD) (NAVSHIPS 0967-173-8030) |
| 322B/RF Vol. 3 | - | D, P, WD | no link | 28 Reperf. & Tape Printer Sets (NAVSHIPS 0967-173-9030) |
| 326B Vol. 1 | - | M | no link | 28 Torn Tape System Technical Manual (NAVSHIPS 0967-375-6010) |
| 326B Vol. 2 | - | WD | no link | 28 Torn Tape System Wiring Diagrams (NAVSHIPS 0967-375-6020) |
| 326B Vol. 3 | x | P | to be scanned | 28 Torn Tape System Parts (NAVSHIPS 0967-375-6030) |
| 326B/RF Vol. 4 | - | ? | no link | 28 Torn Tape System (TEMPEST) (NAVSHIPS 0967-375-6040) |
| 326B/RF Vol. 5 | - | ? | no link | 28 Torn Tape System (TEMPEST) (NAVSHIPS 0967-375-6050) |
| 327B | - | M | link | 2101AA Inktronic Page Printer (RO) |
| 333B | - | M | no link | SA140 Station Controller Using 8A1/8B1 Type Operation |
| 334B | - | - | no link | 37 Receive-Only (RO) Typing Reperforator Set (ROTR) |
| 335B/RF | - | M | no link | Radio Frequency Interference (RFI) Suppression for 37 Teletypewriter Equipment |
| 337B/RF Vol. 1 | - | D & I | no link | 37 Keyboard Send-Receive (KSR) with RFI Suppression (NAVELEX 0967-428-4010) |
| 337B/RF Vol. 2 | - | TS, DR, A, L | no link | 37 Keyboard Send-Receive (KSR) with RFI Suppression (NAVELEX 0967-428-4010) |
| 337B/RF Vol. 3 | - | WD | no link | 37 Keyboard Send-Receive (KSR) with RFI Suppression (NAVELEX 0967-428-4010) |
| 337B/RF Vol. 4 | - | P | no link | 37 Keyboard Send-Receive (KSR) with RFI Suppression (NAVELEX 0967-428-4010) |
| 338B/RF Vol. 1 | - | D & I | no link | 37 Automatic Send-Receive (ASR) with RFI Suppression (NAVELEX 0967-428-5010) |
| 338B/RF Vol. 2 | - | TS, DR, A, L | no link | 37 Automatic Send-Receive (ASR) with RFI Suppression (NAVELEX 0967-428-5020) |
| 338B/RF Vol. 3 | - | WD | no link | 37 Automatic Send-Receive (ASR) with RFI Suppression (NAVELEX 0967-428-5030) |
| 338B/RF Vol. 4 | - | P | no link | 37 Automatic Send-Receive (ASR) with RFI Suppression (NAVELEX 0967-428-5040) |
| 340B | - | - | no link | SA140 Station Controller Using Centralized Operation |
| 341B | - | I, S | no link | 38 ASR, KSR and RO Teletypewriter Sets |
| 342B | - | OM | no link | 38 ASR, KSR and RO Teletypewriter Sets |
| 343B Vol. 1 | - | M | link , link | 38 Automatic Send-Receive (ASR) Set |
| 343B Vol. 2 | - | A | link , link | 38 Automatic Send-Receive (ASR) Set |
| 343B Vol. 3 | - | P | no link | 38 Automatic Send-Receive (ASR) Set |
| 344B Vol. 1 | - | M | no link | 38 Keyboard Send-Receive (KSR) and Receive- Only (RO) Sets |
| 344B Vol. 2 | - | A | no link | 38 Keyboard Send-Receive (KSR) and Receive- Only (RO) Sets |
| 344B Vol. 3 | - | P | no link | 38 Keyboard Send-Receive (KSR) and Receive- Only (RO) Sets |
| 345B | - | - | no link | Magnetic Tape Sets |
| <i>Note: change from B Bulletin to M Manual</i> | | | | |
| 346M | - | - | no link | Model 40/1,2 and 3 Keyboard Display |
| 350M | - | - | no link | 40/4 Keyboard Display with Typewriter Style Keyboard |
| 351M | - | - | no link | Synchronous 40/4 Mini- & Maxi-Cluster Station Arrangements |
| 352M | - | - | no link | 40 Shop Manual |

| | | | | |
|------|---|------|---|--|
| 353M | - | - | no link | 40 (Tempest) KDP, KD, KP, and ROP Sets (80 Col. F.F. & T.F.) |
| 354M | - | OM | no link | 40 (Tempest) KDP, KD, KP and ROP Sets (80 & 132 Col. F.F. & T.F.) Operators Manual |
| 355M | - | S | no link | 40 Printer Shop Manual |
| 356M | - | - | no link | 32/38 Printer - Right to Left |
| 358M | - | - | no link | 40 (Tempest) RO Printer Set (132 Col. T.F.) |
| 359M | - | - | link | 40 (Tempest) Shop Manual (Includes 355M) |
| 360M | - | - | no link | Integrated Asynchronous Model 40 ROP Station |
| 362M | - | OM | no link | 40 (Tempest) ASR Set KDPM, Operators Manual |
| 363M | - | I, S | no link | 40 (Tempest) ASR Set KDPM Installation & Servicing |
| 364M | - | OM | link | How to Operate Model 40 Printer |
| 367M | - | OM | link , link | 43 Teleprinter for Basic KSR Terminals, Operators Manual |
| 368M | - | I, S | link , link | 43 Teleprinter Basic KSR Installation and Servicing Manual |
| 369M | - | S | no link | 43 Teleprinter for Basic KSR Terminals, Service |
| 370M | - | - | no link | 40 (Tempest) Dual ASR |
| 372M | - | OM | link , link | 43 Teleprinter RO Operators Manual |
| 373M | - | I, S | link | 43 Teleprinter RO Installation & Service |
| 377M | - | - | no link | 40 Keyboard Display with Internal Numeric Cluster Keyboard |
| 384M | - | - | no link | 40/4 Single Display Station Arrangement |
| 385M | - | WD | no link | 43 Teleprinter Circuit Diagrams |
| 386M | - | OM | no link | 43 Teleprinter Buffered KSR Terminals (Full-Duplex Batch and S/R) Operators Manual |
| 387M | - | I, S | no link | 43 Teleprinter for Pedestal Based Buffered KSR Terminals, Installation & Service |
| 388M | - | - | no link | 40 Option Guide |
| 389M | - | - | no link | Integrated Synchronous M40 ROP Station |
| 391M | - | M | link | 43 Teleprinter Repair Manual |
| 392M | - | - | no link | Synchronous Model 40/4 Single Display Station Arrangements |
| 393M | - | I | no link | 40/1 KDP, KD and ROP Sets and Stations, Installation |
| 394M | - | I | no link | 40/2 KDP, KD and ROP Sets and Stations, Installation |
| 395M | - | I | link | Model 40/3 Sets & Stations with 9140 Station Controller Installation Manual |
| 396M | - | - | no link | 40/0 and 40/1 KDP, KD and ROP Sets and Stations |
| 397M | - | - | no link | 40/2 KDP, KD and ROP Sets and Stations |
| 399M | - | - | no link | 40 Printers |
| 400M | - | - | no link | 40 Operator Consoles |
| 401M | - | - | no link | 40 Display Monitor |
| 402M | - | - | no link | 40 Power Supply |
| 403M | - | - | no link | 40 Cabinets, Paper Winders and Facilities |
| 404M | - | - | no link | Tempest M40/8B ASR with Cassettes, Installation |
| 405M | - | OM | no link | Tempest M40/8B ASR with Cassettes, Operator Manual |
| 406M | - | - | no link | 43 Teleprinter Buffered KSR Terminal |
| 407M | - | - | no link | 43 Teleprinter Registration Instructions |
| 408M | - | S | no link | Tempest 40/8B ASR with Cassettes, Service |
| 413M | - | OM | no link | Tempest 40/8C Terminals, Operator Manual |
| 414M | - | I | no link | Tempest 40/8C Terminals, Installation |
| 415M | - | S | no link | Tempest 40/8C Terminals, Service |
| 416M | - | - | no link | Product Support Manual for 42/43 and 45-30CPS Character Printer Terminals |
| 417M | - | OM | no link | 40 Forms Access Printer, Operator Manual |

| | | | | |
|------|---|------|----------------------|--|
| 419M | - | - | no link | 43 Teleprinter Test Arrangement CP10.002.000 |
| 420M | - | OM | no link | 42/43 Paper Tape Unit - Paper Tape Punch and Reader for ASR Teleprinter - Operators Manual |
| 421M | - | I, S | no link | 42/43 Paper Tape Unit - Paper Tape Punch and Reader for ASR Teleprinter - Installation & Service |
| 422M | - | S | no link | 42/43 Paper Tape Unit - Paper Tape Punch and Reader for ASR Teleprinter - Service |
| 423M | - | OM | no link | 42 Teleprinter (Pedestal Based) Buffered Telex KSR and ASR, Operators Manual |
| 424M | - | I, S | no link | 42 Teleprinter (Pedestal Based) Buffered Telex KSR and ASR Terminals, Installation & Routine Service |
| 425M | - | S | no link | 42 Teleprinter Pedestal Based and Table Top Buffered Telex KSR and ASR, Service Manual |
| 426M | - | I | link | Model 40 Type Printers, Installation |
| 427M | - | OM | no link | Tempest 40/8D ASR with Cassettes, Operators Manual |
| 428M | - | I | no link | Tempest Synchronous 40/8D ASR With Cassettes, Installation |
| 430M | - | OM | no link | 43 Teleprinter Buffered KSR Terminals (Half-Duplex Batch Only) Operators Manual |
| 431M | - | OM | no link | 4540KD with Typewriter Style Keyboard, Operators Manual |
| 432M | - | OM | no link | 4540KC with Internal Numeric Cluster Keyboard, Operators |
| 433M | - | OM | no link | 4500 Line Printer, Operators |
| 434M | - | OM | no link | Tempest 40/8 Dual ASR with Memory System, Operators |
| 435M | - | I | no link | Tempest 40/8 Dual ASR with Memory System, Installation |
| 436M | - | S | no link | Tempest 40/8 dual ASR with Flexible Diskette Drives, Service |
| 437M | - | I, S | no link | Synchronous 4540 Clustered Station Arrangements, Installation & Routine Service |
| 438M | - | S | no link | 4540 Remote Clustered Station Arrangements, Service |
| 441M | - | OM | no link | 43 Teleprinter Basic 8-Level ASR, Operators |
| 442M | - | S | no link | 42 and 43 Paper Tape Unit, Repair |
| 445M | - | OM | no link | Tempest Model 40/8A Ruggedized Rack Mounted, Operators |
| 446M | - | OM | no link | Tempest Model 40/8B ASR Ruggedized Rack Mounted, Operators |
| 447M | - | I | no link | Tempest Model 40/8A Ruggedized Rack Mounted, Installation |
| 448M | - | S | no link | Tempest Model 40/8A Ruggedized Rack Mounted, Service |
| 449M | - | I | no link | Tempest Model 40/8B ASR Ruggedized Rack Mounted with Cassette Drives, Installation |
| 450M | - | S | no link | Tempest Model 40/8B ASR with Cassette Drives, Ruggedized Rack Mounted, Service |
| 451M | - | I, S | no link | The 43 Teleprinter Tabletop Buffered KSR Terminal, Installation & Routine Service |
| 452M | - | - | no link | 4540 Station Status Indicators Trouble Analysis and Options |
| 453M | - | OM | no link | Asynchronous Model 4420 Keyboard Display, Operators |
| 454M | - | OM | no link | 42 Teleprinter Table Top Buffered KSR and ASR Terminal, Operators |
| 455M | - | I, S | no link | 42 Teleprinter Buffered Table Top KSR and ASR Stations, Installation & Routine Service |
| 457M | - | S | no link | 4500-Type Cabinets, Table and Facilities, Service |
| 458M | - | S | no link | 4500-Type Keyboards, Service |
| 466M | - | OM | no link | 43 Teleprinter Buffered Selective Calling for Multipoint Private Lines, Operators |
| 470M | - | OM | no link | Model 40/7 KDP w/Cassette Drives, Operators |
| 471M | - | I | no link | Model 40/7 KDP w/Cassette Drives, Installation |
| 472M | - | S | no link | Model 40/7 KDP W/Cassette Drives, Service |
| 473M | - | I | no link | Asynchronous Model 4420 KD/KDP Stations, Installation |

| | | | | |
|------|---|------|----------------------|--|
| 474M | - | S | no link | Asynchronous Model 4420 KD/KDP Stations, Maintenance |
| 476M | - | S | no link | Synchronous Model 40/4 Mini- and Maxi-Cluster Station Arrangements, Service |
| 478M | - | S | no link | 42/43 Teleprinter Buffered Tabletop Controller, Repair |
| 480M | - | OM | no link | 42 Teleprinter Buffered Selective Calling for Multipoint Private Lines, Operator |
| 481M | - | I, S | no link | 42 Teleprinter Buffered Selective Calling Terminals, Installation & repair |
| 491M | - | OM | no link | Model 40/8A ROP, KP and KP3, Operator |
| 492M | - | I | no link | Model 40/8A ROP, KP and KP3, Installation |
| 493M | - | S | link | Model 40/8A ROP, KP and KP3, Service |
| 498M | - | I, S | no link | 43 Teleprinter for Buffered Selective Calling Terminals, Installation & Routine Service |
| 499M | - | S | no link | 45 - 30CPS Auxiliary Matrix Character Printer, Service |
| 501M | - | OM | no link | 4540 Auxiliary Character Printer, Operator |
| 502M | - | I, S | no link | 4540 Auxiliary Character Printer, Installation & Routine |
| 503M | - | OM | no link | 4540 Single Display Station With Trouble Analysis and Options, Operator |
| 504M | - | I, S | no link | 4540 Single Display Station Arrangements, Installation & Routine Service |
| 505M | - | S | no link | 4540 Remote Single Display Station Arrangements, Service |
| 509M | - | OM | no link | High Speed Auxiliary Matrix Printer, Operator |
| 510M | - | I, S | no link | High Speed Auxiliary Matrix Printer, Installation & Routine Service |
| 511M | - | S | no link | High Speed Auxiliary Matrix Printer (AP200), Service |
| 513M | - | - | no link | Standard Serial Interface Technical Reference Manual |
| 514M | - | I, S | no link | 4540 Local Channel Clustered Station Arrangements, Installation & Routine Service |
| 515M | - | - | no link | 4540 Local Channel controls, Indicators, Trouble Analysis & Options - Station Manager's Manual |
| 516M | - | OM | no link | 42 Teleprinter Telex Basic KSR and ASR Supplementary Operators |
| 517M | - | OM | no link | 42 Teleprinter Telex Basic KSR and ASR Introductory Operators |
| 518M | - | I, S | no link | 42 Teleprinter Basid KSR and ASR Terminals, Installation & Routine Service |
| 522M | - | S | no link | TTL and SSI Printer Logic Cards for 42, 43 and 45-30 CPS Character Printer, Repair |
| 523M | - | S | no link | Power Supplies Used With 42, 43 and 45-30CPS Character Printers, Repair |
| 524M | - | S | no link | Model 40 Keyboard, Repair |
| 525M | - | OM | no link | 42 Teleprinter Buffered Selective Calling for Multipoint Private Line, Operators |
| 526M | - | OM | no link | Tempest Model 40/8B ASR with Cassette Drives and 403142 Modification Kit, Operators |
| 527M | - | I | no link | Tempest Model 40/8B KDP with Cassette Drives and 403142 Modification Kit, Installation |
| 529M | - | S | no link | 4500 Keyboard, Repair |
| 530M | - | S | no link | SSI Keyboards used in 42 and 43 Buffered Terminals, Repair |
| 533M | - | P | no link | 42/43 Enclosures, Paper Handling and Miscellaneous, Parts |
| 534M | - | S | no link | Interfaces, Controllers, and Modification Kit Circuit Cards Associated with 42/43 Terminals, Repair |
| 539M | - | S | no link | 42, 43 and 45 -30CPS Character Printer Mechanisms, Repair |
| 540M | - | OM | no link | Asynchronous Model 4430 Keyboard Display Buffered Selective Calling Multipoint Private Line Terminals, Operators |
| 545M | - | OM | no link | Asynchronous Model 4424 Keyboard Display, Operators |
| 546M | - | I | no link | Asynchronous Model 4424 KD/KDP Stations, Installation |
| 547M | - | S | no link | Asynchronous Model 4424 KD/KDP Stations, Service |
| 552M | - | I | no link | Asynchronous Model 4430 Keyboard-Display Buffered Selective Calling Multipoint Private Line Terminal, Installation |

| | | | | |
|------------------------|-----|------|--|---|
| 553M | - | S | no link | Asynchronous Model 4430 Keyboard Display Buffered Selective Calling Multipoint Private Line Terminal, Service |
| 554M | - | OM | no link | Asynchronous Model 4426 Keyboard Display, Operators |
| 555M | - | I | no link | Asynchronous Model 4426 KD/KDP Stations, Installation |
| 559M | - | OM | no link | Tempest Model 40/8BII KDP With Cassette Drives, Operator |
| 560M | - | I | no link | Tempest Model 40/8BII KDP With Cassette Drives, Installation |
| 561M | - | S | no link | Tempest Model 40/8BII KDP With Cassette Drives, Service |
| 564M | - | - | no link | 42 Teleprinter BSR and BASR Simplified Reference Guide |
| 566M | - | OM | no link | 42 Teleprinter Tabletop Buffered KSR and ASR with Enhanced Features - Supplementary, Operators |
| 567M | - | I, S | no link | 42 Teleprinter Buffered Tabletop BSR and BASR Station With Enhanced Features, Installation & Routine Service |
| 569M | - | OM | no link | 42 Teleprinter Buffered Selective Calling With Enhanced Features for Multipoint Private Line, Operators |
| 570M | - | - | no link | Recommended Maintenance Support Items for Model 40 Printers |
| 572M | - | - | no link | 42 Teleprinter Telex Basic KSR and ASR Simplified Reference Guide |
| 577M | - | - | no link | 43 Teleprinter BSR Simplified Reference Guide |
| Parts Bulletins | | | | |
| 1008B (7/36) | - | P | link | 12 Type Bar Page Printer (Model 12) Parts |
| 1012B (10/27) | - | P | link | Multiplex Perforator Parts |
| 1012B (9/31) | - | P | link , link | 13B and 14A Perforator Parts, Black and Green (superseded by 1093B) |
| 1014B (6/27) | - | P | link | 11 Tape Teletype (Model 11) Parts |
| 1015B (7/39) | - | P | link | 12 Keyboard and Receiver Distributor (Model 12) Parts |
| 1018B (12/30) | - | P | link | Parts, Tape Transmitter and Auto Control Relay Unit |
| 1025B (7/45) | x | P | link | Parts, WPE3 & WPE16 Wheatstone Tape Perforator (1945) - <i>thanks to Tom Tillson</i> |
| 1027B | - | P | link | 21-A Multiplex Printer Parts - <i>thanks to Duncan Brown</i> |
| 1028B (2/36) | - | P | link | 14 Type Bar Tape Printer (W.U.T. Co. Model 2 Simplex) Parts |
| 1030B (4/32) | - | P | link | 14 Type Bar Tape Teletype (standard and foreign) Parts |
| 1031B (11/40) | x | P | link | 14 Type Bar Tape Printer (Bell System) Issue 3 Parts |
| 1032B (7/39) | - | P | link | 12 Tables and Motor-Generators Parts |
| 1033B (4/28) | - | P | link | 13 Automatic Control Unit Parts |
| 1035B | - | P | link | 18 Page Teletype Parts |
| 1036B | - | P | link | Parts, Typewheel Tape Printer (Ticker), serial numbers above 1000 |
| 1037B (1/56) | xxx | P | link , link , link | 15 Type Bar Page Printer Parts |
| 1038B (12/36) | - | P | link | 12 Reperforator (Model 12) Parts |
| 1039B | - | P | link , change | Parts, Multiplex Tape Printer (W.U. Model 21-A) |
| 1041B (3/42) | - | P | link | 14 Transmitter Distributor Parts (superseded by 1095B) |
| 1043B | - | P | no link | Parts, Gumming Equipment |
| 1044B (11/40) | - | P | link , link | Line Relay (RY20, WE 215A, RY28, WE 215H, RY30, WE 255A) Parts |
| 1044B (5/52) | - | P | link | Line Relay (RY30, WE 255A) Parts |
| 1045B (6/36) | - | P | link | 12-A Reperforator Set (Including filter unit for RFI prevention) Parts |
| 1048B | - | P | link | 14 Type Bar Tape Printer (Postal) Parts |
| 1049B | - | P | no link | 14A Perforator Distributor Set Parts |
| 1052B (1/36) | - | P | link | Six Unit Perforator (MPE) Parts |
| 1063B (1/41) | - | P | link | 15 Type Bar Page Printer, Model 15 Issue 2 Parts |

| | | | | |
|---------------|-----|---|---|--|
| 1064B (1/42) | - | P | link | 14 & 20 Single Magnet Reperforator, non-typing, Parts |
| 1067B (12/42) | x | P | link | 15 Perforator Transmitter (Bell System) Parts |
| 1067B (10/60) | xxx | P | link | 15 Perforator Transmitter (PEX) Parts |
| 1072B (6/44) | xx | P | link | Regenerator Unit & Panel (RED) Parts |
| 1073B | - | P | link | 24 Type Wheel Page Printer, Model 24 Parts |
| 1074B (1/45) | xx | P | link | 26 Type Wheel Page Printer, Model 26 Parts |
| 1075B (10/59) | x | P | link | Tape Winders and Center Unwind Reels - Superseded by 570-301-800TC |
| 1077B (8/42) | x | P | link | 14, 15, 19, 20 Metal Tables (includes ESU info) - Parts |
| 1077B (9/55) | x | P | link | 14, 15, 19, 20 Metal Tables (includes ESU info) - Parts |
| 1077B (10/60) | x | P | link | 14, 15, 19, 20 Metal Tables (includes ESU info) - Parts |
| 1079B (6/47) | x | P | link | Signal Distortion Test Set (DXD1, 4,5), Motor Units (MU26, 29) |
| 1079B (7/62) | x | P | link | Signal Distortion Test Set (DXD1, 4,5), Motor Units (MU26, 29) - Superseded by 103-800-800TC |
| 1080B | - | P | link | 14 Single Magnet Reperf (non-typing) |
| 1082B (11/44) | - | P | link | 14 Typing Reperforator Parts |
| 1082B (8/57) | x | P | link | 14 Typing Reperforator Parts |
| 1086B (4/43) | - | P | link | Type Bar Tape Printer (Multiplex 7 Unit) Parts |
| 1087B | - | P | no link | Signal Distortion Test Set (ED) |
| 1088B | - | P | link | 14 Typing Reperf |
| 1090B (2/42) | x | P | link , link | 15 Perforator Transmitter - see also 21469PK |
| 1093B (3/41) | - | P | link | 13B and 14A Perforators or Perforator Parts, Black and Green Parts |
| 1094B (2/42) | - | P | link | 15 Type Bar Page Printer Parts |
| 1094B (5/43) | - | P | link | 15 Type Bar Page Printer Parts |
| 1095B (7/62) | x | P | link , link | 14 & 20 TD (XD) and 14 Distributor (ED) |
| 1096B | - | P | link | 17 Scanning Distributor Parts |
| 1100B (7/44) | x | P | link | 14 Typing Perforator (FPR5H193 & FPR26GS235) |
| 1108B (2/48) | - | P | link | 14 Reperforator-Transmitter (FRXD1, 5, 9, 10) Parts |
| 1109B (4/42) | - | P | link | Transmitter Distributor Parts |
| 1110B (1/43) | - | P | link | 15 Printer (Army TG-7A & TG-7B) |
| 1113B | - | P | link | Portable Signal Distortion Test Set (ED) |
| 1114B (9/43) | - | P | link | 15 Type Bar Page Printer Parts |
| 1115B (3/43) | - | P | link | Line Relay (RY27, WE 209FB) Parts |
| 1117B (2/44) | - | P | link | Army Reperforator Transmitters TG-26A and TG-27A (M14 Portable Sending-Receiving, Typing Reperforator, Transmitter Distributor Set), Parts |
| 1118B (1/44) | - | P | link | Message Ticketer (JP) |
| 1120B (3/44) | - | P | link | Portable Signal Distortion Test Set (Code Disc Operated) - Signal Corps TS-2/TG |
| 1123B (9/44) | - | P | link | Signal Distortion Test Set and Adapter Plate (ED, AP) |
| 1124B (4/59) | x | P | link | Maintenance Tools - Superseded by 570-005-800TC |
| 1124B (10/62) | xx | P | link | Maintenance Tools - Superseded by 570-005-800TC |
| 1125B (1/45) | - | P | no link | 14 Transmitter Distributor (XD79EZ, XD79EY, XD79EX, XD95GW) Parts |
| 1126B (3/45) | - | P | link | Reperforator Transmitter Distributor (FRXD3, FRXD4) Parts |
| 1127B (8/45) | - | P | link | Automatic Wheatstone Perforator Set (Baudot-to-Morse Converter) Parts |
| 1129B | - | P | link | Paper Winder (PW, LPW) Parts |
| 1130B | - | P | no link | ??? |
| 1131B (4/46) | - | P | link | Reversible Tape Transmitter (X18, X19) Parts |
| 1132B (4/46) | - | P | link | Perforator (EPE1), Motor (HB), Keytop (LB, Cover (C129) Parts |

| | | | | |
|---------------|--------|---|---|---|
| 1133B | - | P | no link | ??? |
| 1134B | - | P | no link | Tape Splicer Parts - Superseded by 570-300-800TC |
| 1135B | - | P | no link | ??? |
| 1136B | - | P | no link | ??? |
| 1137B (6/58) | x | P | link | 14 Multiple Transmitter Distributor (MXB, MXD, MFD) Parts |
| 1138B (12/46) | - | P | link | 27 Type-Wheel Page Printer (Signal Corps TT-4/TG) Parts |
| 1139B | - | P | link | 36 Monopulse Printer - Keyboard HK1 and Typing Unit HP1 Parts - notes |
| 1140B | - | P | link | 31 Tape Printer Parts - also see addenda |
| 1141B (1/48) | - | P | link | Sequential Control (SECO) System Parts |
| 1147B (10/52) | - | P | link | Motors - not M28 motors Parts |
| 1147B (6/60) | - | P | link | Motors - not M28 motors Parts |
| 1149B (6/53) | - | P | link | 28 Page Printer Set (KSR, RO) Parts |
| 1149B (6/65) | xxxxxx | P | link | 28 Page Printer Set (KSR, RO) Parts |
| 1149B (12/70) | - | P | index | 28 Page Printer Set (KSR, RO) Parts |
| 1150B (4/53) | - | P | no link | 14 Typing Reperforator (FPR63 & FPR 64), Parts |
| 1151B (4/53) | - | P | no link | Multiple Transmitter Distributor (MXD27, MXD27, MXD218BR, MXD219BR), Parts |
| 1152B (10/53) | - | P | no link | Word Counter, Parts |
| 1154B (6/66) | - | P | link , link , link | High Speed Tape Punch Set (BRPE, BRPEB, BRPEC, AC, LMU, TRSC, TRD) Parts |
| 1155B (4/59) | x | P | link | Universal Apparatus Cabinet (AC) Parts |
| 1158B (3/56) | - | P | no link | 28 Typing Reperforator, Parts |
| 1159B (5/61) | x | P | link | 28 Multi-Wire Distributor (LD) Parts |
| 1160B (8/56) | x | P | link | 28 Sequence Selector (LS, LSB, LMU) Parts |
| 1160B (5/61) | x | P | link | 28 Sequence Selector (LS, LSB, LMU) Parts |
| 1161B (9/58) | - | P | link | 28 Transmitter Distributor Sets (Fixed Head, Single Contact) (LXD, LXDB, LXDC) |
| 1161B (5/68) | xxxx | P | link | 28 Transmitter and Transmitter Distributor Sets (Fixed Head, Single Contact) (LX, LXD, LXDB, LMXB, LXDC, LT, LBAC) |
| 1162B (8/56) | - | P | no link | 28 Printer Set (Rack Mounted), Parts |
| 1163B (11/60) | x | P | link | BX 600 wpm Tape Reader Parts |
| 1164B (9/60) | - | P | link | Keytops and Type Pallets (All Apparatus) |
| 1165B (3/58) | x | P | link | 28 Transmitter Distributor Set (Fixed Head, Multi-contact) (LBXD, LBXB, LBXC, LMU, LMXB, LBAC, AC) |
| 1166B (3/61) | x | P | link | 28 Reperforator (Multi-Magnet) (LARP, LARB, LMU) |
| 1166B (6/61) | xx | P | index | 28 Reperforator (Multi-Magnet) (LARP, LARB, LMU, LARC) |
| 1166B (10/65) | - | P | link | 28 Reperforator (Multi-Magnet) (LARP, LARB, LMU, LARC) |
| 1167B (3/59) | xx | P | link | 28 Typing Reperforator Set (LPR, LRB, LRC, LT) |
| 1167B (3/61) | x | P | link | 28 Typing Reperforator and Tape Printer Sets (LPR & LTP) |
| 1167B (1/64) | x | P | link | 28 Typing Reperforator and Tape Printer Sets, Change 7 (LPR, LRB, LRC, LT, LTRK, LSRC, LESU, LMRB, LMU, LBAC, LTD, LTPK) |
| 1167B (3/65) | x | P | link | 28 Typing Reperforator and Tape Printer Sets, Change 8 (LPR, LRB, LRC, LT, LTRK, LSRC, LESU, LMRB, LMU, LBAC, LTD, LTPK) |
| 1167B (9/67) | x | P | link | 28 Typing Reperforator and Tape Printer Sets, Change 9 (LPR, LRB, LRC, LT, LTRK, LSRC, LESU, LMRB, LMU, LBAC, LTD, LTPK) |
| 1167B (3/72) | xxxxx | P | link (LPR only) | 28 Typing Reperforator and Tape Printer Sets, Change 14 (LPR, LRB, LRC, LT, LTRK, LSRC, LESU, LMRB, LMU, LBAC, LTD, LTPK) |
| 1168B (3/66) | xx | P | link | 28 RT Reperforator Transmitter Set, Change 6 (LTHS, LRXB, LMC, LBAC) |
| | | | | 28 ASR Automatic Send-Receive Sets, Change 8 (LAK, LPE, LCXB, LAAC, |

| | | | | |
|--|-------|---|--|--|
| 1169B (11/63) | xxxxx | P | link | LTPE, LMU, LESU, LBPC) |
| 1169B (4/75) | x | P | link | 28 ASR Automatic Send-Receive Sets, Change 18 (LAK, LPE, LCXB, LAAC, LTPE, LMU, LESU, LBPC) |
| 1170B | - | P | no link | 28 Transmitter Distributor (Pivoted Head, Multi-Contact) (LAXD) Parts Superseded by 573-127-800TC |
| 1171B (5/58) | xx | P | link | 28 Transmitter Distributor (Pivoted & Fixed Heads, Multi-contact) (LCXD) Parts - Superseded by 573-127-803TC |
| 1172B (8/66) | x | P | link | 28 and 29 Non-Typing Reperforators (LRPE) |
| 1172B (5/70) | x | P | link | 28 and 29 Non-Typing Reperforators (LRPE) |
| 1173B (5/58) | x | P | link , link | 28 Tape Splicer (LTS) |
| 1173B (7/60) | x | P | link | 28 Tape Splicer (LTS) Superseded by 570-300-801TC |
| 1174B (9/61) | - | P | link | Polar Relay (33RY, 34RY) |
| 1176B | - | P | no link | High Speed Tape Reader (CX, CXB, CXC, AC, TTSC, TTD, MU, LMU) Parts |
| 1179B (1/61) | x | P | link | Cabinets (AC) - automatic data interchange system (ADIS) parts |
| 1180B | x | P | link | 28 Torn Tape System Parts - NAVSHIPS 94158 v3 |
| 1181B | - | P | no link | 28 Codomat Set (LR, LCL, LBAC) |
| 1182B (11/61) | x | P | link | 28 Transmitter Distributor (Tape Pull-Back Type) (LFXD, LFXB) |
| 1184B (9/68) | x | P | link | 33 Page Printer Set (ASR, KSR, RO) |
| 1184B (2/71) | x | P | link , link | 33 Page Printer Set (ASR, KSR, RO) |
| 1185B (11/62) | - | P | link | 28 Receiving Selector (LRS, LRSB, LMU) |
| 1186B (2/63) | - | P | link | High Speed Reperforator (DRPE) |
| 1186B (6/67) | - | P | index | High Speed Reperforator (DRPE) |
| 1187B (4/73) | x | P | index | 35 Automatic Send-Receive Set (ASR) (LAAC, LCCU, LESU, LP, LRPE, LMU, LAK, LXD, LCXB) |
| 1188B | - | P | no link | 35 Tape Printer Sets (ROTR/KTP) (LRP, LRB, LTP, LTPK, LMU, LESU, LRC, LSRC, LT) |
| 1192B | - | P | link | Station Converter Cabinets (AC) |
| 1193B | - | P | no link | Superseded by 107-201-800TC |
| 1194B | - | P | link | Tape Printer (Stock Ticker Service) (LP, LB, LMU, LPC) |
| 1197B (11/66) | x | P | link | 28 Compact Page Printer (KSR and RO) (LP, LLB, LLK, LMU, LPC) NAVSHIPS 0967-059-9020 |
| 1199B | - | P | no link | Superseded by 574-235-800TC |
| 1201B (12/75) | x | P | link , link , link | 35 Send-Receive and Receive-Only Sets (KSR, RO) (LP, LK, LB, LESU, LCCU, LAC, LPC) |
| 1202B | - | P | no link | High Speed Tape Reader Set (DX) |
| 1203B | - | P | no link | High Speed Tape Handling Equipment (TUW, TW, TF, AC) |
| 1208B | - | P | link | High Speed Tape Sender and Receiver Sets for Multiple Address Processing Systems (MAPS) |
| 1209B | - | P | link | 37 Page Printer Set (KSR-RO) |
| 1210B (10/72) | - | P | link , link | 32 Page Printer Set (ASR, KSR, RO) |
| 1211B | - | P | link | 35 "CARDATA" Reader (LEXD) and Feeder(EPCF) |
| 1212B | - | P | link | 35 "CARDATA" Type Reperforator Send- Receive Set (LEPR) |
| 1213B | - | P | no link | 35 Data Preparation Set |
| 1214B | - | P | no link | 37 Automatic Send-Receive Set (ASR) |
| 1215B | - | P | no link | Inktronic RO Page Printer Set |
| 1216B | - | P | no link | (T.O. 31W4-4-5-1044) Manual Message Address Segregator |
| 1217B | - | P | no link | 37 Typing Reperforator (ROTR) Set |
| Bell System Practice BSP Publications - (later Bulletins were composed of relevant BSP publications listed below) | | | | |
| GPP43.671 | o | D | link | Basic Teletypewriter Reading Course - using AB documents below (Mar 1948) |

| | | | | |
|--------------------------|-----|-------|---|--|
| AB84.128 | o | D | link | 14 Tape Printers & Associated Apparatus - Description (June 1934) |
| AB84.138 | o | D | link | 14 & 20 Transmitter Distributors Description of Operation (Nov 1941) |
| AB84.139 | o | D | link | 15 Teletypewriter Description of Operation (Nov 1941) |
| AB84.140 | o | D | link | 15 Perforator Transmitter Description of Operation (Nov 1941) |
| AB84.141 | o | D | link | 26 Teletypewriter Description of Operation (Nov 1941) |
| AB84.143 | o | D | link | 14 Typing Reperforator Description of Operation (Apr 1942) |
| AB95.101 | o | D | link | Telegraph Transmission Lecture 1 - General (Aug 1938) |
| 030-360-701TC (4/62) | - | A | link | 1-Type Message Ticketer - Requirements and Adjustments |
| 030-360-801TC (12/61) | - | P | link | 1-Type Message Ticketer - Parts & Replacement Procedures |
| 103-800-100TC (7/42) | x | D | link | 1A Teletypewriter Test Set Description |
| 103-800-800TC | - | P | no link | Signal Distortion Test Set (DXD) |
| 103-804-100TC | x | D | link | 100A Teletypewriter Test Distributor Description |
| 103-813-110TC | c | M. | link | 911NA Data Test Set (thanks to Jim Haynes) |
| 103-813-111TC | c | M. | link | 911P Test Adapter (thanks to Jim Haynes) |
| 103-823-100TC (7/63) | x | D | link | 164C1 Telegraph Transmission Measuring Set Description |
| 103-823-101TC | x | D | to be scanned | 164C2 Telegraph Transmission Measuring Set Description |
| 103-823-103TC (9/62) | x | D | link | 164C3, 164C4 Telegraph Transmission Measuring Set Description |
| 107-201-800TC | - | P | no link | Signal Generator Test Set (TSG) |
| 570-000-000TC (10/80) | - | Index | link | Index to Class 570 (TTY General Information & Misc. Apparatus) |
| 570-001-901TC | - | A | link | 14, 15 Service Manual |
| 570-004-701TC | - | L | link | TTY General - Lubrication |
| 570-005-800TC (12/66) | x | P | link | Maintenance Tools (supercedes 1124B) |
| 570-005-800TC (8/77) | x | P | link , link , link | Maintenance Tools |
| 570-013-010TC | - | Index | link | TTY List of "S" Specifications |
| 570-107-0100TC | - | D, T | link | Tape Winder |
| 570-220-100TC (2/64) | xx | D, T | link | 28 Motor Units, Description & Principles of Operation, Issue 1 |
| 570-220-100TC (10/70) | - | D, T | link | 28 Motor Units, Description & Principles of Operation, Issue 4 |
| 570-220-700TC | xx | A | link | 28 Motor Units Adjustments |
| 570-220-701TC | xx | L | link | 28 Motor Units Lubrication |
| 570-220-702TC | - | DR | link | 28 Motor Units Disassembly & Reassembly |
| 570-220-800TC | xxx | P | link | 28 Motor Units Parts |
| 570-223-100TC (2/65) | x | D | link | 28 & 35 Keyboard Tape Punch (Off-Line) Description |
| 570-223-700TC (11/70) | x | A | link | 28 & 35 Keyboard Typing Tape Punch (Off-Line) Adjustments |
| 570-223-701TC (2/65) | x | L | link | 28 & 35 Keyboard Typing Tape Punch (Off-Line) Lubrication |
| 570-223-702TC (2/65) | x | DR | link | 28 & 35 Keyboard Typing Tape Punch (Off-Line) Disassembly & Reassembly |
| 570-223-800TC | | | | |

| | | | | |
|--------------------------|----|------------|---|---|
| (5/65) | x | P | link | 28 & 35 Keyboard Typing Tape Punch (Off-Line) Parts |
| 570-224-100TC | - | D, T | link | Selector Magnet Driver (TP177010) Description & Theory |
| 570-224-200TC | - | I | link | Selector Magnet Driver (TP177010) Installation |
| 570-224-300TC | - | S | link | Selector Magnet Driver (TP177010) Servicing |
| 570-224-400TC | - | WD | link | Selector Magnet Driver (TP177010) Wiring Diagram |
| 570-300-800TC | - | P | no link | Tape Splicer Parts |
| 570-300-801TC | x | P | to be scanned | 28 Tape Splicer (LTS) |
| 570-301-120TC | - | D | link | 15 Paper Winder Description |
| 570-301-220TC | - | I | link | 15 Paper Winder Installation |
| 570-301-420TC | - | WD | link | 15 Paper Winder Wiring Diagram |
| 570-301-705TC | - | D, T, A, L | link | Paper Winder (LPW300, Bell 1A) Manual |
| 570-301-720TC | - | A | link | 15 Paper Winder Adjustments |
| 570-301-800TC | x | P | link | Tape Winders (TW) and Unwinder Reels |
| 570-301-802TC | x | P | link | 28 Paper Winder (LPW) |
| 570-301-803TC | - | P | link | 15 Paper Winder (PW) Parts |
| 570-303-103TC | - | D | link | 103-Type TTY Subscriber Set Description |
| 570-303-203TC | - | I | link | 103-Type TTY Subscriber Set Installation |
| 572-202-400TC | - | WD | no link | 15 Typing Unit, Wiring Diagram |
| 572-202-700TC | - | A | no link | 15 Typing Unit, Adjustments |
| 572-202-701TC | - | L | no link | 15 Typing Unit, Lubrication |
| 572-203-400TC | - | WD | no link | 15 KSR Keyboard, Wiring Diagram |
| 572-203-700TC | - | A | no link | 15 KSR Keyboard, Adjustments |
| 572-203-701TC | - | L | no link | 15 KSR Keyboard, Lubrication |
| 572-204-400TC | - | WD | no link | 15 KSR Base, Wiring Diagram |
| 572-204-701TC | - | L | no link | 15 KSR Base, Lubrication |
| 572-205-400TC | - | WD | no link | 15 Perforator-Transmitter, Wiring Diagram |
| 572-400-100TC | - | D | link | 20 Teletypewriter (KSR, RO) Description |
| 573-000-000TC (4/65) | - | Index | link | Index to Class 573 (Model 28) BSP's |
| 573-010-500TC (10/57) | x | MA | link | 28 Teletypewriter - Maintenance Inspections & Tests |
| 573-100-000TC (5/67) | x | Cross-Ref | link | 28 RO and KSR Cross reference from Navy Designation to Teletype Corp |
| 573-100-100TC | x | D | link | 28 Send-Receive and Receive-Only Sets (KSR, RO) Description |
| 573-100-101TC | x | D | link | 28 Compact Send-Receive and Receive-Only Sets (KSR, RO) Description |
| 573-100-200TC | xx | I | link better scan | 28 Send-Receive and Receive-Only Sets (KSR, RO) Installation - Supersedes Specification 5759S |
| 573-100-201TC (4/64) | x | I | link | 28 Wall-mounted KSR and RO Installation |
| 573-100-202TC | x | I | link | 28 Compact Send-Receive and Receive-Only Sets (KSR, RO) Installation |
| 573-100-500TC | x | OM | to be scanned | 28 KSR and RO Operating test |
| 573-100-702TC (8/60) | xx | DR | link | 28 KSR and RO Disassembly & Reassembly |
| 573-100-800TC | - | - | link | 28 Page Printer Set Modification Kits (KSR/RO) |
| 573-101-100TC (5/68) | x | D, T | link | 28 ASR Description |
| 573-101-200TC | xx | I | link , link | 28 ASR Installation - Supersedes Specification 58735 |

| | | | | |
|--------------------------|-----|------|-----------------------------|--|
| (4/64) | | | | |
| 573-101-201TC | x | I | link | 28 ASR Auxiliary Reperf Installation |
| 573-101-500TC | x | OM | link | 28 ASR Operating Tests |
| 573-101-702TC | x | DR | link | 28 ASR Disassembly & Reassembly |
| 573-102-100TC | xxx | D | link | 28 KTR & ROTR, Description |
| 573-102-200TC | x | I | link | 28 KTR & ROTR, Installation |
| 573-102-702TC (4/64) | x | DR | link | 28 KTR & ROTR, Disassembly & Reassembly |
| 573-103-400TC (8/63) | x | WD | link | 28 Tape TTY Set Wiring Diagram |
| 573-104-400TC (4/64) | x | WD | link | 28 RT Stand (LTHS) and Base (LRXB) Wiring Diagrams |
| 573-104-700TC (4/64) | xx | A | link | 28 RT Stand (LTHS) and Base (LRXB) Adjustments |
| 573-104-701TC (4/64) | xx | L | link | 28 RT Stand (LTHS) and Base (LRXB) Lubrication |
| 573-104-702TC (4/64) | x | DR | link | 28 RT Stand (LTHS) and Base (LRXB) Disassembly & Reassembly |
| 573-105-100TC | x | D | to be scanned | 28 Self-Contained TD Sets Description |
| 573-105-700TC (11/63) | x | A | link | 28 Self-Contained TD Sets Adjustments |
| 573-105-701TC (2/61) | x | L | link | 28 Self-Contained TD Sets Lubrication |
| 573-105-702TC (3/61) | x | DR | link | 28 Self-Contained TD Sets Disassembly & Reassembly |
| 573-106-700TC (11/63) | x | A | link | 28 Multiple-Mounted TD Sets Adjustments |
| 573-106-701TC (4/61) | x | L | link | 28 Multiple-Mounted TD Sets Lubrication |
| 573-106-702TC (4/64) | x | DR | link | 28 Multiple-Mounted TD Sets Disassembly & Reassembly |
| 573-107-100TC | - | D | link | 28 Tape Printer Set (Stock Ticker), Description |
| 573-107-200TC | - | I, A | link | 28 Tape Printer Set (Stock Ticker), Installation & Adjustments |
| 573-108-100TC (8/65) | x | D | link | 28 Multimagnet Nontyping Reperf Description |
| 573-115-100TC | xx | D, T | link | 28 Typing Unit (LP), Description & Principles of Operation |
| 573-115-102TC (2/61) | x | D | link | 28 Stuntbody, Principles of CDC Assignments |
| 573-115-103TC (3/56) | x | D | link | 28 Stuntbody, Description & Principles of Operation |
| 573-115-200TC (5/68) | x | I | link | 28 Typing Unit Stuntbody Function Parts - Installation |
| 573-115-400TC (4/64) | x | WD | link | 28 Typing Unit Wiring Diagrams |
| 573-115-700TC | xx | A | link, ch-06 | 28 Typing Unit (LP), Adjustments |
| 573-115-701TC | xx | L | link | 28 Typing Unit (LP), Lubrication |
| 573-115-702TC | xx | DR | link | 28 Typing Unit (LP), Disassembly & Reassembly |
| 573-115-800TC | xx | P | link, link | 28 Typing Unit (LP), Parts |
| 573-115-802TC | x | P | link | 28 Compact KSR & RO Typing Unit (LP), Parts |
| 573-116-100TC | x | D, T | link | 28 KSR Keyboard (LK) and RO Base (LB), Description & Principles of Operation |

| | | | | |
|-----------------------|-----|------|---|--|
| 573-116-102TC | x | D, T | link | 28 Compact KSR Keyboard (LLK), RO Base (LLB), & Cover (LPC), Description & Principles of Operation |
| 573-116-400TC (4/64) | x | WD | link | 28 KSR Keyboard (LK) and RO Base (LB) Wiring Diagrams |
| 573-116-400TC (add.) | x | WD | link | 28 Compact KSR Wiring Diagrams 5976WD, 5977WD, 5978WD |
| 573-116-700TC (4/66) | xx | A | link | 28 KSR Keyboard (LK) and RO Base (LB), Adjustments |
| 573-116-701TC (11/63) | xx | L | link | 28 KSR Keyboard (LK) and RO Base (LB), Lubrication |
| 573-116-702TC (5/65) | xx | DR | link | 28 KSR Keyboard (LK) and RO Base (LB), Disassembly & Reassembly |
| 573-116-703TC | x | A | link | 28 Compact KSR Keyboard (LLK), RO Base (LLB), & Cover (LPC), Adjustments |
| 573-116-704TC | x | L | link | 28 Compact KSR Keyboard (LLK), RO Base (LLB), & Cover (LPC), Lubrication |
| 573-116-705TC | x | DR | link | 28 Compact KSR Keyboard (LLK), RO Base (LLB), & Cover (LPC), Disassembly & Reassembly |
| 573-116-800TC | - | P | link | 28 KSR Keyboard (LK) and RO Base (LB), Parts |
| 573-116-801TC | x | P | link | 28 Compact KSR Keyboard (LLK) and RO Base (LLB), Parts |
| 573-117-100TC | x | D, T | to be scanned | 28 ASR Perforator Transmitter Base Description & Principles of Operation |
| 573-117-400TC (4/64) | x | WD | link | 28 Perforator Transmitter Base (LAK) Wiring Diagrams |
| 573-117-700TC (1/65) | xx | A | link , link | 28 Perforator Transmitter Base (LAK) Adjustments |
| 573-117-701TC (3/65) | xx | L | link , link | 28 Perforator Transmitter Base (LAK) Lubrication |
| 573-117-702TC (3/65) | xx | DR | link , link | 28 Perforator Transmitter Base (LAK) Disassembly & Reassembly |
| 573-117-800TC (4/67) | xx | P | link | 28 Perforator Transmitter Base (LAK) Parts |
| 573-118-100TC | xxx | D, T | link | 28 Typing Reperforator, Description & Principles of Operation |
| 573-118-400TC (4/64) | x | WD | link | 28 Typing Reperforator, Wiring Diagrams |
| 573-118-700TC (2/66) | xx | A | link | 28 Typing Reperforator (LPR) and Tape Printer (LTP), Adjustments |
| 573-118-701TC (12/65) | xx | L | link | 28 Typing Reperforator (LPR) and Tape Printer (LTP), Lubrication |
| 573-118-702TC (1/66) | xx | DR | link | 28 Typing Reperforator (LPR) and Tape Printer (LTP), Disassembly & Reassembly |
| 573-118-800TC (3/72) | xx | P | link | 28 Typing Reperforator (LPR) and Tape Printer (LTP), Parts |
| 573-119-400TC | - | WD | no link | 28 Single Magnet Non-typing Reperforator Wiring Diagram |
| 573-119-700TC | - | A | no link | 28 Single Magnet Non-typing Reperforator Adjustments |
| 573-119-701TC | - | L | no link | 28 Single Magnet Non-typing Reperforator Lubrication |
| 573-119-702TC | - | DR | no link | 28 Single Magnet Non-typing Reperforator Disassembly & Reassembly |
| 573-119-800TC | - | P | link | 28 and 29 Non-typing Reperforator (LRPE) Parts |
| 573-120-100TC | - | D, T | no link | 28 and 35 Multi-magnet Non-typing Reperforator Description & Principles of Operation |
| 573-120-400TC | - | WD | no link | 28 Multi-magnet Non-typing Reperforator Wiring Diagram |
| 573-120-700TC | - | A | no link | 28 and 35 Multi-magnet Non-typing Reperforator Adjustments |
| 573-120-701TC | - | L | no link | 28 and 35 Multi-magnet Non-typing Reperforator Lubrication |

| | | | | |
|--------------------------|-----|------|---|--|
| 573-120-702TC | - | DR | no link | 28 and 35 Multi-magnet Non-typing Reperforator Disassembly & Reassembly |
| 573-120-800TC (10/65) | - | P | link | 28 and 35 Multi-magnet Non-typing Reperforator (LARP) Parts |
| 573-121-100TC | xxx | D, T | link | 28 Typing Reperf Keyboards and Bases, Description & Principles of Operation |
| 573-121-101TC | x | D, T | to be scanned | 28 ASR Auxiliary Typing Reperf Description & Principles of Operation |
| 573-121-700TC | xx | A | to be scanned | 28 Reperf and Tape Printer Bases, Adjustments |
| 573-121-701TC | xx | L | to be scanned | 28 Reperf and Tape Printer Bases, Lubrication |
| 573-121-800TC (3/65) | x | P | link | 28 Reperf and Tape Printer Bases (LPB) and Multiple Reperforator Base (LMRB) |
| 573-121-800TC (5/70) | x | P | link | 28 Reperf and Tape Printer Bases (LPB) and Multiple Reperforator Base (LMRB) |
| 573-122-700TC | x | A | link | 28 Tape Typing Unit Requirements & Adjustments |
| 573-122-701TC | x | L | link | 28 Tape Typing Unit Lubrication |
| 573-123-700TC | xx | A | link | 28 Typing Reperf and Tape Printer Keyboards, Adjustments |
| 573-123-701TC | xx | L | link | 28 Typing Reperf and Tape Printer Keyboards, Lubrication |
| 573-123-702TC | xx | DR | to be scanned | 28 Typing Reperf and Tape Printer Keyboards, Disassembly & Reassembly |
| 573-123-800TC | cx | P | link | 28 Send-Receive Reperforator Keyboard Base (LTRK) and 28 Send-Receive Tape Printer Keyboard Base (LTPK), Parts |
| 573-124-700TC | x | A | link | 28 Tape Teletypewriter Requirements & Adjustments |
| 573-124-701TC | x | L | link | 28 Tape Teletypewriter Lubrication |
| 573-125-400TC | x | WD | link , link | 28 RT Receiver-Transmitter Wiring Diagram |
| 573-125-700TC | x | A | link | 28 RT Receiver-Transmitter Requirements & Adjustments |
| 573-125-701TC | x | L | link | 28 RT Receiver-Transmitter Lubrication |
| 573-125-702TC | x | | link | 28 RT Receiver-Transmitter Disassembly & Reassembly |
| 573-125-800TC | x | P | to be scanned | 28 RT Receiver-Transmitter Base LRXB Parts |
| 573-125-800TC | x | P | to be scanned | 28 RT Receiver-Transmitter Stand LTHS Parts |
| 573-126-400TC | x | WD | link | 28A and 28B Reperforator-Transmitter Adapter unit Wiring Diagram |
| 573-127-101TC | x | D, T | to be scanned | 28 Transmitter Distributor (LXD) Description & Principles of Operation |
| 573-127-400TC | x | WD | link | 28B and 28C Transmitter-Distributor Units Wiring Diagrams |
| 573-127-401TC | x | WD | link | 28E and 28H Transmitter-Distributor Wiring Diagram |
| 573-127-402TC | x | WD | link | 28F, 28G, 28LA, 28LB Transmitter-Distributor Wiring Diagram |
| 573-127-700TC | x | A | to be scanned | 28 Transmitter Distributor (Pivoted Head, Multi-Contact) (LAXD, LCXD) |
| 573-127-701TC | x | L | to be scanned | 28 Transmitter Distributor (Pivoted Head, Multi-Contact) (LAXD, LCXD) |
| 573-127-702TC | x | DR | to be scanned | 28 Transmitter Distributor (Pivoted Head, Multi-Contact) (LAXD, LCXD) |
| 573-127-703TC | x | A | link | 28E and 28H Transmitter Distributor (LXD) Adjustments |
| 573-127-704TC | x | L | link | 28E and 28H Transmitter Distributor (LXD) Lubrication |
| 573-127-705TC | x | DR | link | 28E and 28H Transmitter Distributor (LXD) Disassembly & Reassembly |
| 573-127-706TC | x | A | link , link | 28F, 28G, 28LA, and 28LB Transmitter Distributor (LXD) Adjustments |
| 573-127-707TC | x | L | link | 28F, 28G, 28LA, and 28LB Transmitter Distributor (LXD) Lubrication |
| 573-127-708TC | x | DR | link | 28F, 28G, 28LA, and 28LB Transmitter Distributor (LXD) Disassembly & Reassembly |

| | | | | |
|-----------------------|------|------|--|--|
| 573-127-800TC | xx | P | link | 28 Transmitter Distributor (Pivoted Head, Multi-Contact) (LAXD) Parts |
| 573-127-801TC | xx | P | to be scanned | 28 Transmitter (LX) and Transmitter-Distributor (LXD) Parts |
| 573-127-802TC | x | P | to be scanned | 28 Two-shaft Transmitter Distributor (LBXD) Parts |
| 573-127-803TC | x | P | link | 28 Transmitter Distributor (Pivoted & Fixed Heads, Multi-contact) (LCXD) Parts |
| 573-128-100TC | x | D, T | to be scanned | 28 ASR Transmitter Distributor Base, Description & Principles of Operation |
| 573-128-101TC | x | D | to be scanned | 28 Transmitter Distributor Bases (Single & Multiple Mounting) Description |
| 573-128-400TC | x | WD | link | 28F, 28G, 28H, 28H-2, 28H-3, 28J, 28K, and 28LA Transmitter Distributor Base (for ASR) Wiring Diagrams |
| 573-128-401TC | x | WD | link | 18F and 28G Transmitter Distributor Housing (for ASR) Wiring Diagrams |
| 573-128-700TC | x | A | to be scanned | 28 Transmitter Distributor Bases (Single & Multiple Mounting) Adjustments |
| 573-128-701TC | x | L | to be scanned | 28 Transmitter Distributor Bases (Single & Multiple Mounting) Lubrication |
| 573-128-800TC | x | P | to be scanned | 28 ASR Transmitter Distributor Base (LCXB) Parts |
| 573-129-700TC | x | A | link | 28 Transmitter Distributor Base Answer Back Mechanism Adjustments |
| 573-129-701TC | x | L | link | 28 Transmitter Distributor Base Answer Back Mechanism Lubrication |
| 573-130-400TC | x | WD | link | 28G and 28H TD Mounting and Cover Assemblies Wiring Diagram |
| 573-130-800TC | x | P | to be scanned | 28 Two-shaft TD Base (LBXB) and Multiple Transmitter Base (LMXB) Parts |
| 573-130-801TC (7/66) | x | P | link | 28 Two-shaft TD Cover (LLBXC) and Cabinet (AC) |
| 573-130-802TC | xx | P | to be scanned | 28 Transmitter & TD Base (LDXB) and Multiple TD Base (LMXB) Parts |
| 573-130-803TC (11/65) | xx | P | link | 28 Transmitter & TD Cover (LXDC) and Table (LT) Parts |
| 573-131-400TC | x | WD | link | 28A, 28A-1, 28A-2, 28D, 28D-1, 28D-2, 28J, 28J-1, 28J-2, 28K and 28L Distributors, Wiring Diagrams |
| 573-131-700TC | x | A | link | 28 Distributor Adjustments |
| 573-131-701TC | x | L | link | 28 Distributor Lubrication |
| 573-132-100TC (6/56) | x | D | link | 28A Sequence Selector (for 83B1 Selective Calling System) - Description |
| 573-132-700TC (9/65) | - | A | link , ch-06 | 28 Sequence Selector Unit & Base - Adjustments |
| 573-132-701TC (9/65) | x | L | link | 28 Sequence Selector Unit & Base - Lubrication |
| 573-132-702TC (9/65) | x | DR | link | 28 Sequence Selector Unit & Base - Disassembly & Reassembly |
| 573-132-800.01 (8/64) | x | P | link | TP 90504 felt Washers - change |
| 573-132-802TC (3/66) | x | P | link | 28 Sequence Selector Base (LSB) parts |
| 573-133-100TC | xxxx | D, T | link | 28 Electrical Service Unit (LESU), Description & Principles of Operation |
| 573-133-400TC (4/64) | x | WD | link | 28 Electrical Service Units (LESU), Wiring Diagrams |
| 573-133-400TC (11/69) | x | WD | link | 28 Electrical Service Units (LESU), Wiring Diagrams |
| 573-133-700TC | x | A | link | 28 Electrical Service Unit (LESU) for KSR and RO Sets, Adjustments |
| 573-133-701TC | x | L | link | 28 Electrical Service Unit (LESU) for KSR and RO Sets, Lubrication |

| | | | | |
|-----------------------|-----|------|---|--|
| 573-133-702TC | x | DR | link | 28 Electrical Service Unit (LESU) for KSR and RO Sets, Disassembly & Reassembly |
| 573-133-800TC | - | P | link | 28 Electrical Service Unit (LESU) for KSR and RO Sets, Parts |
| 573-133-801TC | x | P | link | 28 Electrical Service Unit (LESU) for Reperforators |
| 573-133-802TC | x | P | to be scanned | 28 ASR Electrical Service Unit (LESU) for ASR Sets, Parts |
| 573-133-803TC (12/65) | x | P | link | 28 Electrical Service Unit (LESU) for Sequence Selector, Parts |
| 573-133-804TC | - | P | link | 28 Electrical Service Unit (LESU) for Wall Mounted KSR and RO Sets, Parts |
| 573-134-100TC | x | D | link , link | 28 KSR and RO Cabinets, Description |
| 573-134-101TC | x | D, T | to be scanned | 28 ASR Cabinet Description |
| 573-134-400TC | x | WD | link | 28 KSR, RO, ASR Cabinets, Wiring Diagrams |
| 573-134-700TC | x | A | link | 28 KSR, RO, ASR Cabinets, Adjustments |
| 573-134-701TC | x | L | link | 28 KSR, RO, ASR Cabinets, Lubrication |
| 573-134-702TC | x | DR | link | 28 KSR, RO, ASR Cabinets, Disassembly & Reassembly |
| 573-134-703TC | x | A | link | 28 ASR Cabinets (LAAC) Adjustments |
| 573-134-704TC | x | L | link | 28 ASR Cabinets (LAAC) Lubrication |
| 573-134-705TC | x | DR | link | 28 ASR Cabinets (LAAC) Disassembly & Reassembly |
| 573-134-800TC | - | P | link | 28 Console and Table Model Cabinets (LAC) and 28 Table (LT), Parts |
| 573-134-801TC | - | P | link | 28 KSR and RO Skintight Cover (LPC), Parts |
| 573-134-802TC | x | P | to be scanned | 28 ASR Cabinet (LAAC), Parts |
| 573-134-803TC (8/65) | x | P | link | 28 Cover for Keyboard with Perforator (LBPC), Parts |
| 573-134-804TC | - | P | link | 28 Wall Mounted Cabinet (LPC), Parts |
| 573-134-805TC | x | P | link | 28 Compact KSR & RO Cover (LPC) Parts |
| 573-135-100TC | xxx | D | link , link | 28 Reperforator Enclosures Description |
| 573-135-400TC | x | WD | link | 28 Typing Reperforator Cabinets, Tables, and Covers, Wiring Diagrams |
| 573-135-700TC | xx | A | link | 28 Typing Reperforator Cabinets, Tables, and Covers, Adjustments |
| 573-135-701TC | xx | L | link | 28 Typing Reperforator Cabinets, Tables, and Covers, Lubrication |
| 573-135-800TC | x | P | link | 28 Reperf and Tape Printer Covers and Table Parts (LRC, LSRC, LT) |
| 573-136-400TC | x | WD | link | 28B and 28LA Apparatus Cabinets, Wiring Diagrams |
| 573-136-700TC (4/64) | x | A | link | 28 Apparatus Cabinets, Adjustments |
| 573-136-701TC (4/64) | x | L | link | 28 Apparatus Cabinets, Lubrication |
| 573-136-703TC | xx | A | to be scanned | 28 Cabinets for Multiple Reperf Sets Adjustments |
| 573-136-704TC | xx | L | to be scanned | 28 Cabinets for Multiple Reperf Sets Lubrication |
| 573-136-800TC | x | P | link | 28 Apparatus Cabinet (LBAC) for Receiving, Monitoring, & Transmitting-Monitoring |
| 573-136-801TC (11/65) | xx | P | link | 28 Apparatus Cabinet (LBAC) for Multiple TD Sets, Parts |
| 573-136-802TC (3/66) | x | P | link | 28 Apparatus Cabinet (LBAC) for Receiver Transmitter, Parts |
| 573-136-803TC | - | P | link , link | 28 Apparatus Cabinet (LBAC) for Page Printers, Parts |
| 573-136-804TC | x | P | to be scanned | 28 Apparatus Cabinet (LBAC) for Torn Tape and 28 Table (LT) Parts |
| 573-137-400TC | | | | |

| | | | | |
|----------------------|----|---------|--|---|
| (5/62) | x | WD | link | 28A Mounting and Cover Assembly, Wiring Diagram |
| 573-138-400TC | x | WD | link | 28 Receiving Selector Unit, Wiring Diagram |
| 573-139-100TC | xx | D, T | link | 28 Typing (LTPE) and Nontyping (LPE) Perforators, Description & Principles of Operation |
| 573-139-700TC | x | A | link | 28 Typing (LTPE) and Nontyping (LPE) Perforators, Adjustments |
| 573-139-701TC | x | L | link | 28 Typing (LTPE) and Nontyping (LPE) Perforators, Lubrication |
| 573-139-702TC | x | DR | link | 28 Typing (LTPE) and Nontyping (LPE) Perforators, Disassembly & Reassembly |
| 573-139-800TC | x | P | to be scanned | 28 Typing (LTPE) and Nontyping (LPE) Perforators, Parts |
| 573-140-100TC | - | D, T | link | 28 Tape Printer Unit (Stock Ticker), Description & Principles of Operation |
| 573-140-700TC | - | A | link | 28 Tape Printer Unit (Stock Ticker), Adjustments |
| 573-140-701TC | - | L | link | 28 Tape Printer Unit (Stock Ticker), Lubrication |
| 573-140-702TC | - | DR | link | 28 Tape Printer Unit (Stock Ticker), Disassembly and Reassembly |
| 573-141-700TC | - | D, A, L | link | 28 Tape Printer Base (Stock Ticker), Description, Adjustments, & Lubrication |
| 573-142-700TC | - | D, A | link | 28 Tape Printer Cover and Pedestal (Stock Ticker), Description & Adjustments |
| 573-143-700TC | - | D, A, L | link | 28 Tape Puller (Stock Ticker), Description, Adjustments, & Lubrication |
| 573-144-800TC (1965) | - | P | link | 28 and 35 Multi-magnet Non-typing Reperforator Base (LARB) Parts |
| 573-144-801TC (1965) | - | P | link | 28 and 35 Multi-magnet Non-typing Reperforator Cover (LARC) Parts |
| 573-600-100TC | - | D | link | RFI Suppression for 28 Teletypewriter Equipment |
| 573-600-200TC | - | I | link | RFI Suppressed 28 Teletypewriter Sets |
| 573-610-100TC | - | D | link | RFI Suppression for 28 Typing Units and Typing and Nontyping Reperforators |
| 573-610-800TC | - | P | link | RFI Suppression Features for Low- Level Sets 28 Typing Unit |
| 573-611-100TC | - | D | link | RFI Suppression for 28 Keyboards, 28 Transmitter Distributors, and 28/32 Keyboards |
| 573-611-800TC | - | P | link | RFI Suppression Features for Low-Level Sets 28 and 28/32 Keyboards and Bases (LK, LTRK, LAK, LLK and LB, LLB) |
| 573-612-100TC | - | D | link | RFI Suppression for 28 Cabinets |
| 573-612-800TC | - | P | link | RFI Suppression Features for Low-Level Sets - 28 ASR/KSR Cabinets |
| 573-612-801TC | - | P | link | RFI Suppression Features for Low-Level Sets- 28 Multi-Page Printer Cabinet |
| 573-613-100TC | - | D | link | Electrical Service Assemblies for Low-Level RFI Suppression |
| 573-613-300TC | - | TS | link | RFI Suppression for 28 Electrical Service Assemblies and Associated Components |
| 573-613-800TC | - | P | link | RFI Suppression Features for Low- Level Sets - 28 Electrical Service Assembly (ESA) |
| 573-613-801TC | - | P | link | RFI Suppression Features for Low- Level Sets - 28 Electrical Service Units |
| 573-700-100TC | - | Index | link | 28 Military Cross-Reference (partial) |
| 574-000-000TC (7/65) | - | Index | link | 32, 33, & 35 - Index to Class 574 publications |
| 574-000-000TC (7/76) | - | Index | link | 32, 33, & 35 - Index to Class 574 publications |
| 574-100-101TC | - | D | link | 33 TTY Set - Description |
| 574-100-102TC | - | D | link , link | 32 & 33 TTY Sets Description |
| 574-100-201TC | - | I | link , link | 32 & 33 TTY Sets Installation |
| 574-100-401TC | - | WD | no link | 32 TTY Set Detached-Contact Schematic Drawing |
| 574-100-800TC | - | I | no link | 32 & 33 Type Modification Kits |
| 574-121-100TC | - | T | link , link , link | 32 & 33 Keyboard Principles of Operation |

| | | | | |
|-------------------------|---|----------|---|--|
| 574-121-700TC | - | A | link , link | 32 & 33 Keyboard Adjustments |
| 574-121-701TC | - | L | link , link | 32 & 33 Keyboard Lubrication |
| 574-121-702TC | - | DR | link , link | 32 & 33 Keyboard Disassembly and Reassembly |
| 574-121-800TC | - | P | no link | 32 & 33 Keyboard Parts |
| 574-122-100TC | - | T | link | 32 & 33 Typing Unit Principles of Operation |
| 574-122-700TC | - | A | link | 32 & 33 Typing Unit Adjustments |
| 574-122-701TC | - | L | link | 32 & 33 Typing Unit Lubrication |
| 574-122-702TC | - | DR | link | 32 & 33 Typing Unit Disassembly and Reassembly |
| 574-122-800TC | - | P | no link | 32 & 33 Typing Unit Parts |
| 574-123-100TC | - | T | no link | 32 & 33 Call Control Unit Principles of Operation |
| 574-123-101TC | - | T | link | 32 & 33 Call Control Unit Principles of Operation |
| 574-123-800TC | - | P | no link | 32 & 33 Call Control Unit Parts |
| 574-124-100TC | - | T | link | 32 & 33 Tape Reader Principles of Operation |
| 574-124-700TC | - | A | link | 32 & 33 Tape Reader Adjustments |
| 574-124-701TC | - | L | link | 32 & 33 Tape Reader Lubrication |
| 574-124-702TC | - | DR | link | 32 & 33 Tape Reader Disassembly and Reassembly |
| 574-124-800TC | - | P | no link | 32 & 33 Tape Reader Parts |
| 574-125-100TC | - | T | link | 32 & 33 Tape Punch Principles of Operation |
| 574-125-700TC | - | A | link | 32 & 33 Tape Punch Adjustments |
| 574-125-701TC | - | L | link | 32 & 33 Tape Punch Lubrication |
| 574-125-702TC | - | DR | link | 32 & 33 Tape Punch Disassembly and Reassembly |
| 574-125-800TC | - | P | no link | 32 & 33 Tape Punch Parts |
| 574-126-100TC | - | A, L, DR | link | 32 & 33 Cover |
| 574-126-800TC | - | P | no link | 32 & 33 Parts |
| 574-160-100TC | - | D, OM | link | 32 TTY Sets, General Description & Operations |
| 574-160-103TC | - | D | link | 32 TTY Sets, Circuit Descriptions |
| 574-160-105TC (3/74) | - | D | link | 32 TTY Sets, Optional Features |
| 574-160-200TC | - | I | link , link | 32 TTY Sets, Installation |
| 574-160-702TC | - | DR | link | 32 TTY Sets, Removal & Replacement of Components |
| 574-171-100TC | - | D, T | link | 32 Keyboard General Description & Principles of Operation |
| 574-171-700TC | - | A | link | 32 Keyboard Adjustments |
| 574-171-701TC | - | L | link | 32 Keyboard Lubrication |
| 574-171-702TC | - | DR | link | 32 Keyboard Disassembly and Reassembly |
| 574-171-800TC | - | P | link | 32 Keyboard (UK) Parts |
| 574-172-100TC | - | D, T | link | 32 Typing Unit General Description & Principles of Operation |
| 574-172-700TC | - | A | link | 32 Typing Unit Adjustments |
| 574-172-701TC | - | L | link | 32 Typing Unit Lubrication |
| 574-172-702TC | - | DR | link | 32 Typing Unit Disassembly and Reassembly |
| 574-172-800TC | - | P | link | 32 Typing Unit (UP) Parts |
| 574-173-100TC | - | D, T | link | 32 Call Control Unit General Description & Principles of Operation |
| 574-173-800TC | - | P | link | 32 Call Control Unit (UCC) parts |
| 574-174-100TC | - | D, T | link | 32 Tape Reader Adjustments |
| 574-174-700TC | - | A | link | 32 Tape Reader Adjustments |
| 574-174-701TC | - | L | link | 32 Tape Reader Lubrication |
| 574-174-702TC | - | DR | link | 32 Tape Reader Disassembly and Reassembly |
| 574-174-800TC | - | P | link | 32 Tape Reader (UX) Parts |

| | | | | |
|---------------|---|------|--|--|
| 574-175-100TC | - | D, T | link | 32 Tape Punch General Description & Principles of Operation |
| 574-175-700TC | - | A | link | 32 Tape Punch Adjustments |
| 574-175-701TC | - | L | link | 32 Tape Punch Lubrication |
| 574-175-702TC | - | DR | link | 32 Tape Punch Disassembly and Reassembly |
| 574-175-800TC | - | P | link | 32 Tape Punch (UPE) Parts |
| 574-176-100TC | - | D | link | 32 Cover General Description |
| 574-176-700TC | - | A | link | 32 Cover Adjustments |
| 574-176-701TC | - | L | link | 32 Cover Lubrication |
| 574-176-800TC | - | P | link | 32 Cover and Table Parts |
| 574-200-100TC | - | D | no link | 35 RO Description & Operation |
| 574-200-200TC | - | I | no link | 35 RO Installation |
| 574-200-300TC | - | MA | no link | 35 RO Maintenance (Trouble Shooting) |
| 574-200-400TC | - | WD | no link | 35 RO Functional Diagrams & Connecting Info |
| 574-201-100TC | - | D | no link | 35 KSR Description & Operation |
| 574-201-200TC | - | I | no link | 35 KSR Installation |
| 574-201-300TC | - | MA | no link | 35 KSR Maintenance (Trouble Shooting) |
| 574-201-400TC | - | WD | no link | 35 KSR Functional Diagrams & Connecting Info |
| 574-202-100TC | - | D | link | 35 ASR Description |
| 574-202-101TC | - | D | link | 35 ASR (Data Communications) Description |
| 574-202-200TC | - | I | no link | 35 ASR Installation |
| 574-202-201TC | - | I | link | 35 ASR (Data Communications) Installation |
| 574-202-300TC | - | MA | no link | 35 ASR Maintenance - Troubleshooting |
| 574-202-301TC | - | MA | link | 35 ASR Maintenance - Troubleshooting |
| 574-202-400TC | - | WD | no link | 35 ASR Functional Diagrams & Connecting Info |
| 574-203-100TC | - | D | link | 35 ROTR (Receive Only Typing Reperforator) Description & Operation |
| 574-203-200TC | - | I | link | 35 ROTR (Receive Only Typing Reperforator) Installation |
| 574-203-300TC | - | TS | link | 35 ROTR (Receive Only Typing Reperforator) Troubleshooting |
| 574-204-100TC | - | D | no link | 35 Keyboard Tape Printer Set Description & Operation |
| 574-204-200TC | - | I | no link | 35 Keyboard Tape Printer Set Installation |
| 574-204-300TC | - | MA | link | 35 Keyboard Tape Printer Set Maintenance (Trouble Shooting) |
| 574-204-400TC | - | WD | link | 35 Keyboard Tape Printer Set Functional Diagrams |
| 574-205-100TC | - | D | link | 35 Transmitter Distributor Sets - Description & Operation |
| 574-220-100TC | - | D, T | link | 35 Typing Unit Description & Principles of Operation |
| 574-220-400TC | - | WD | no link | 35 Typing Unit Actual Wiring Diagrams |
| 574-220-700TC | - | A | link , change-01 , change-06 | 35 Typing Unit Adjustments |
| 574-220-701TC | - | L | link | 35 Typing Unit Lubrication |
| 574-220-702TC | - | DR | link | 35 Typing Unit Disassembly and Reassembly |
| 574-220-800TC | - | P | link , change-01 | 35 Typing Unit Parts |
| 574-220-803TC | - | P | no link | 35 Typing Unit 152573 Retainer |
| 574-220-804TC | - | P | no link | 35 Typing Unit 194870 Spur Gear |
| 574-220-805TC | - | P | no link | 35 Typing Unit 152429 Sector Rack, 170230 Knob, and 155096 Plate |
| 574-221-100TC | - | D, T | link | 35 KSR Keyboard & RO Base Description & Principles of Operation |
| 574-221-400TC | - | WD | link | 35 KSR Keyboard & RO Base Actual Wiring Diagrams |
| 574-221-700TC | - | A | link | 35 KSR Keyboard & RO Base Adjustments |

| | | | | |
|---------------|---|------|---|---|
| 574-221-701TC | - | L | no link | 35 KSR Keyboard & RO Base Lubrication |
| 574-221-702TC | - | DR | no link | 35 KSR Keyboard & RO Base Disassembly and Reassembly |
| 574-221-800TC | - | P | link , link | 35 KSR Keyboard (LK) & RO Base (LB) Parts |
| 574-222-100TC | - | D, T | link | 35 ASR Keyboard Description & Principles of Operation |
| 574-222-400TC | - | WD | link | 35 ASR Keyboard Actual Wiring Diagrams |
| 574-222-700TC | - | A | link | 35 ASR Keyboard Adjustments |
| 574-222-701TC | - | L | link | 35 ASR Keyboard Lubrication |
| 574-222-702TC | - | DR | link | 35 ASR Keyboard Disassembly and Reassembly |
| 574-222-800TC | - | P | link | 35 ASR Keyboard (LAK) Parts |
| 574-223-100TC | - | D, T | link | 35 Transmitter-Distributor Base (for ASR) Description & Principles of Operation |
| 574-223-101TC | - | D, T | link | 35 Transmitter-Distributor Base Description & Principles of Operation |
| 574-223-400TC | - | WD | link | 35 Transmitter-Distributor Base Actual Wiring Diagrams |
| 574-223-700TC | - | A, L | link | 35 Transmitter-Distributor Base (for ASR) Adjustments & Lubrication |
| 574-223-702TC | - | A, L | link | 35 Transmitter-Distributor Base Adjustments & Lubrication |
| 574-223-800TC | - | P | link | 35 Transmitter-Distributor Base (LCXB) Parts |
| 574-224-100TC | - | D, T | link | 35 Non-typing Reperforator Description & Principles of Operation |
| 574-224-700TC | - | A | link | 35 Non-typing Reperforator Adjustments |
| 574-224-701TC | - | L | link | 35 Non-typing Reperforator Lubrication |
| 574-224-702TC | - | DR | link | 35 Non-typing Reperforator Disassembly and Reassembly |
| 574-224-800TC | - | P | link | 35 Non-typing Reperforator (LRPE) Parts |
| 574-225-100TC | - | D, T | link , link | 35 Transmitter-Distributor Description & Principles of Operation |
| 574-225-400TC | - | WD | link | 35 Transmitter-Distributor Actual Wiring Diagrams |
| 574-225-700TC | - | A | link , link | 35 Transmitter-Distributor Adjustments |
| 574-225-701TC | - | L | link , link | 35 Transmitter-Distributor Lubrication |
| 574-225-702TC | - | DR | link , link | 35 Transmitter-Distributor Disassembly and Reassembly |
| 574-226-100TC | - | D, T | link , link | 35 Electrical Service Unit Description & Principles of Operation |
| 574-226-400TC | - | WD | link | 35 Electrical Service Unit Actual Wiring Diagrams |
| 574-226-800TC | - | P | link | 35 Electrical Service Unit (for KSR/RO) Parts |
| 574-226-801TC | - | P | link | 35 Electrical Service Unit (for ASR) Parts |
| 574-226-802TC | - | P | no link | 35 Electrical Service Unit (for Typing Reperf) Parts |
| 574-226-803TC | - | P | link | 35 Electrical Service Unit (for wall mounted KSR/RO) Parts |
| 574-227-100TC | - | D, T | link | 35 Call Control Unit Description & Principles of Operation |
| 574-227-400TC | - | WD | link | 35 Call Control Unit Actual Wiring Diagrams |
| 574-227-800TC | - | P | link , change-06 | 35 Call Control Unit LCCU Parts |
| 574-228-100TC | - | D, T | link | 35 ASR Cabinet Description & Principles of Operation |
| 574-228-700TC | - | A | link | 35 ASR Cabinet Adjustments |
| 574-228-701TC | - | L | link | 35 ASR Cabinet Lubrication |
| 574-228-800TC | - | P | link | 35 ASR Cabinet LAAC Parts |
| 574-229-100TC | - | D, T | link | 35 KSR & RO Cabinets Description & Principles of Operation |
| 574-229-700TC | - | A | link | 35 KSR & RO Cabinets Adjustments |
| 574-229-701TC | - | L | link | 35 KSR & RO Cabinets Lubrication |
| 574-229-800TC | x | P | link , link | 35 Console & Table Model Cabinet LAC (for KSR/RO) Parts |
| 574-229-801TC | x | P | link , link | 35 Wall Mounted Cabinet LPC (for KSR/RO) Parts |
| 574-230-100TC | - | D, T | link | 35 ROTR Cover & Keyboard Tape Printer Cover - Description & Principles of Operation |
| 574-230-700TC | - | A | no link | 35 ROTR Cover & Keyboard Tape Printer Cover - Adjustments |

| | | | | |
|----------------------------|---|------|---|--|
| 574-230-701TC | - | L | no link | 35 ROTR Cover & Keyboard Tape Printer Cover - Lubrication |
| 574-230-702TC | - | D | link | 35 ROTR Cover - Description |
| 574-230-800TC | - | P | no link | 35 ROTR Cover (LRG) & Keyboard Tape Printer Cover (LSRC) - Parts |
| 574-231-100TC | - | D, T | no link | 35 Tape Printer - Description & Principles of Operation |
| 574-231-401TC | - | WD | link | 35 Tape Printer - Actual Wiring Diagrams |
| 574-231-700TC | - | A | link | 35 Tape Printer - Adjustments |
| 574-231-701TC | - | L | link | 35 Tape Printer - Lubrication |
| 574-231-702TC | - | DR | link | 35 Tape Printer - Disassembly and Reassembly |
| 574-231-802TC | - | P | no link | 35 Tape Printer (LTP) - Parts |
| 574-232-100TC | - | D, T | no link | 35 Tape Printer Keyboard & ROTR Base - Description & Principles of Operation |
| 574-232-101TC | - | D, T | link | 35 Reperator Bases - Description & Principles of Operation |
| 574-232-401TC | - | WD | link | 35 Tape Printer Keyboard & ROTR Base - Actual Wiring Diagrams |
| 574-232-700TC | - | A | no link | 35 Tape Printer Keyboard & ROTR Base - Adjustments |
| 574-232-702TC | - | L | no link | 35 Tape Printer Keyboard - Lubrication |
| 574-232-703TC | - | A | link | 35 Reperator Bases - Adjustments |
| 574-232-704TC | - | L | link | 35 Reperator Bases - Lubrication |
| 574-232-800TC | - | P | no link | 35 Tape Printer Keyboard (LTPK) & Typing Reperf Base (LRB) - Parts |
| 574-233-100TC | - | D, T | link , link | 35 Typing Reperator Description & Principles of Operation |
| 574-233-400TC | - | WD | link | 35 Typing Reperator - Actual Wiring Diagrams |
| 574-233-700TC | - | A | link , link | 35 Typing Reperator Adjustments |
| 574-233-701TC | - | L | link , link | 35 Typing Reperator Lubrication |
| 574-233-702TC | - | DR | link , link | 35 Typing Reperator Disassembly and Reassembly |
| 574-233-800TC | - | P | no link | 35 Typing Reperator (LPR) & Tape Printer (LTP) - Parts |
| 574-234-100TC | - | D, T | link | 35 Receiving Only Reperator Table - Description & Principles of Operation |
| 574-234-400TC | - | WD | link | 35 Receiving Only Reperator Table - Actual Wiring Diagrams |
| 574-234-700TC | - | A | link | 35 Receiving Only Reperator Table - Adjustments |
| 574-234-701TC | - | L | link | 35 Receiving Only Reperator Table - Lubrication |
| 574-234-800TC | - | P | no link | 35 Reperator Table (LT) - Parts |
| 574-235-100TC (10/62) | - | D, T | link | 35 Answer Back Unit Description & Principles of Operation |
| 574-235-100TC (4/65) | - | D, T | link | 28 & 35 Answer Back Unit Description & Principles of Operation |
| 574-235-200TC | x | I | link | 28 & 35 Answer Back Unit Installation |
| 574-235-400TC | x | WD | link | 35 Answer Back Unit (not LABD) - Actual Wiring Diagrams |
| 574-235-700TC (7/69) | - | A | link | 28 & 35 Answer Back Unit Adjustments |
| 574-235-701TC (4/65) | x | L | link , link | 28 & 35 Answer Back Unit Lubrication |
| 574-235-702TC (4/65) | x | DR | link | 28 & 35 Answer Back Unit Disassembly and Reassembly |
| 574-235-800TC | - | P | no link | 28 & 35 Self Contained Answer Back (LABD) Parts |
| 574-235-800TC (partial) | - | P | link , link | 28 & 35 Answer Back Unit Parts (excerpts from KSR manuals) |
| 574-236-100TC | - | D, T | link | 35 Tape Reader (Parallel Output) Description & Principles of Operation |
| 574-236-700TC | - | A | link | 35 Tape Reader (Parallel Output) Adjustments |
| 574-236-701TC | - | L | link | 35 Tape Reader (Parallel Output) Lubrication |
| 574-236-702TC | - | DR | link | 35 Tape Reader (Parallel Output) Disassembly and Reassembly |
| 574-236-800TC | - | P | link | 35 Transmitter LX Parts |

| | | | | |
|---------------|---|------|----------------------|--|
| 574-237-100TC | - | D, T | link | 35 Multiple Wire Distributor Description & Principles of Operation |
| 574-237-700TC | - | A | link | 35 Multiple Wire Distributor Adjustments |
| 574-237-701TC | - | L | link | 35 Multiple Wire Distributor Lubrication |
| 574-237-800TC | - | P | link | 35 Multiple Wire Distributor (LD) Parts |
| 574-239-100TC | x | D | link | 35 Multicontact Transmitter-Distributor Description |
| 574-239-700TC | x | A | link | 35 Multicontact Transmitter-Distributor Adjustments |
| 574-239-701TC | x | L | link | 35 Multicontact Transmitter-Distributor Lubrication |
| 574-239-702TC | x | DR | link | 35 Multicontact Transmitter-Distributor Disassembly and Reassembly |
| 574-242-100TC | - | D | link | 35 "CARDATA" Reader LEXD Description & Principles of Operation |
| 574-242-200TC | - | I | link | 35 "CARDATA" Reader LEXD Installation |
| 574-242-400TC | - | WD | link | 35 "CARDATA" Reader LEXD Wiring Diagrams |
| 574-242-700TC | - | A | link | 35 "CARDATA" Reader LEXD Adjustments |
| 574-242-701TC | - | L | link | 35 "CARDATA" Reader LEXD Lubrication |
| 574-242-702TC | - | DR | link | 35 "CARDATA" Reader LEXD Disassembly and Reassembly |
| 574-242-800TC | - | P | link | 35 "CARDATA" Reader LEXD Parts |
| 574-244-800TC | - | P | link | 35 "CARDATA" Reperforator base LEPRB Parts |
| 574-246-100TC | - | D | link | 35 "CARDATA" Feeder EPCF Description & Principles of Operation |
| 574-246-200TC | - | I | link | 35 "CARDATA" Feeder EPCF Installation |
| 574-246-400TC | - | WD | link | 35 "CARDATA" Feeder EPCF Wiring Diagrams |
| 574-246-700TC | - | A | link | 35 "CARDATA" Feeder EPCF Adjustments |
| 574-246-701TC | - | L | link | 35 "CARDATA" Feeder EPCF Lubrication |
| 574-246-702TC | - | DR | link | 35 "CARDATA" Feeder EPCF Disassembly and Reassembly |
| 574-246-800TC | - | P | link | 35 "CARDATA" Feeder EPCF Parts |
| 574-247-101TC | - | D | link | 35 "CARDATA" Feeder & Reader Table LEPT General Information |
| 574-247-800TC | - | P | link | 35 "CARDATA" Feeder & Reader Table LEPT Parts |
| 574-302-102TC | x | D | to be scanned | 37 ASR General Description |
| 574-320-400TC | x | WD | to be scanned | 37 Typing Unit Wiring Diagrams |
| 574-320-703TC | x | A | to be scanned | 37 Typing Unit Adjustments |
| 574-320-704TC | x | L | to be scanned | 37 Typing Unit Lubrication |
| 574-320-705TC | x | DR | to be scanned | 37 Typing Unit Disassembly & Reassembly |
| 574-320-800TC | - | P | link | 37 Typing Unit (YP) Parts |
| 574-321-101TC | x | D | to be scanned | 37 Keyboard Description & Principles of Operation |
| 574-321-703TC | x | A | to be scanned | 37 Keyboard Adjustments |
| 574-321-704TC | x | L | to be scanned | 37 Keyboard Lubrication |
| 574-321-705TC | x | DR | to be scanned | 37 Keyboard Disassembly & Reassembly |
| 574-321-800TC | - | P | link | 37 Keyboard (YK) and Base (YB) Parts |
| 574-322-101TC | x | D | to be scanned | 37 Electrical Service Unit Description & Operation |
| 574-322-102TC | x | D | to be scanned | 37 Electrical Service Unit (YESU 823, 825, 827, 829) Description & Operation |
| 574-322-800TC | - | P | link | 37 Electrical Service Unit (YESU) Parts |

| | | | | |
|---------------|---------|---------|----------------------|--|
| 574-323-101TC | x | D | to be scanned | 37 Teletypewriter Tables Description & Operation |
| 574-323-703TC | x | A | to be scanned | 37 Teletypewriter Tables Adjustments |
| 574-323-800TC | - | P | link | 37 Table (YT) Parts |
| 574-324-800TC | - | P | link | 37 Electronic Distributor (YTD) Parts |
| 574-325-101TC | x | D | to be scanned | 37 Answer-Back Unit YAB802 Description & Operation |
| 574-325-700TC | x | A | to be scanned | 37 Answer-Back Unit Adjustments |
| 574-325-704TC | x | L | to be scanned | 37 Answer-Back Unit Lubrication |
| 574-325-800TC | - | P | link | 37 Answer-Back (YAB) Parts |
| 574-326-101TC | x | D | to be scanned | 37 Typing Unit Cover and Pan Description & Operation |
| 574-326-703TC | x | A | to be scanned | 37 Typing Unit Cover and Pan Adjustments |
| 574-326-704TC | x | L | to be scanned | 37 Typing Unit Cover and Pan Lubrication |
| 574-326-800TC | - | P | link | 37 Page Printer Cover (YPC) Parts |
| 574-327-100TC | x | D | to be scanned | 37 Reperforator-Transmitter (RT) Cabinet Description & Operation |
| 574-329-100TC | x | D, T | to be scanned | 37 Non-Typing Reperforator Description & Principles of Operation |
| 574-329-101TC | x | D, T | to be scanned | 37 Non-Typing Reperforator (YRPE08, 809) Description & Principles of Operation |
| 574-329-400TC | x | WD | to be scanned | 37 Reperforator Wiring Diagrams |
| 574-329-700TC | x | A | to be scanned | 37 Non-Typing Reperforator Adjustments |
| 574-329-701TC | x | L | to be scanned | 37 Non-Typing Reperforator (YRPE800 through YRPE807) Lubrication |
| 574-329-702TC | x | DR | to be scanned | 37 Non-Typing Reperforator Disassembly & Reassembly |
| 574-329-703TC | x | A | to be scanned | 37 Non-Typing Reperforator (YRPE808, 809) Adjustments |
| 574-329-704TC | x | L | to be scanned | 37 Non-Typing Reperforator (YRPE808, 809) Lubrication |
| 574-329-705TC | x | DR | to be scanned | 37 Non-Typing Reperforator (YRPE808, 809) Disassembly & Reassembly |
| 574-330-100TC | x | D, T | to be scanned | 37 Typing Reperforator Description & Principles of Operation |
| 574-330-400TC | x | WD | to be scanned | 37 Typing Reperforator Wiring Diagrams |
| 574-330-700TC | x | A | to be scanned | 37 Typing Reperforator Adjustments |
| 574-330-701TC | x | L | to be scanned | 37 Typing Reperforator Lubrication |
| 574-330-702TC | x | DR | to be scanned | 37 Typing Reperforator Disassembly & Reassembly |
| 574-331-100TC | x | D, A, L | to be scanned | 37 Typing Unit Base Description & Operation, Adjustments, & Lubrication |
| 574-500-100 | 325-078 | D | no link | 43 Basic Teleprinter Description |
| 574-500-101 | 325-078 | D | no link | 43 Teleprinter 8-level Buffered Send-Receive (BSR) Station Description |

| | | | | |
|-------------|---------|---------|---------|---|
| 574-500-102 | 325-078 | D | no link | 43 Teleprinter 8-level Buffered Selective Calling (BSC) Station Description |
| 574-500-103 | 325-078 | D | no link | 43 Teleprinter 5-level Buffered Selective Calling (BSC) Station Description |
| 574-500-200 | 325-078 | I | no link | 43 Basic Teleprinter Installation |
| 574-500-201 | 325-078 | I | no link | 43 Teleprinter 8-level Buffered Send-Receive (BSR) Station Installation |
| 574-500-202 | 325-078 | I | no link | 43 Teleprinter 8-level Buffered Selective Calling (BSC) Station Installation |
| 574-500-203 | 325-078 | I | no link | 43 Teleprinter 5-level Buffered Selective Calling (BSC) Station Installation |
| 574-500-210 | 325-078 | Options | no link | 43 Basic Teleprinter Engineering Options |
| 574-500-300 | 325-078 | TS | no link | 43 Basic KSR Teleprinter Troubleshooting |
| 574-500-301 | 325-078 | TS | no link | 43 Basic RO Teleprinter Troubleshooting |
| 574-500-302 | 325-078 | TS | no link | 43 Teleprinter 8-level Buffered Send-Receive (BSR) Station Troubleshooting |
| 574-500-303 | 325-078 | TS | no link | 43 Teleprinter 8-level Buffered Selective Calling (BSC) Station Troubleshooting |
| 574-500-304 | 325-078 | TS | no link | 43 Teleprinter 5-level Buffered Selective Calling (BSC) Station Troubleshooting |
| 574-500-400 | 325-078 | WD | no link | 43 Basic Teleprinter Wiring |
| 574-500-401 | 325-078 | WD | no link | 43 Buffered Teleprinter Wiring |
| 574-500-500 | 325-078 | Testing | no link | 43 Basic KSR Teleprinter Testing |
| 574-500-501 | 325-078 | Testing | no link | 43 Basic RO Teleprinter Testing |
| 574-500-502 | 325-078 | Testing | no link | 43 Teleprinter 8-level Buffered Send-Receive (BSR) Station Testing |
| 574-500-503 | 325-078 | Testing | no link | 43 Teleprinter 8-level Buffered Selective Calling (BSC) Station Testing |
| 574-500-504 | 325-078 | Testing | no link | 43 Teleprinter 5-level Buffered Selective Calling (BSC) Station Testing |
| 574-500-720 | 325-078 | DR | no link | 43 Teleprinter Disassembly & Reassembly |
| 574-500-750 | 325-078 | MA | no link | 43 Teleprinter Routine Maintenance |
| 574-500-800 | 325-078 | P | no link | 43 Teleprinter Parts |
| 574-501-300 | 325-078 | TS | no link | 43 Friction & Sprocket Feed Printer Troubleshooting |
| 574-501-301 | 325-078 | TS | no link | 43 Tractor Feed Printer Troubleshooting |
| 574-501-400 | 325-078 | WD | no link | 43 Printer Wiring |
| 574-501-700 | 325-078 | A | no link | 43 Friction & Sprocket Feed Printer Adjustment |
| 574-501-701 | 325-078 | A | no link | 43 Tractor Feed Printer Adjustment |
| 574-501-710 | 325-078 | L | no link | 43 Friction & Sprocket Feed Printer Lubrication |
| 574-501-711 | 325-078 | L | no link | 43 Tractor Feed Printer Lubrication |
| 574-501-720 | 325-078 | DR | no link | 43 Friction & Sprocket Feed Printer Disassembly & Reassembly |
| 574-501-721 | 325-078 | DR | no link | 43 Tractor Feed Printer Disassembly & Reassembly |
| 574-501-800 | 325-078 | P | no link | 43 Friction & Sprocket Feed Printer Parts |
| 574-501-801 | 325-078 | P | no link | 43 Tractor Feed Printer Parts |
| 574-502-300 | 325-078 | TS | no link | 43 Basic Keyboard Troubleshooting |
| 574-502-301 | 325-078 | TS | no link | 43 Buffered Keyboard Troubleshooting |
| 574-502-400 | 325-078 | WD | no link | 43 Basic Keyboard Wiring |
| 574-502-401 | 325-078 | WD | no link | 43 Buffered Keyboard Wiring |
| 574-502-720 | 325-078 | DR | no link | 43 Keyboard Disassembly & Reassembly |
| 574-502-800 | 325-078 | P | no link | 43 Keyboard Parts |
| 574-503-700 | 325-078 | A | no link | 43 Enclosures & Paper Handling Adjustments |
| 574-503-800 | 325-078 | P | no link | 43 Enclosures & Paper Handling Parts |
| 574-504-100 | 325-078 | D | no link | 43 5-Level Paper Tape Unit description |
| 574-504-200 | 325-078 | I | no link | 43 5-Level Paper Tape Unit Installation & Removal |
| 574-504-300 | 325-078 | TS | no link | 43 5-Level Paper Tape Unit Troubleshooting |
| 574-504-400 | 325-078 | WD | no link | 43 5-Level Paper Tape Unit Wiring |
| 574-504-500 | 325-078 | T | no link | 43 5-Level Paper Tape Unit Testing |

| | | | | |
|---------------|---------|----|----------------------|---|
| 574-504-720 | 325-078 | DR | no link | 43 5-Level Paper Tape Unit Disassembly & Reassembly |
| 574-504-750 | 325-078 | A | no link | 43 5-Level Paper Tape Unit Routine Maintenance |
| 574-504-800 | 325-078 | P | no link | 43 5-Level Paper Tape Unit Parts |
| 574-505-300 | 325-078 | TS | no link | 43 Teleprinter 5-Level Paper Tape Punch Assembly Troubleshooting |
| 574-505-400 | 325-078 | WD | no link | 43 Teleprinter 5-Level Paper Tape Punch Assembly Wiring |
| 574-505-700 | 325-078 | A | no link | 43 Teleprinter 5-Level Paper Tape Punch Assembly Adjustments |
| 574-505-710 | 325-078 | L | no link | 43 Teleprinter 5-Level Paper Tape Punch Assembly Lubrication |
| 574-505-720 | 325-078 | DR | no link | 43 Teleprinter 5-Level Paper Tape Punch Assembly Disassembly & Reassembly |
| 574-505-800 | 325-078 | P | no link | 43 Teleprinter 5-Level Paper Tape Punch Assembly Parts |
| 574-506-300 | 325-078 | TS | no link | 43 Teleprinter 5-Level Paper Tape Reader Assembly Troubleshooting |
| 574-506-400 | 325-078 | WD | no link | 43 Teleprinter 5-Level Paper Tape Reader Assembly Wiring |
| 574-506-700 | 325-078 | A | no link | 43 Teleprinter 5-Level Paper Tape Reader Assembly Adjustments |
| 574-506-710 | 325-078 | L | no link | 43 Teleprinter 5-Level Paper Tape Reader Assembly Lubrication |
| 574-506-720 | 325-078 | DR | no link | 43 Teleprinter 5-Level Paper Tape Reader Assembly Disassembly & Reassembly |
| 574-506-800 | 325-078 | P | no link | 43 Teleprinter 5-Level Paper Tape Reader Assembly Parts |
| 574-507-400 | 325-078 | WD | no link | 43 Teleprinter 5-Level Paper Tape Motor Area Wiring |
| 574-507-700 | 325-078 | A | no link | 43 Teleprinter 5-Level Paper Tape Motor Area Adjustments |
| 574-507-720 | 325-078 | DR | no link | 43 Teleprinter 5-Level Paper Tape Motor Area Disassembly & Reassembly |
| 574-507-800 | 325-078 | P | no link | 43 Teleprinter 5-Level Paper Tape Motor Area Parts |
| 574-508-300 | 325-078 | TS | no link | 43 Teleprinter 5-Level Paper Tape Power Supply Troubleshooting |
| 574-508-400 | 325-078 | WD | no link | 43 Teleprinter 5-Level Paper Tape Power Supply Wiring |
| 574-508-700 | 325-078 | A | no link | 43 Teleprinter 5-Level Paper Tape Power Supply Adjustments |
| 574-508-720 | 325-078 | DR | no link | 43 Teleprinter 5-Level Paper Tape Power Supply Disassembly & Reassembly |
| 574-508-800 | 325-078 | P | no link | 43 Teleprinter 5-Level Paper Tape Power Supply Parts |
| 574-509-400 | 325-078 | WD | no link | 43 Teleprinter 5-Level Paper Tape - Tape Handling & Enclosures Wiring |
| 574-509-700 | 325-078 | A | no link | 43 Teleprinter 5-Level Paper Tape - Tape Handling & Enclosures Adjustments |
| 574-509-800 | 325-078 | P | no link | 43 Teleprinter 5-Level Paper Tape - Tape Handling & Enclosures Parts |
| 574-510-400 | 325-078 | WD | no link | 43 Teleprinter 5-Level Paper Tape Rear Frame & Misc Wiring |
| 574-510-800 | 325-078 | P | no link | 43 Teleprinter 5-Level Paper Tape Rear Frame & Misc Parts |
| 578-500-xxx | - | EL | link | Inktronic 2101AA to 2101AB "DATASPEED" RO Printer - Changes (E.L.1537, April 1972) |
| 578-500-100TC | - | D | link | Inktronic 2101AA "DATASPEED" RO Printer Set - General Description & Operation |
| 578-500-101TC | - | D | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - General Description & Operation |
| 578-500-110TC | | D | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Recorder & Paper Transport Description & Principles of Operation |
| 578-500-111TC | - | D | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Electronic Circuits Description & Principles of Operation |
| 578-500-112TC | - | D | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Enclosures & Paper Handling Description & Principles of Operation |
| 578-500-113TC | | D | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Recorder & Paper Transport Description & Principles of Operation |
| 578-500-114TC | - | D | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Electronic Circuits Description & Principles of Operation |
| 578-500-115TC | - | D | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Enclosures & Paper Handling Description & Principles of Operation |
| 578-500-200TC | - | I | link | Inktronic 2101AA "DATASPEED" RO Printer Installation |
| 578-500-201TC | - | I | no link | Inktronic 2101AB "DATASPEED" RO Printer Installation |

| | | | | |
|-----------------------|---|------|----------------------|---|
| 578-500-300TC | - | TS | link | Inktronic 2101AA "DATASPEED" RO Printer Checkout & Troubleshooting |
| 578-500-301TC | - | TS | no link | Inktronic 2101AB "DATASPEED" RO Printer Checkout & Troubleshooting |
| 578-500-700TC | - | A,L | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Recorder & Paper Transport Adjustments & Lubrication |
| 578-500-701TC | - | A,L | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Enclosures & Paper Handling Adjustments & Lubrication |
| 578-500-702TC | - | DR | link | Inktronic 2101AA "DATASPEED" RO Printer Set Removal & Replacement of Components |
| 578-500-703TC | - | DR | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Recorder & Paper Transport Disassembly & Reassembly |
| 578-500-704TC | - | A,L | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Recorder & Paper Transport Adjustments & Lubrication |
| 578-500-705TC | - | A,L | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Enclosures & Paper Handling Adjustments & Lubrication |
| 578-500-800TC | - | P | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Recorder (DAR) & Paper Transport (DAT) Parts |
| 578-500-801TC | - | P | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Cover Base (DAB), Cover (DARC), Cabinet (DAC), & Paper Holder Parts |
| 578-500-802TC | - | P | link | Inktronic 2101AA "DATASPEED" RO Printer Set - Modules & Electrical Components Parts |
| 578-500-803TC | - | P | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Recorder (DAR) & Paper Transport (DAT) Parts |
| 578-500-804TC | - | P | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Cover Base (DAB), Cover (DARC), Cabinet (DAC), & Paper Holder Parts |
| 578-500-805TC | - | P | no link | Inktronic 2101AB "DATASPEED" RO Printer Set - Modules & Electrical Components Parts |
| 579-201-350TC | - | I, S | link | 33 TTY Stations Private Line & Data-Phone Services |
| 579-805-350TC | - | S | no link | Inktronic 2101AB "DATASPEED" RO Printer Set for DATA-PHONE Service |
| 592-801-100TC | - | D, T | link | High Speed Tape Reader Units (CX) Description & Principles of Operation |
| 592-801-700TC | - | A | link | High Speed Tape Reader Units (CX) Adjustments |
| 592-801-701TC | - | L | link | High Speed Tape Reader Units (CX) Lubrication |
| 592-801-702TC | - | DR | link | High Speed Tape Reader Units (CX) Disassembly & Reassembly |
| 592-803-100TC | - | D | link | High Speed Tape Punch Unit (DRPE) Description & Principles of Operation |
| 592-803-700TC | - | A | link | High Speed Tape Punch Unit (DRPE) Adjustments |
| 592-803-701TC | - | L | link | High Speed Tape Punch Unit (DRPE) Lubrication |
| 592-803-702TC | - | DR | link | High Speed Tape Punch Unit (DRPE) Disassembly and Reassembly |
| 592-803-800TC | - | P | link | High Speed Punch Unit (DRPE) Parts |
| 592-805-350TC (10/73) | - | MA | link | Dataspeed 2A Tape Sender Maintenance |
| 592-805-501TC (10/66) | - | A | link | Dataspeed Type 1 and Type 2 Adjustments & Troubleshooting |
| 592-808-800TC (9/66) | - | P | link | High Speed Tape Receiver Cabinet (AC) & Electrical Components Type 5 Parts |
| 592-812-800TC | - | P | link | "Telespeed" Tape Receiver Cabinet (AC) Type 4 Parts |
| 592-820-100TC | - | D | link | "Inktronic" RO Page Printer Set General Description & Operation (replaced by 578-500-100TC) |
| 592-820-110TC | - | D | link | "Inktronic" RO Page Printer Set - Recorder & Paper Transport Description & Principles of Operation (replaced by 578-500-110TC) |
| 592-820-111TC | - | D | link | "Inktronic" RO Page Printer Set - Electronic Circuits Description & Principles of Operation (replaced by 578-500-111TC) |
| 592-820-112TC | - | D | link | "Inktronic" RO Page Printer Set - Enclosures & Paper Handling Description & Principles of Operation (replaced by 578-500-112TC) |

| | | | | |
|---------------|---|-----|----------------------|---|
| 592-820-200TC | - | I | link | "Inktronic" RO Page Printer Installation (replaced by 578-500-200TC) |
| 592-820-300TC | - | TS | link | "Inktronic" RO Page Printer Checkout & Troubleshooting (replaced by 578-500-300TC) |
| 592-820-700TC | - | A,L | link | "Inktronic" RO Page Printer Set - Recorder & Paper Transport Adjustments & Lubrication (replaced by 578-500-700TC) |
| 592-820-701TC | - | A,L | link | "Inktronic" RO Page Printer Set - Enclosures & Paper Handling Adjustments & Lubrication (replaced by 578-500-701TC) |
| 592-820-702TC | - | DR | link | "Inktronic" RO Page Printer Set Removal & Replacement of Components (replaced by 578-500-702TC) |
| 592-820-703TC | - | DR | link | "Inktronic" RO Page Printer Set - Recorder & Paper Transport Disassembly & Reassembly (replaced by 578-500-703TC) |
| 592-830-800TC | - | P | link | High Speed Tape Receiver Cabinet (AC) and Modules - Parts |

Bell System Practices - notepad style

| | | | | |
|----------------|---|-----------|----------------------|---|
| P30.301 | - | T | no link | TTY Tools & Maintenance Supplies |
| P31.301 | x | I | link | TTY Equipment - Installation of RFI Filters |
| P31.302 | x | I | link | 14 TTY & Typing Reperforator - Installation of TP93885 Filter Assembly |
| P31.306 | x | I | link | 14 & 20 Transmitter-Distributor - Installation of TP92226 Filter Unit |
| P31.307 | x | I | link | 14 & 20 Reperforator - Installation of TP92229 Filter Unit |
| P31.308 | x | I | link | 14 & 20 Perforator - Installation of TP83973 Filter Unit |
| P31.309 | x | I | link | 15 & 20 TTY and 15 Perforator-Transmitter - Installation of TP93884 Filter Assembly |
| P31.313 | x | I | link | 15 Perforator-Transmitter - Installation of TP92224 Filter Unit |
| P31.314 | x | I | link | 15 Perforator-Transmitter - Installation of TP92225 Filter Unit |
| P31.315 | x | I | link | 15A, 15B, 15C Perforator-Transmitter - Installation of TP92243 Filter Unit |
| P31.316 | x | I | link | TTY Equipment - Installation of 122A Power Line Filters |
| P31.117 | x | I | link | 128C TTY Subscriber Sets - Installation of 88D Filters |
| P31.318 | x | I | link | 128B2 TTY Subscriber Sets - Installation of RFI Suppressors |
| P31.319 | x | I | link | Relay & Key Contacts - Installation of RFI Filters |
| P31.320 | x | I | link | TTY Equipment - List of Available RFI Filters |
| P31.321 | x | I | link | 26 TTY - Installation of TP92223M Filter Unit |
| P31.322 | x | I | link | 26 TTY - Installation of TP92230M Filter Unit |
| P31.323 | x | I | link | 14 & 20 Transmitter-Distributor - Installation of TP95326 Filter Unit |
| P31.324 | x | I | link | 14 TTY Equipment - Installation of TP97301M Filter Unit |
| P31.325 | x | I | link | 14 , 15, 20 TTY Equipment- Installation of TP99250M Filter Unit |
| P31.326 | x | I | link | 19 TTY - Installation of RFI Filter Unit |
| P31.328 | x | I | link | 15 & 20 TTY - Installation of TP114965 Filter Unit |
| P31.375 | x | I | link | 152A1 60-cycle Induction Suppression Unit - Installation |
| P31.401 | x | T | link | 161A1 Telegraph Station Test Set - testing Methods |
| P31.402 | x | D, MA, WD | link | 100A TTY Test Distributor - Description, Use, Maintenance, Wiring Diagram |
| P31.403 | x | D, WD | link | 1A TTY Test Set - Description, Use, Wiring Diagram |
| P31.404 | x | A | link | 1A TTY Test Set - Requirements & Adjustments |
| P31.405 | x | A, D, MA | link | 164C1 Telegraph Transmission Measuring Set - Adjustments, Use Maintenance |
| P31.410 (1/58) | x | D | link | Dot Generator and Bias Measuring Set, Description & Operating Principles |
| P31.450 | x | D, MA | link | 1A Tape Splicer - Use & Maintenance |
| P31.601 | x | D, MA, I | link | TTY Station Time Switches - Description, Maintenance, Installation |
| P31.801 | x | D | link | Auxiliary Apparatus - Common Changes & Improvements |
| P31.901 | x | D | link | Upset Duplex Method of Operating Circuits to Outlying Points |

| | | | | |
|---------|----|----------|---|---|
| P31.902 | x | I | link | Lining-up 128C Subscriber Sets using 161A1 Telegraph Station Test Set |
| P31.903 | x | A | link | 99745M Line & Selector Jack Assembly - Adjustments |
| P31.904 | x | D | link | Type A Polarential Operation at CAA Stations |
| P31.909 | x | D | link | Gill Selector (Telegraph Type) |
| P31.910 | x | D | link | Gill Selector Automatic Calling Key |
| P31.911 | x | A | link | Signal Engineering Relays |
| P31.913 | x | WD | link | XRT-90 & RT-31 TTY Tables (United Press Assoc.) - Wiring Diagrams |
| P31.917 | x | D, I, WD | link | 13-Z-1 & 13-Z-2 Telegraph Repeaters for One-Way Extension Service |
| P31.918 | x | D, I, WD | link | 13-Y-1 & 13-Y-2 Telegraph Repeaters |
| P32.001 | x | A | link | 14, 15, 20, 26 Selector Mechanism Requirements & Adjustments (see P34.005 for Model 28) |
| P32.002 | x | A | link | Special 531 Line-Test Key - Requirements & Adjustments |
| P32.003 | x | D, A | link | 14, 15, 26 Motor Control Units - Description, Requirements, & Adjustments |
| P32.004 | x | A | link | TTY Motor Units (Other Than Model 28) - Requirements & Adjustments |
| P33.001 | x | A | link | MXD & MDF Multiple Transmitter-Distributors - Requirements & Adjustments |
| P33.002 | x | A | link | MXD & MDF Multiple Transmitter-Distributors - Coding |
| P33.004 | x | WD | link | SOTUS (Sequentially Operated TTY Universal Selector) - Wiring Diagram |
| P33.005 | x | A | link | SOTUS - Sequential Selector & Panel - Requirements & Adjustments |
| P33.006 | x | MA, L | link | SOTUS - Sequential Selector & Panel - Maintenance & Lubrication |
| P33.008 | x | A, L | link | 100 Cabinets - Adjustment & Lubrication |
| P33.009 | x | WD | link | 115 & 119 Tables (used with 81-type) switching system - Wiring Diagram |
| P33.010 | x | WD | link | 100 Cabinets - Wiring Diagram |
| P33.012 | x | A | link | Cam-Operated Distributor - Requirements & Adjustments |
| P33.013 | x | I | link | TTY Apparatus - Preparation for Installation |
| P33.016 | x | WD | link | XRT-205 & XRT-206 Tables - Wiring Diagram |
| P33.030 | x | D, A, L | link | WM200 On-Line Word Counter - Description, Adjustment, Lubrication |
| P33.025 | x | D | link | SCI-1 TTY Signal Condition Indicator - Description & Use |
| P33.301 | x | WD | link | 1 Multiple Transmitter & Base - Wiring Diagram |
| P33.901 | x | D | link | 81C1 Switching System - SOTUS Bypass & Alarm Arrangement |
| P34.001 | x | Index | link | 28 Equipment - Alphabetical Index to BSP P34. Sections |
| P34.004 | x | A | link | 28 TTY Motors & Governors - Requirements & Adjustments |
| P34.005 | xx | A | link | 28 TTY Selector Mechanism - Requirements & Adjustments |
| P34.010 | - | MA | no link | 28 TTY Cleaning Instructions |
| P34.012 | - | I | no link | 28 TTY Unpacking & Assembly |
| P34.101 | xx | Index | link , link | 28 TTY - List of Units & Auxiliary Features |
| P34.102 | x | Index | link | 28 ASR - List of Units |
| P34.103 | x | Index | link | 28 Distributors and Transmitter-Distributor Units, Bases, & Mounting and Cover Assemblies - List of Units |
| P34.104 | xx | Index | link | 28 Typing Reperforator & Reperforator-Transmitter Set - List of Units & Auxiliary Features |
| P34.105 | x | Index | link | 28 Cabinets, Tables, Covers, & Housings - List of Units |
| P34.106 | x | Index | link | 28 Motor Units & Sets of Gears - List of Units |
| P34.301 | xx | WD | link | 28 TTY (typing unit, motor unit, base, & sequence selector) - Wiring Diagram |
| P34.302 | xx | WD | link | 28 KSR & RO TTY Cabinets and Electrical Service Units - Wiring Diagram |
| P34.303 | x | WD | link | 28 Distributors - Wiring Diagrams |
| P34.304 | x | WD | link | 28F** Cabinet with 28C Electrical Service Unit - Wiring Diagrams |
| P34.305 | x | WD | link | 28 Reperforator-Transmitter Sets & Units - Wiring Diagrams |

| | | | | |
|---------|----|----|---|---|
| P34.306 | xx | WD | link | 28B & 28C Transmitter-Distributor Units - Wiring Diagrams |
| P34.307 | x | WD | link | 28 Perforator-Transmitter-Base - Wiring Diagrams |
| P34.308 | x | WD | link | 28 Typing Reperforator Units & Bases - Wiring Diagrams |
| P34.309 | xx | WD | link | 28D, 28D-1, & 28K Electrical Service Units for 28 Type Typing Reperforator - Wiring Diagram |
| P34.310 | x | WD | link | 28A** Cabinet for Four Typing Reperforators- Wiring Diagrams |
| P34.311 | x | WD | link | 4A Tape Winder - Wiring Diagram |
| P34.312 | x | WD | link | 28A Tape Splicer- Wiring Diagrams |
| P34.313 | x | WD | link | 28A-1 Cabinet for Six Typing Reperforators - Wiring Diagrams |
| P34.314 | x | WD | link | 28G & 28H TTY Cabinets - Wiring Diagrams |
| P34.315 | xx | WD | link | 28E, 28F, 28G, 28H, and 28LA Transmitter-Distributor Units - Wiring Diagrams |
| P34.316 | x | WD | link | 28 Sequence Selector Units - Wiring Diagrams |
| P34.317 | x | WD | link | 28F, 28F-1, 28H, & 28J Electrical Service Units- Wiring Diagrams |
| P34.318 | x | WD | link | 28G & 28G-1 Electrical Service Units- Wiring Diagrams |
| P34.320 | xx | WD | link | 28 Transmitter-Distributor Bases & 28 Transmitter-Distributor Housing - Wiring Diagrams |
| P34.321 | xx | WD | link | 28G & 28H Transmitter-Distributor Mounting & Cover Assemblies- Wiring Diagrams |
| P34.322 | x | WD | link , link | 28A & 28B Reperforator-Transmitter Adapter Unit- Wiring Diagrams |
| P34.323 | x | WD | link , link | 28 Apparatus Cabinets - Wiring Diagrams |
| P34.324 | x | WD | link | 28F Cabinet with 28F-1 or 28G Electrical Service Unit - Wiring Diagrams |
| P34.325 | x | WD | link | 28L, 28P, & 28P-1 Electrical Service Units - Wiring Diagrams |
| P34.326 | x | WD | link | 28A Mounting & Cover Assembly - Wiring Diagrams |
| P34.327 | x | WD | link | 28 Receiving Selector Unit - Wiring Diagrams |
| P34.350 | x | WD | link | 28LA Electrical Service Unit - Wiring Diagrams |
| P34.351 | x | WD | link , link | 28LC & 28LC-1 Electrical Service Units - Wiring Diagrams |
| P34.352 | x | WD | link | 28LB Electrical Service Unit - Wiring Diagrams |
| P34.353 | x | WD | link | 28LD & 28LD-1 Electrical Service Unit - Wiring Diagrams |
| P34.354 | x | WD | link , link | 28LA Apparatus Cabinet - Wiring Diagrams |
| P34.355 | x | WD | link | 28 Tape Typing Units, Tape TTY Bases, & Tape TTY Covers - Wiring Diagrams |
| P34.356 | x | WD | link | 28LB TTY Cabinet - Wiring Diagrams |
| P34.359 | x | WD | link | 28H Reperforator Unit - Wiring Diagrams |
| P34.401 | xx | DR | link | 28 TTY (KSR & RO) Disassembly and Reassembly |
| P34.402 | x | DR | link | 28 Typing Unit - Disassembly and Reassembly |
| P34.403 | xx | DR | link | 28 Motor Unit Disassembly and Reassembly |
| P34.404 | x | DR | link | 28 TTY Base (KSR & RO) - Disassembly and Reassembly |
| P34.405 | xx | DR | link | 28 TTY Cabinet - Disassembly and Reassembly |
| P34.406 | xx | DR | link | 28 Electrical Service Unit - Disassembly and Reassembly |
| P34.410 | x | DR | link | 28 Sequence Selector Unit - Disassembly and Reassembly |
| P34.412 | x | DR | link | 28B & 28C Transmitter-Distributor Units - Disassembly and Reassembly |
| P34.413 | x | DR | link | 28C Transmitter-Distributor Unit - Disassembly and Reassembly |
| P34.414 | x | DR | link | 28E & 28H Transmitter-Distributor Units - Disassembly and Reassembly |
| P34.415 | x | DR | link | 28F, 28G, 28G-1, & 28LA Transmitter-Distributor Units - Disassembly and Reassembly |
| P34.418 | x | DR | link | 28 Multiple-mounted, Multicontact Transmitter-Distributor Set - Disassembly and Reassembly |
| P34.420 | x | DR | link | 28 Reperforator-Transmitter Set, Unit, & Stand - Disassembly and Reassembly |
| P34.422 | x | DR | link | 28 Nontyping Reperforator - Disassembly and Reassembly |

| | | | | |
|---------|-----|-------|----------------------|--|
| P34.425 | x | DR | link | 28 Typing Reperforator Base, Keyboard, & Cover - Disassembly and Reassembly |
| P34.430 | x | DR | link | 28 Perforator-Transmitter-Base - Disassembly and Reassembly |
| P34.435 | x | I | link | 28 ASR - Assembly |
| P34.437 | x | I | link | 28 ASR - Auxiliary Typing Reperforator Installation |
| P34.440 | x | DR | link | 28 Self-Contained Transmitter-Distributor Sets - Disassembly and Reassembly |
| P34.441 | x | I | link | 28 Wall Mounted TTY (KSR & RO) Installation |
| P34.460 | xx | I | link | 28 Stuntbox - Installation of Function Parts |
| P34.461 | x | T | link | 28 Stuntbox Mechanisms and Principles of CDC Assignments for a Data-Pone System |
| P34.500 | x | MA | link | 28 TTY Maintenance Inspections & Test |
| P34.501 | x | L | link | 28 Typing Unit - Lubrication |
| P34.502 | x | L | link | 28 Motor Unit - Lubrication |
| P34.503 | x | L | link | 28 TTY Base (KSR & RO) - Lubrication |
| P34.504 | x | L | link | 28 TTY Cabinet - Lubrication |
| P34.505 | x | L | link | 28 Electrical Service Unit - Lubrication |
| P34.509 | xx | L | link | 28 Tape Typing Unit & 28 Tape TTY Base & Cover - Lubrication |
| P34.510 | xxx | L | link | 28 Distributor - Lubrication |
| P34.511 | xx | L | link | 28B & 28C Transmitter-Distributor Units - Lubrication |
| P34.513 | xx | L | link | 28E and 28H-type Transmitter Distributor Units - Lubrication |
| P34.514 | xx | L | link | 28F, 28G, 28G-1, and 28LA Transmitter-Distributor Units - Lubrication |
| P34.518 | xx | L | link | 28 Multiple-mounted, Multicontact Transmitter-Distributor Set - Lubrication |
| P34.520 | xx | L | link | 28 Reperforator-Transmitter Unit - Lubrication |
| P34.521 | xx | L | link | 28 Reperforator-Transmitter Stand - Lubrication |
| P34.522 | xx | L | link | 28 Single-Magnet Nontyping Reperforator - Lubrication |
| P34.525 | xx | L | link | 28 Single-Magnet Typing Reperforator - Lubrication |
| P34.526 | xx | L | link | 28 Typing Reperforator Cover - Lubrication |
| P34.527 | xx | L | link | 28 Typing Reperforator Base (RO and KSR Base) - Lubrication |
| P34.530 | xx | L | link | 28 Perforator-Transmitter-Base - Lubrication |
| P34.532 | xx | L | link | 28 Multimagnet Nontyping Reperforator - Lubrication |
| P34.535 | xx | L | link | 28 Sequence Selector Unit & Base - Lubrication |
| P34.540 | xx | L | link | 28 Self-Contained Transmitter-Distributor Sets (Single- & Multi-Contact) - Lubrication |
| P34.541 | xx | L | link | 28 Transmitter-Distributor Base Answer-Back Mechanism - Lubrication |
| P34.550 | xx | L | link | 28 Apparatus Cabinet - Lubrication |
| P34.601 | x | L | link | 28 TTY - Lubrication |
| P34.602 | xx | L | link | 28C Transmitter-Distributor Unit - Lubrication |
| P34.603 | xx | L | link | 28B Transmitter-Distributor Unit - Lubrication |
| P34.604 | xx | L | link | 28E & 28H Transmitter-Distributor Unit - Lubrication |
| P34.607 | x | L | link | 28A, 28B, 28C Reperforator-Transmitter Units - Lubrication |
| P34.608 | x | L | link | 28A Perforator-Transmitter-Base - Lubrication |
| P34.609 | xx | A | link | 28 Tape Typing Unit & 28 Tape TTY Base & Cover - Requirements & Adjustments |
| P34.610 | xx | Index | link | 28 TTY General Information & Index |
| P34.611 | xx | A | link | 28 TTY Motor Units - Requirements & Adjustments |
| P34.612 | xx | A | link | 28 Typing Unit - Requirements & Adjustments |
| P34.613 | xx | A | link | 28 Sequence Selector Unit & Base - Requirements & Adjustments |
| P34.614 | xx | A | link | 28 TTY Cabinets - Requirements & Adjustments |

| | | | | |
|---|--------|----------|---|---|
| P63.615 | xx | A | link | 28 TTY Equipment Auxiliary Features - Requirements & Adjustments |
| P34.616 | xx | A | link | 28 Reperforator-Transmitter Stand - Requirements & Adjustments |
| P34.617 | xx | D, A, L | link | 28 Tape Splicer - Description, Use, Adjustments, Lubrication |
| P34.618 | x | A | link | 28 Horizontal Tabulator Mechanism - Requirements & Adjustments |
| P34.619 | x | A | link | 28 TTY Sprocket-Feed Mechanism - Requirements & Adjustments |
| P34.620 | x | A | link | 28 TTY Keyboard & Base (KSR & RO Base) - Requirements & Adjustments |
| P34.622 | x | A | link | 28 Electrical Service Unit - Requirements & Adjustments |
| P34.630 | x | A | link | 28 Distributor - Requirements & Adjustments |
| P34.631 | x | A | link | 28C Transmitter-Distributor Unit - Requirements & Adjustments |
| P34.632 | x | A | link | 28B Transmitter-Distributor Unit - Requirements & Adjustments |
| P34.633 | x | A | link | 28E & 28H-Type Transmitter-Distributor Units - Requirements & Adjustments |
| P34.634 | x | A | link | 28F, 28G, 28G-1, & 28LA Transmitter-Distributor Units - Requirements & Adjustments |
| P34.635 | x | A | link | 28 Reperforator-Transmitter Unit & Set - Requirements & Adjustments |
| P34.637 | x | A | link | 28 Multiple-mounted Transmitter-Distributor Sets (Single- & Multi-Contact) - Requirements & Adjustments |
| P34.638 | x | A | link | 28 Self-Contained Transmitter-Distributor Sets (Single- & Multi-Contact) - Requirements & Adjustments |
| P34.641 | x | A | link | 28 Transmitter-Distributor Base Answer-Back Mechanism - Requirements & Adjustments |
| P34.650 | x | A | link | 28 Single-Magnet Nontyping Reperforator - Requirements & Adjustments |
| P34.651 | x | A | link | 28 Single-Magnet Typing Reperforator - Requirements & Adjustments |
| P34.652 | x | A | link | 28 Typing Reperforator Base (RO and KSR Base) - Requirements & Adjustments |
| P34.654 | x | A | link | 28 Typing Reperforator Cabinet & Cover - Requirements & Adjustments |
| P34.660 -addendum | x - | A A | link link | 28 Perforator-Transmitter-Base - Requirements & Adjustments |
| P34.662 | x | A | link | 28 Multimagnet Nontyping Reperforator - Requirements & Adjustments |
| P34.665 | x | A | link | 28 Apparatus Cabinet - Requirements & Adjustments |
| P34.805 | x | D, O, WD | link | 28A & 28B Stroboscopic Test Sets - Description, Operation, & Wiring Diagram |
| P35.301 to P35.652 | - | WD, A | link | 14 TTY Equipment -Wiring Diagrams and Adjustments <i>- thanks to Don House</i> |
| P35.332 | x | WD | link | 14A Reperforator Unit & Base Plate - Wiring Diagrams |
| P35.651 | x | A | link | 14 Typing Reperforator - Requirements & Adjustments |
| P39.610 | x | A | link | 20 Typing Unit - Requirements & Adjustments |
| P39.620 | x | A | link | 20 TTY Keyboard - Requirements & Adjustments |
| P40.101 | xx | D | link , link | 26 TTY Description of Apparatus |
| P40.301 | xxx | WD | link , link | 26 TTY - Wiring Diagrams |
| P40.461 | xx | I | link , link | 26 TTY - Installation of Motor Control Parts |
| P40.601 | xxxx | A | link , link | 26 TTY - Lubrication |
| P40.610 | xxx | A | link , link | 26 TTY Typing Unit - Requirements & Adjustments |
| P40.620 | xx | A | link , link | 26 TTY Base - Requirements & Adjustments |
| P40.901 | xxx | I | link | 26 TTY - Installation of 90964M Line Relay |
| P40.902 | xx | I | link | 26 TTY - Installation of 90989M Parts for Break Lock |
| P40.903 | xxx | I | link | 26 TTY - Installation of 93197M & 93198M Power Switch Parts |
| P40.904 | xx | I | link | 26 TTY - Prevention of Rubber Cord Deterioration |
| Division P70 - Teletypewriter Apparatus - thanks to Jim Haynes | | | | |
| P70.000.1 | - | index | link | Numerical Index and Checking List Division P70 - TTY Apparatus |
| P70.001 | - | D | no link | Description of 14 Tape Printers and Associated Apparatus |
| | | | | |

| | | | | |
|----------------|---|-------|----------------------|---|
| P70.002 | - | D | no link | Description of 14 Reperforator and Reperforator Set |
| P70.003 | - | D | no link | 14 Typing Reperforators |
| P70.004 | - | D | no link | Description of Operation of 14 tape Perforator |
| P70.005 | - | D | no link | Description of Operation of 14 Typing Reperforator |
| P70.006 | - | D | no link | Description o14 Reperforator Transmitter |
| P70.011 | - | D | no link | Description o15 Teletypewriters and Accessories |
| P70.012 | - | D | no link | Improved 15 TTY with holding magnet selector and simplified apparatus units |
| P70.013 | - | D | no link | Description of Operation of No. 15 Teletypewriter |
| P70.014 | - | D | link | Description of Operation of No. 15 Perforator Transmitter (Formerly numbered AB84.140) |
| P70.021 | - | D | link | Description of Operation of No. 14 and No. 20 Transmitter Distributors (Formerly numbered AB84.138) |
| P70.034 | c | D, T | link | 28 TTY Description & Operating Principles - <i>thanks to Bob Erickson & James Tanton</i> |
| P70.035 (3/56) | - | D | link | 28 Selective Calling Stuntbox Description and Operating Principles |
| P70.036 | - | D | no link | 83B1 TTY Selective Calling System HDX-transmitter start with the 28 stuntbox |
| P70.037 | - | D | link | 28A sequence selector (for 83B1 selective calling system) - Description |
| P70.038 | - | D | no link | pushbutton calling circuit for the 83B1 selective calling system - description and principles |
| P70.050 | - | D | no link | 1A typing reperforator cabinet |
| P70.051 | - | D | no link | multiple transmitter units and bases |
| P70.052 | - | D | no link | 105A transmitter table |
| P70.053 | - | D | no link | sequentially operated teletypewriter universal selector (SOTUS) |
| P70.053.73 | - | D | no link | description and thory of operation of B36 sequential selector |
| P70.054 | - | D | no link | drawings for teletypewriter stations |
| P70.055 | - | D | no link | sescription of 114A multiple reperforator transmitter |
| P70.251 | - | D | no link | TTY Stations - Power Drain |
| P70.253 | - | Misc | link | Stationery for Teletypewriter Systems |
| P70.253 | - | Misc. | link | Stationery for Teletypewriter Systems (thanks to Don House) |
| P70.302 | - | D | no link | teletypewriter subscriber sets and control panels - application for various TTY services |
| P70.401 | - | D | no link | 67A2 teletypewriter switchboard |
| P70.500 | - | D | link | Engineering and Operating Considerations Involved in Furnishing Telegraph Circuits to Western Union Telegraph Co. under Special Contract (Also numbered AB85.025 and E45.572) |
| P70.601 | - | D | no link | 81C1 Teletypewriter Switching System - Description |
| P70.602 | - | D | no link | engineering considerations - 81C1 Teletypewriter Switching System |
| P70.603 | - | D | no link | 81C1 Teletypewriter Switching System - Outlying Stations - Description |
| P70.604 | - | D | link | 81D1 Teletypewriter Switching System - Description |
| P70.604.01 | - | D | link | Improvements in 81D1 Teletypewriter Switching System, including 100-speed operation |
| P70.605.00 | - | D | link | Telegraph Systems 81D1 Teletypewriter Switching System -Outlying Station Circuits -Relay Function Charts |
| P70.605.01 | - | D | no link | Telegraph Systems 81D1 Teletypewriter Switching System - station control circuit SOTUS unit and relay functions |
| P70.605.02 | - | D | no link | Telegraph Systems 81D1 Teletypewriter Switching System - automatic address circuit relay functions |
| P70.606.00 | - | D | link | Telegraph Systems 81D1 Teletypewriter Switching System -Switching Center circuits -Relay Function Charts |
| P70.607 | - | D | no link | 81D1 Teletypewriter Switching System - instructions for patching circuit units |

| | | | | |
|--|---|-------|----------------------|--|
| | | | | and machines at the switching center |
| P70.620 | - | D | no link | 84A1 teletypewriter switching unit - description and operating principles |
| P70.703 | - | D | no link | Operation of the teletypewriter, perforator, and transmitter-distributor |
| P70.703.1 | - | D | no link | Description and training material, operation of the teletypewriter - 28 type |
| P70.707 | - | D | no link | 118 Type Telegraphic Transmission Measuring Sets |
| P70.901 | - | D | no link | SRX-2C selective remote switching equipment - description, installation, and maintenance |
| P70.902 | - | D | no link | Teletypewriter automatic dispatch system for private line teletypewriter service |
| P70.905 | - | D | no link | 600-1000 word speed V-F Carrier Telegraph System Channel Terminal |
| P70.906 | - | D | no link | 600-1000 word speed V-F Carrier Telegraph System Channel Terminal |
| P70.907 | - | D | no link | Semiautomatic Tape Relay System Belfast General Description |
| P70.908.00 | - | D | no link | Semiautomatic Tape Relay System Belfast sequence charts based on WA-12500-SD |
| P70.909.10 | - | D | no link | Semiautomatic Tape Relay System Belfast outlying station sequence charts based on WD-11642-SD |
| P70.909.20 | - | D | link | Semiautomatic Tape Relay System Belfast sequence charts based on WD-12773-SD |
| P70.911 | - | D | no link | 83B1 TTY selective calling system circuit for 14G reperforator transmitters at automatic relay station |
| P70.912 | - | D | no link | Modified 83B1 selective calling system for airlines reservations using Remington-Rand Univac equipment - description and operating principles |
| P70.915 | - | D | link | 14 Transmitter-Distributor control circuit - description, operation, and test procedure |
| P70.916 | - | D | link | Connect 28 TTY transmitter start circuit - description, operation, and test procedure |
| P70.917 | - | D | link | Circuit and 28 Checking Arrangement - description, operation, and test procedure |
| P70.918 | - | D | no link | Sequentially Controlled Automatic Transmitter Start Systems (SCATS) - description, operation, and test procedure |
| P70.919 | - | D | no link | Transmitter Start (SCATS) control circuit for 14 TD operated by 28 stunt box contacts |
| P70.920 | - | D | no link | Count circuit for outlying stations (SCATS) |
| P70.921 | - | D | no link | 28ASR teletypewriter arranged for automatic transmitter start control (Half Duplex Operation) |
| P70.923 | - | D | link | Transmitter control arrangement master station fast inter-line non-printing activate control "FINAC" - description, operation, and test procedure |
| P70.924 | - | D | link | 28ASR TTY full duplex outlying station arranged for fast inter-line non-printing activate control "FINAC" - description, operation, and test procedure |
| P70.925 | - | D | link | 28ASR TTY full duplex outlying station arranged for fast inter-line non-printing activate control "FINAC" - description, operation, and test procedure |
| P70.926 | - | D | link | Automatic start and coded answer-back checking system - Air Defense Command, Alert No, 1 Network (Teletype) |
| P71.907 | - | D | no link | 600 wpm Tape System |
| P90 - Teletypewriter Station Installation Drawings - thanks to Jim Haynes | | | | |
| P90.001 to P90.999 | c | Misc. | link | Various still to be cataloged (thanks to Jim Haynes) |
| P90.001 | - | index | link | Numerical Index and Checking List - P90 Teletypewriter Station Installation Drawings |
| P90.014 | - | I | link | 14B Table - TWP service with 128B2 TTY Sub. Set |
| P90.015 | - | I | link | 15N Table - Private Line Service with 128B2 TTY Sub. Set |
| P90.016 | - | I | no link | 15N Table - 15B TTY Table Door |
| P90.017 | - | I | link | 19A Table - TWP service with 128B2 Sub. Set |
| P90.018-A | - | I | no link | 128B2 or 130B1 TTY Sub. St - floor mounting stand |

| | | | | |
|--------------|---|---|----------------------|--|
| P90.018 | - | I | link | 128B2 or 130B1 TTY Sub. St -wall mounting |
| P90.019 | - | I | link | 15P or 26P table with 15C TTY table door |
| P90.020 | - | I | no link | 15P or 26P table |
| P90.021 | - | I | link | 5P, 26A, 26B, and 26P tables - location of Fustat mounting |
| P90.022 | - | I | link | Attended TWX service -XRT200 or XRT201 TTY table |
| P90.023 | - | I | link | Attended TWX service -XRT205 or XRT206 TTY table |
| P90.024 | - | I | link | 128C3 TTY Sub. Set - Attended and Unattended TWX Service - 15 Type TTY and 15N Table |
| P90.025 | - | I | link | 128C3 or 130B1 TTY Sub. Set - For Attended and Unattended TWX Service and 130B1 TTY Sub. Set for Private Line Service 19 TTY Set on 19A TTY Table. |
| P90.026 | - | I | no link | XT201 Table Details for Equipping Table with Fixed Mounting for Tape-Take-Off Reel and Guard for Tight Tape Ann. |
| P90.027 | - | I | link | 14 TTY - 14B Table - Private Line Service with 130B1 or 130B2 TTY Sub. Set. |
| P90.028 | - | I | no link | TTY Station Assembly - 130B1 TTY Subscriber Set Private Line Service or Attended or Unattended TWX Service - 15 Type TTY and 15N Table |
| P90.031 | - | I | link | TTY Station Assembly in 28B TTY Cabinet Private Line Service 128B2 or 130B1 TTY Sub. Set with or without Metal Cabinet. |
| P90.032 | - | I | link | TTY Station Assembly 28B TTY Cabinet PLS Statton without TTY Sub. Set or Attended or Unattended Local TWX Station. |
| P90.033 | - | I | link | TTY Station Assembly 28B TTY Cabinet Attended TLX Stations 128C2, 128C3 or 130B1 TTY Sub. Set with or without Metal Cabinet |
| P90.034 | - | I | link | TTY Station Assembly 28B TTY Cabinet Unattended TLX Stations with 128C2, 128C3 or 130B1 TTY Sub. Set without Metal Cabinet. |
| P90.035 | - | I | link | TTY Station Assembly 28B TTY Cabinet Attended TLX Stations 130C1 TTY Sub. Set. |
| P90.036 | - | I | link | TTY Station Assembly 28B TTY Cabinet Unattended TLX Stations 130C1 TTY Sub. Set. |
| P90.037 | - | I | link | TTY Stations Assembly 28B TTY Cabinet Private Line Service 130C1 TTY Sub. Set. |
| P90.038 | - | I | no link | 130B2 TTY Sub. Set for Attended and Unattended TWX Service and Private Line Service 19 TTY Set on 19A TTY Table. |
| P90.040 | - | I | link | 120C2 & 120D1 TTY sub. sets unattended local twx service 19 TTY on XRT205 or XR206 table |
| P90.042 | - | I | link | Attended & unattended TWX service with `18C2 or 128C3 TTY Sub. Set on XRT205 or XRT206 table |
| P90.045 | - | I | link | Local attended TWZ service - 14 Or 15 Teletypewriter - XRT200 or XRT201 table |
| P90.046 | - | I | link | 28ASR in 28G40 cabinet - attended or unattended TWX service - 128C3 TTY Sub. Set |
| more to come | | | | |
| P90.311 | - | I | no link | 14 TTY - 14B Table - TWP Service- 128B2 TTY Subscriber Set - Single Loop Operation with Emergency TTY. 115 V A-C . |
| P90.312 | - | I | no link | 14 TTY - 14B Table - TWP Service- 128B2 TTY Subscriber Set - Two Loop Operation Magnet Receiving Without Emergency TTY. |
| P90.313 | - | I | no link | 130B1 TTY Subscriber Set - Private Line Service - 14 TTY and 14B or XRT 200 TTY Table |
| P90.315 | - | I | no link | Nos. 14 and 20 Trans. Dist. on XRT 200 Table, Power and Start Magnet Control, Modification of Table |
| P90.316 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Private Line Service 14 TTY and 14B or XRT 200 TTY Table |
| P90.511 | - | I | link | 15 TTY - 15N Table - TWP Service - 128B2 TTY Subscriber Set - Two Loop Operation - Magnet Receiving |
| P90.512 | - | I | link | |

| | | | | |
|---------|---|---|----------------------|--|
| | | | | 15 TTY - 15N Table - TWP Service - 128B2 TTY Subscriber Set - Single Loop Operation with Emergency TTY |
| P90.513 | - | I | no link | Attended TWX Service - 15 TTY - XRT200 or XRT201 Table over a Local Line or an Open Loop and a MultiSection Line to TTY Switchboard No. 1, 1A, 3A, 3C or 5 or to TTY Line Concentrating Unit No.101A, 101B or 102A, 120V, A-C or D-C |
| P90.514 | - | I | link | Attended TWX Service over a Local Line to TTY Switchboards No. 1, 1A, 3A, 3C 5 or Open Line TLT Board or to TTY Line Concentrating Units No. 101A, 101B or 102A or over Multi- Section Line Terminating in a Loop 15 TTY on XRT200 or XRT201 TTY Table 120V, A-C or D-C |
| P90.515 | - | I | link | 128C3 TTY Sub. Set - Attended TWX Service - 15N TTY Table |
| P90.516 | - | I | link | 128C3 TTY Sub. Set - Unattended TWX Service - 15N TTY Table |
| P90.517 | - | I | no link | TTY Station Wiring 130B1 TTY Sub. Set - Attended TWX Service - 15 TTY and 15N Table. |
| P90.518 | - | I | no link | 130B1 TTY Sub. Set - Unattended TWX Service - 15 TTY and 15N, XRT200 or XRT201 TTY Table. |
| P90.519 | - | I | no link | 130B1 TTY Sub. Set - Private Line Service - No. 15 TTY and 15N, XRT200 or XRT201 TTY Table |
| P90.520 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Private Line Service 15 TTY and 15N XRT200 or XRT201 Table |
| P90.521 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Attended TWX Service 15 TTY and 15N XRT200 or XRT201 Table |
| P90.522 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Unattended TWX Service 15 TTY and 15N, XRT200 or XRT201 Table |
| P90.523 | - | I | no link | 128C3 TTY Sub. Set Attended TWX Service XRT200 or XRT201 TTY Table |
| P90.524 | - | I | no link | 128C3 TTY Sub. set Unattended TWX service XRT200 or XRT201 TTY Table |
| P90.711 | - | I | link | 19 TTY - 19A table, 128B2 sub set, single loop, TWP service |
| P90.713 | - | I | link | 19 TTY - 19A table, 128C3 sub set, attended TWX service |
| P90.714 | - | I | link | 19 TTY - 19A table, 128C3 sub set, unattended TWX service |
| P90.715 | - | I | no link | 130B1 TTY Sub . Set - Attended TWX Service - 19 TTY Set on 19A XRT205 or XRT206 TTY Table. |
| P90.716 | - | I | no link | 130B1 TTY Sub. Set - Unattended TWX Service - 19 TTY Set on 19A XRT205 or XRT206 TTY Table |
| P90.717 | - | I | no link | 130B1 TTY Sub. Set - Private Line Service - 19 TTY Set on 19A, XRT205 or XRT206 TTY Table |
| P90.718 | - | I | no link | Attended TWX Service, 19 TTY Set on XRT205 or XRT206 Table over a Local Line, or an Open Loop and a MultiSection Line to TTY Switchboards No. 1, 1A, 3A, 3C or 5 or to 101A, 101B or 102A TTY Line Cone . Units or to an open Loop TLT BD 120V. A-C or D-C Power Supply. |
| P90.719 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Attended TWX Service 19 TTY Set on 19A, XRT205 or XRT206 TTY Table |
| P90.720 | - | I | no link | Telegraph Systems - 19ASR TTY - 81C1 and 81D1 TTY Switching System - Outlying Stations - Control by Station Control Circuit (Application Schematic) |
| P90.722 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Private Line Service 19 TTY Set on 19A XRT205 or XRT206 TTY Table |
| P90.723 | - | I | no link | TTY Station Wiring 130B2 TTY Sub. Set Unattended TWX Service 19 TTY Set on 19A XRT205 or XRT206 TTY Table. |
| P90.724 | - | I | no link | 128C3 TTY Sub , Set Attended TWX Service 19 TTY and XRT205 or XRT206 TTY Table. |
| P90.725 | - | I | no link | 128C3 TTY Sub. Set Unattended TWX Service XRT205 or XRT206 TTY Table. |
| P90.801 | - | I | no link | No. 20 TTY Service Arrangements for Automatic Transmission 6 Unit Perforator and No . 20 Trans. - Dist. on XRT201 Table and No. 20KSR TTY on XRT200 Table Break Control of Trans.-Dist. Optional |
| P90.903 | - | I | no link | No. 20 TTY - 6 Unit Perforator and No. 20 Trans. -Dist. on XT39, XT201, or 19A TTY Table and No. 20KSR on 15A, 15N, 15P or XRT200** TTY Table |

| | | | | |
|----------------------------|---|------|----------------------|--|
| P90.904 | - | I | link | 15TTY - 15N table, 15B control panel, attended TWX service |
| P90.905 | - | I | link | 15TTY - 15N table, 15F control panel, attended TWX service |
| P90.909 | - | I | link | 15 TTY - 15N table, 120C1 sub set, unattended TWX service |
| P90.911 | - | I | no link | TTY Service - 19A Table - 14 Type Typing Reperforator and 14 Type Transmitter-Distributor - Remote Control of Transmitter-Distributor with Manual Switch of Units - 110 Volt A-C 60 Cycle. |
| more to come | - | - | - | - |
| P90.954 | - | I | link | 19 TTY - single operation, 15C base, XRT205 table |
| P90.954 (color) | - | I | link | 19 TTY - single operation, 15C base, 19A table |
| P91.075 | - | I | link | 28 TTY - private line, magnet operation |
| P91.101 | - | I | link | 28 TTY - 28B cabinet, relay operation, attended TWX |
| P91.118 | - | I | link | 28 TTY - 28B cabinet, 128C2 sub set, attended TWX |
| P91.120 | - | I | link | 28 TTY - 28B cabinet, 128C3 sub set, attended TWX |
| P91.121 | - | I | link | 28 TTY - 28B cabinet, 128C3 sub set, unattended TWX |
| P91.201 | - | I | link | 28 TTY - 28B cabinet, relay operation |
| P91.205 | - | I | link | 28 TTY - 28B cabinet, private line, 128B2 sub. set, single loop |
| P91.812 | - | WD | link | 128B2 - arrangement to keep line closed when power is removed |
| P96.022 | - | WD | link | 15 TTY Wiring Diagram (customer provided table) |
| P98.045 P98.081-P98.090 | - | misc | link | Misc M15 and M14 |

Wiring Diagrams - [See This Page](#)

Specifications - thanks to Jim Haynes, Tom Tillson, and others

| | | | | |
|---------------|---|-------|----------------------|--|
| S-151 | - | P | link | Checklist of parts in M26 spare parts kit |
| 570-013-010TC | - | Index | link | List of "S" Specifications for M28 and later |
| 4797S (1/29) | - | M | link | 12 Page Printer Manual |
| 5017S | - | I | link | Mounting Model 15 printer motor, typing and keyboard units to the base unit |
| 5026S (1/56) | - | I | link | Converting a M15 friction feed printer to a sprocket feed printer |
| 5168S (12/48) | - | I | link | Installing the 93884 set of filter parts on M15 or M20 keyboards and M15 perforator-transmitters |
| 5186S | - | A | link | 17 Radio Distributor Adjustment |
| 5187S | - | I | link | Using the portable reperforator tables (RT-33 or RT-34) in connection with the metal table (XRT-107) of the Model 19 type set |
| 5220S | - | I | link | Instructions for installing, adjusting, and catalog information of the function arms used on the function arm control assembly of the Teletype Model 26 type wheel page printer |
| 5226S | - | D | link | Description of Teletype Model 17 radio printer system using 7-line character pattern |
| 5229S | - | I | link | Instructions for installing and adjusting the 98070 upper case "H" motor control set of parts on Model 26 printer operating on .060 ampere line current |
| 5230S | - | I | link | Instructions for installing the 97451, 98137, 101481, 101389, 106922 or 113751 set of parts to provide end of tape stop mechanism and to handle fully perforated, chadless or spliced chadless tape on a Model 14 transmitter distributor (5 unit) also the 113776 set of parts to provide end of tape stop mechanism on a Model 20 transmitter distributor (6 unit) |
| 5237S (7/53) | - | S | link | Description, adjustments, and parts catalog of the Teletype REC10 rectifier |
| 5269S (6/54) | - | S | link | Description, adjustments, and ordering information - Teletype REC13 rectifier |
| 5270S | - | I | link | Instructions for installing the 99971 resistor assembly on all-metal 15 and 26 type printer tables and all-metal perforator and transmitter distributor tables |
| 5273S | - | I | link | Instructions for installing the 103514 resistor unit on XRT-96 or XRT-107 tables |

| | | | | |
|---------------|---|------|--|--|
| | | | | for operation of the 19 type set on 110 volt 25 cycle current |
| 5286S | - | A | link | 17 Rectifier REC17 Adjustments |
| 5287s | - | I | link | 17 Mounting Rectifier REC17 on Table SXT1 |
| 5288s | - | L | link | Lubrication supplies and directions for use |
| 5298s | - | A, L | link | Instructions for adjusting, lubricating and preparing Model 17 radio printers for operation |
| 5299s | - | S | link | Description, adjustments, and parts catalog of the Teletype REC14 rectifier |
| 5316s | - | S | link | Description, adjustments, and parts ordering information Teletype model REC20 rectifier |
| 5345s | - | S | link | U.S. Army Signal Corps Printers TG-7-A, TG-7-B and TG-37-B With Chests CH-50-A and CH-50-B and Chests CH-62-A and CH-62-B |
| 5346s | - | I | link | Instructions for modification of wiring of Printer TG-7-A (Teletype Model 15) for operation with a line relay and a motor control relay |
| 5351s | - | I | link | Instructions for Installing the 101177 Set of Control Relay Parts on the 36 Type Printer |
| 5380s | - | S | link | General description, Teletype Model 19 page printer set |
| 5381s | - | S | link | General description, Teletype Model 15 page printer set |
| 5386S (10/53) | - | S | link | Description, adjustments, and parts ordering information Teletype model REC29 rectifier (for multi-voltage, multi-frequency operation) |
| 5387s | - | I | link | Description, Adjusting, and Ordering Information for REC30 Rectifier (for multi-voltage, multi-frequency operation) |
| 5404s | - | I | link | Instructions for installing and wiring the 105402 set of parts on Signal Corps TG-7-B and TG-37-B printers |
| 5448S | - | D | link | General Description Army Reperforator Transmitters TG-26A and TG-27A |
| 5469s | - | I | link | Instructions for installing and adjusting the 110352 set of parts of adding the ribbon reverse arm yield spring and backstop feature on Model 15 and 20 printers |
| 5472s | - | I | link | Instructions for installing the 110478 set of parts for securing an REC13 or REC30 rectifier to Model 19 (XRT114) table |
| 5475s | - | I | link | Description of and instructions for assembling Teletype Model 19 page printer set adapted for shipboard use |
| 5482s (9/58) | - | I | issue14 issue15 | Instructions for modifying a Model 15 printer from 60 W.P.M. operation to either 75 W.P.M. (using the 96535 or 96536 modification kit) or 100 W.P.M. (using the 110891 or 110892 modification kit) operation |
| 5486s | - | I | - | (replaced by 5230S) |
| 5534s | - | I | link | Instructions for installing the manual and power backspace and backspace cover modification kits on M28 or M35 perforator or reperforator (LPR, LPE, LRPE, LTPE, LARP) - <i>thanks to David Christ</i> |
| 5537S (3/48) | - | I | link | Description, Installation, Adjusting, and Parts Information for Teletype Apparatus Cabinets AC200 and AC210 |
| 5573S (4/47) | - | I | link | Description & installation instructions for 114189 tape unwinder on the Teletype TD |
| 5588S (12/47) | - | I | link | Use of the 116749 type-pallet soldering jig for M15 printer |
| 5604S (5/63) | - | I | link | Installing the 97321 or 106986 modification kit on a M14 typing reperf equipped with holding magnet selector to provide a tape feed-out magnet |
| 5646S (9/50) | - | I | link | Special instructions for use of 120870 felt wicks on cam sleeve assemblies of Multiple TD (MXD) |
| 5679S (3/53) | - | I | link | Description, Installation, Adjustments, and Parts Ordering information of the 122391 set of parts to equip a signal distortion test set (Bell 1A) for the transmission of alternate R& Y signals |
| 5687S (2/53) | - | I | link | Description, Installation, & Adjustments for Teletype AC243 and AC244 Apparatus Cabinets |
| 5706S (1/56) | - | I | link | Instructions for installing and adjusting 151400, 152336, 153040, or 153251 electrical motor control assembly on a M28 electrical service unit and |

| | | | | |
|---------------|---|---|-------------------------|---|
| | | | | instructions for converting the 151400 assembly to a 153040 and 153251 assembly using the 153923 and 152329 sets of parts respectively |
| 5707S (4/56) | - | I | link | Instructions for installing the 151999 or 152950 rectifier and cable assembly on the M28 electrical service unit and instructions for converting the 151999 assembly to a 152950 assembly using the 153477 cable assembly |
| 5712s | - | I | link | Instructions for installing the 115823, 115824, 115842 and 113048 sets of parts to equip Model 15 and Model 20 printers respectively with the new style type bar backstop |
| 5714S (9/52) | - | I | link | Description, installation, and adjustments for the Teletype AC237 apparatus cabinet |
| 5719s | - | I | issue2 | Instructions for installing the 152919 set of parts to modify a Model 28 page printer set (typing unit serial nos. 1500 and up) for use in weather map service |
| 5726s | - | I | link | Instructions for converting the key lever arrangement on a Model 28 keyboard from "ARA" to "ARC" and from "ARC" to "ARD," "ARB" or "ARA" using the 151934, 152904, 152905 or 152906 respectively |
| 5741s (5/57) | - | I | issue5 | Instructions for installing, adjusting and parts ordering information for the 128700 torn feed hole tape stop assembly, for use on a Model 14 transmitter-distributor |
| 5758s | - | I | - | (replaced by 5230S) |
| 5759S (8/57) | - | I | link | Instructions for installing the Teletype model 28 page printer set |
| 5760s | - | I | issue5 | Instructions for installing the 152307 modification kit on the Model 28 typing unit LP3, LP4, LP5, LP6, LP7, LP8, and LP9, to provide reperforator control mechanism (H-on, F-off or F-on, H-off) |
| 5765s (11/67) | - | I | link | Instructions for installing the 152915 or 157511 and 152916 or 154145 modification kit on Model 28 typing unit LP4 or LP10 and up and a Model 28 keyboard LK4 or LK6, LAK respectively to provide the local reverse line feed mechanism |
| 5766s | - | I | issue7 | Instructions for installing the 152917 or 157510 and 152918, 15416 or 199999 modification kid on a Model 28 or 35 typing unit and keyboard to provide local backspace mechanism |
| 5787S (7/60) | - | I | link | Installing the 113765 through 113775, 136025 through 136027, 136037 modification kits to provide and all steel internal expansion clutch, the 136154 modification kit to provide positive stop action with the all metal clutch, and the 136147 and 142546 modification kits providing character-by-character basis operation on a M14 or M20 Transmitter Distributor |
| 5792s | - | I | issue17 | Instructions for installing modification kits (172625, 176181 through 176197, 178568 through 178584, 306686 through 306072, 153926) to convert a Model 28 or 35 friction feed printer set to a sprocket feed printer set and for replacing the 153771 through 153787 guide bracket using the 159356 modification kit |
| 5801S (1/68) | - | I | link | Installing the 159417, 163256, 179965, or 199812 modification kit to provide a variable speed drive for the M28 typing reperf (RO) |
| 5804s | - | I | issue8 | Instructions for installing the 154785 or 163146 modification kit on a Model 28 typing unit or sequence selector unit to add a universal contact |
| 5809s | - | I | issue5 | Instructions for installing the 195837** modification kit to equip the Model 28 cabinets, LAC202 or above and the LAAC200 series with paper supply and accumulating shelf, and the 179393** modification kit to add adjustable form guide to the 192260** and 195837** paper supply and accumulating shelf |
| 5816s | - | I | issue1 | Instructions for installing the 153905 or 153914 spacing drum set of parts on a Model 28 typing unit (LP3, LP4, LP5; Bell System 28A) |
| 5821s (6/65) | - | I | link | Instructions for installing the 152902 modification kit for cabinets LAC203, LAC204, LAC205 (Bell System 28B, 28C, 28D, 28E) and the 154753 modification kit for typing units LP6, LP9 (Bell System 28E, 28F, 28G) to provide an interim selective calling feature |
| 5827s | - | I | issue7 | Instructions for installing the 153920, 154741 or 157532 selective calling modification kit on a Model 28 cabinet LAC203**, LAC204**, LAC205**, LAAC209**, LAAC210** and the 160884 modification kit to provide auxiliary connector for cabinet LAAC206** (for CAA) |
| 5831S (12/56) | - | I | link | Coding the 153440 universal function bar for use in a M28 stunt box |

| | | | | |
|---------------|---|---|------------------------|--|
| 5837S | - | I | link | Installing and adjusting the AC256 or AC258 apparatus cabinet and the 136021 modification kit to provide blinking operation for out-of-tape lamps |
| 5847s | - | I | issue5 | Instructions for converting a Model 28 printer set (typing unit LP6, LP9, from Bell system 28B, 28C, 28D to 28E, 28G; and cabinets LAC203**, LAC204**; Bell System 28B, 28C) from non-selective calling to selective calling using the 153941 or 154758 modification kit |
| 5856s | - | I | issue1 | Instructions for installing the 154798 superfold friction free paper handling modification kit on a 28 typing unit |
| 5857s | - | I | issue3 | Instructions for installing the 154782 modification kit on a Model 28 typing unit LP6, LP9 and up to prevent associated transmitter distributor from locking out typing unit when nonspacing functions occur |
| 5865S (10/57) | - | I | issue2 | Instructions for installing the Model 28 multi-magnet reperforator set (reperforator LARP1, base LARB1 and motor unit LMU3) |
| 5866s | - | I | issue3 | Instructions for installing the 153913 modification kit on a selective calling Model 28 typing unit LP6 or LP9 to provide print suppression during selection for use with single letter C.D.C. operation |
| 5872s | - | I | issue8 | Instructions for installing: the 154755, 159395, 163292 or 154792 modification kit on a Model 28 typing unit to provide 5, 6, 8, or 12 spaces respectively, the 154334 modification kit to provide increased ribbon height on units with large gothic type pallets |
| 5875S (6/59) | - | I | issue2 | Installing and adjusting the M28 reperforator-transmitter set (28RT) |
| 5880s | - | I | issue1 | Instructions for installing and parts ordering information for the 160335 modification kit to add control panel to Model 28 automatic send-receive cabinet LAAC206** |
| 5887s | - | I | issue3 | Instructions for installing the 179472 modification kit to provide a transmitter control device for use on FAA equipment |
| 5888s | - | I | issue6 | Instructions for installing the 159366 (for Model 28 only) or 194324 modification kit on a Model 28, 29, 34, 35 or 28-32 printer (friction feed) to provide a paper-out alarm switch |
| 5892S (10/67) | - | I | issue7 | Installing the 154142 time delay mechanism modification kit on a M28 keyboard or base (LK6 and up) |
| 5898s | - | I | link | Instructions for installing the 161280 modification kit on a Model 28 typing unit to provide on-line operation of the local reverse line feed mechanism |
| 5899s | - | I | link | Instructions for installing the 154174 modification kit on a Model 28 keyboard LK6 or LAK to provide repeat space operation |
| 5904s (4/59) | x | I | link | Instructions for installing the 136132 overload switch assembly on MU4 or 82283 synchronous motor for |
| 5919S | - | I | no link | General instructions for installing typical receive only teletype model 28 typing or nontyping reperforator sets |
| 5936S (11/59) | - | I | no link | Instructions for installing and adjusting a disassembled model 28 reperforator transmitter RT set |
| 5942S | - | M | no link | Description, Installation, adjustments, lubrication, and parts for Teletype model 28 keyboard send receive typing reperforator set LTRK, LPR, LSRC |
| 5945S | - | I | no link | Instructions for installing the 162379 or 163347 modification kit to provide automatic noninterfering letters tape feed out for model 28 typing and nontyping reperforators |
| 5946S (12/59) | - | I | no link | Instructions for installing the 163183 modification kit to provide DC magnet operated print suppression on a model 28 typing unit LP6, LP9, and up |
| 5947s | - | I | link | Instructions for installing the 163775 modification kit to equipment Model 28 keyboard LK6 and up or LAK with space-repeat mechanism |
| 5948s | - | I | link | Instructions for installing the 162641 or 163359 modification kit on a Model 28 keyboard or base to provide a variable speed drive |
| 5950S (1/60) | - | I | no link | General instructions for installing typical model 28 receiver projector set |
| 5951S (2/60) | - | I | no link | High speed tape punch set BRPE BRPEB Specification |
| 5953S | - | I | no link | Instructions for installing the 164717 modification kit with the 164741 or 164742 cam on the selector of a model 28 typing unit LP6 and up to provide a timing |

| | | | | |
|---------------|---|------------|--|--|
| | | | | transfer contact mechanism |
| 5954s | - | I | issue2 , issue4 | Instructions for installing the 164502 modification kit to provide Model 28 send-receive keyboard (LK) and automatic send-receive keyboard base (LAK) with an end-of-message character generator; and instructions for installing the 173122 modification kit to eliminate interference between components of the 164502 modification kit (early design) and 154240 and 162308 code bar reset bails |
| 5971S (4/60) | - | I | no link | Instructions for installing the 164564 modification kit to convert a model 28 typing or non typing reperforator 5 level and receive only base to produce fully perforated rather than chadless tape straight feed only |
| 5972S (11/67) | - | I | link | Installing the 164077 modification kit on a M28 keyboard (LK3 through LK6, LK8 and up) to provide a universal keyboard switch |
| 5976S (4/60) | - | I | no link | Instructions for installing and adjusting the Teletype model 28 three reel rim driven tape winder TW15 |
| 5993S (9/60) | - | I | no link | Installation of monitor printer cabinet AC276 and its components |
| 5998S (11/60) | - | D, T, A | no link | LEXD edge punched Transmitter Distributor, Description, Theory, & Adjustments |
| 6889s | - | S | link | Engineering specification for the Model 28 transmitter distributor LBXD8 and LBXD22 |
| 6932s | - | S | link | Engineering specification for the four row keyboard reperforator Transmitter Model 29 & 35 (Series 600 thru 800) |
| 6933s | - | S | link | Engineering specification for the Model 29 and 35 typing unit (LP600 thru 800 series) |
| 50001s | - | I | link | Instructions for installing the 164272 modification kit to provide chad disposal for the auxiliary reperforator; 170306 modification kit to provide chad disposal for the keyboard reperforator; 166405** and 195391** modification kits to provide chad container for the auxiliary and/or keyboard reperforator. |
| 50002S (9/60) | x | I | link | Instructions for installing the 172679 modification kit to provide tape deflector on M28 TD LXD to be mounted on multiple TD base LMXB201 or LMXB202 |
| 50014S (4/62) | - | D, T, A, L | link | General description, theory, adjustment, and lubrication for Model 28 Miniaturized Multi-Magnet Reperforator LARP |
| 50015s | - | I | link | 174491 Modification Kit to provide radio-frequency filter for signal generator contacts of Model 28 keyboards LK6 and up, LAK, LTPK, LTRK, and transmitter distributor LXD |
| 50019S | - | I | link | INSTRUCTIONS FOR INSTALLING MULTIPLE WIRE DISTRIBUTOR UNITS LD8, LD13, LD801, OR LD803 IN AN ASR SET (ON LXD TYPE LCXB BASE); LD9, LD16, OR LD800 IN KSR AND RO SETS; LD10 IN A SEQUENTIAL SELECTOR SET; LD19 IN SELF-CONTAINED RECEIVING SELECTOR OR SENDING DISTRIBUTOR BASE (LRSB204); LD802 FOR SELF-CONTAINED APPLICATIONS; 173358 MODIFICATION KIT TO ADD TERMINAL BOARD A SSEMBLY TO LAC203** I LAC204**,OR LAC205* * |
| 50039s | - | I | issue3 , issue4 | Instructions for installing the 174176 modification kit to provide Model 28 send-receive keyboard (LK6 and up) with an upper case "D" answer-back mechanism; also, kit 176272 to give answer-back operation on sequential "Figures" - "C" with addendum. |
| 50042s | - | I | link | 177010 Selector Magnet Driver, 177015 Modification Kit to add 177010 Selector Magnet Driver to Model 15 or Model 19 Set |
| 50044s | x | I | link | 28 ASR power switch for auxiliary reperf - Installation (NAVSHIPS 981741) |
| 50060s | - | I | link | Instructions for installing the 178343, 178344, and 178345 modification kits on Model 28 send-receive sets (Keyboards LK6 and up) to provide an Answer-Back mechanism. |
| 50065s | - | I | issue2 issue3 | Instructions for installing the 178316, 178343, 178345, and 178346 modification kits on Model 28 automatic send-receive sets (ASR) to provide an answer-back mechanism for use in dial TWX. |
| 50068S (1/62) | - | I | link | Installing the 174216 modification kit to provide a sequential "FIGS", "C" answer-back mechanism on M28 keyboards LK3, 4, and 5 for use in dial TWX |
| 50069s (5/64) | x | I | link | Instructions for installing the 173881 or 178415 modification kit. Adds 5 switches to M28 typing unit code bars to provide parallel output signals once |

| | | | | |
|----------------|---|---|--|---|
| | | | | each function cycle |
| 50078S (1/68) | - | I | link | Instructions to convert a TD LXD4 to an LXD15 using the 175309 modification kit |
| 50100s | - | I | link | Instructions for installing the 179416 modification kit; the 176540 tandem numbering module assembly in the LAAC232** cabinet; also, modification kit 194329** to permit using the LAAC232** cabinet without numbering module |
| 50129S (2/68) | - | I | link | Installing and adjusting the 174285 modification kit to convert a M28 typing reperf unit (LPR) into a tape printer unit (LTP) |
| 50131s | - | I | link | Instructions for installing the 195022 modification kit to convert FAA Model 28 ASR sets with keyboards LAK4 or 25 to conform to VSL245; kit 195023 to make FAA Model 28 ASR sets with keyboard LAK26 compatible with VSL245 sets; and kit 195036 to provide line relay and line shunt relay for auxiliary typing reperforator (LPR) for FAA. |
| 50140S (11/67) | - | I | link | Installing manual touch-tone card dialer on M33 or M35 KSR and ASR sets using modification kit 193488 or 195927 |
| 50146s | - | I | link | Instructions for installing the 194049 modification kit to provide an upper case "D" answer-back mechanism on Model 28 ASR sets |
| 50152s | - | I | link | Instructions for installing the 179953 modification kit to convert the 160334 transmitter control device to the 179472 transmitter control device |
| 50162s | - | I | link | Instructions for installing the 194236 modification kit to add print-suppression to the Model 35 tape printer (LTP800, 801) and Model 35 typing reperforator (LPR800, 801) |
| 50173s | - | I | link | Instructions for installing the 193646 modification kit to convert a Model 28 selective calling keyboard send-recv set equipped with stunt box arrangement "AFQ" (or other "AN" based arrangement) for use with Teletype Automatic Switching Package (TASP) - 60 WPM operation only |
| 50178s | - | I | link | Instructions for installing the 193936 (Navy nomenclature MK-764/UG) modification kit on Navy stunt boxes (LP6 and up) to permit line feed on carriage return and restrict line feed on the two functions that follow |
| 50184S (9/67) | - | I | link | Installation instructions for the 179603 modification kit to add tape withhold mechanism to the M28 TD (LXD) |
| 50203s | - | I | issue1 issue2 | Instructions for installing the 195154 modification kit to provide three speed gear shift on Model 28 ASR sets |
| 50204s | - | I | link | Instructions for installing the 195415 modification kit to provide a three-speed gear shift for Model 28 KSR or RO set |
| 50209S (11/67) | - | I | link | Installing the 195921 and 195922 assemblies to equip M28 LBAC cabinets with a paper winder |
| 50220S (9/67) | - | I | link | Installing the 197937 modification kit to provide shock mounting for the copylight lamps of KSR (LAC) cabinet |
| 50247S (7/67) | - | I | link | Installing the 193988, 193989, 193992, and 193993 modification kits to maintain slack tape for M28 and M35 perforators and reperforators |
| 50267S | - | I | link | Instructions for installing modification kit 199520 to provide a business machine data replay mechanism to a Model 28 stunt box - 83B3 system |
| 50326S (1/68) | - | I | link | Installing the 193230 48 volt power supply modification kit on M28 Tape Handling Stand LTHS213 |
| 50333S | - | I | link | Instructions for installing the 199886 modification kit to provide a transmitter distributor control for Model 35 ASR stations |
| 50340S (11/67) | - | I | link | Installing the 182265 modification kit to convert a M32 TA/1 KSR set to a M32 TC/1 ASR set |
| 50349S | - | I | link | Installing the 199610 send-recv terminal modification kit for Type 2 High Speed Tape Systems |
| 50351S | - | I | link | Installing the 305737 modification kit to provide the LPW300 paper winder with improved tape spindle |
| 50358S (2/68) | - | I | link | Installing the 199330 modification kit to provide alarm and "Don't Answer" on low tape for M35 ASR sets |
| 50360S (3/68) | - | I | link | Installing the 305053 modification kit to convert the M28 keyboard LAK4 to |

| | | | | |
|----------------|---|---|----------------------|---|
| | | | | M28 LAK44 |
| 50366S | - | I | link | Instructions for installing the modification kits 306726 through 306730, 306986 and 306987 to convert Bell system stunt boxes for use with Model 28 83B3 typing units (LP) |
| 50368S | - | I | link | Installation instructions for modification kits 306721 through 306725, 306984, and 306985 to convert page printers for use in the 83B3 selective calling system |
| 50375S (11/67) | - | I | link | Installing the 511456 modification kit to provide a universal paper jam alarm for M28, M29, M35 sprocket feed typing units |
| 50386S | - | I | link | Instructions for installing the 305037 and 310733 modification kits to adapt a Model 35 or Model 28 sprocket feed typing unit to take 9-1/2 inch width paper, respectively |
| 50413S | - | I | link | Installing the 184157 modification kit on M32/33 friction-feed typing units to provide automatic Line Feed on Carriage Return |
| 50428S (9/67) | - | I | link | Installing the 185730 modification kit to add motor fuse to M32/33 sets |
| 50436S (8/67) | - | I | link | Installation instructions for the 185814 platen with screw assembly to provide platen endplay in M32/33 friction feed typing units |
| 50451S (11/67) | - | I | link | Installing the 311728 modification kit to provide three speed gear shift for M28 KSR or RO set |
| 50453S (2/68) | - | I | link | Installing the 312350 modification kit to operate M35 private line sets with Dataphone and private line sets (includes 312418 data set coupler) |
| 50454S (9/67) | - | I | link | Installing paper tape verifier kit 312406 on M35 automated communication sets |
| 50460S (8/67) | - | I | link | Installing the 183986 A to D modification kits to provide print-nonprint mechanism on M33 ASR typing units |
| 50463S (8/67) | - | I | link | Installing the 323424 modification kit to provide intermediate tape storage bin on M35 ASR set |
| 50464S (1/68) | - | I | link | Installing the 319274 modification kit to provide an alarm lamp and release switch on M35 private line sets |
| 50468S (10/67) | - | I | link | Installing the 311458, 311459, 311460, and 311461 modification kits to provide adjustable last form alarm on M35 sprocket feed typing sets |
| 50485S (9/67) | - | I | link | Installing the 324584 (KSR) and 324585 (ASR) modification kits to replace the 177563 signal regenerator card in M35 KSR and ASR sets with the 323609 signal regenerator card |
| 50486S (1/68) | - | I | link | Installing the 199446 modification kit to provide signal regeneration on M35 8A1 sets |
| 50490S (9/67) | - | I | link | Installing the 323705 modification kit to provide forced ventilation for the M28 and M35 AC cabinets |
| 50491S (2/68) | - | I | link | Installing modification kit 315869 to provide an electrical keyboard lock for M28 or M35 wall mounted keyboard |
| 50492S (3/68) | - | I | link | Installing modification kits 321761, 321762, and 321763 to convert Bell System stunt boxes and typing units from LP15RX/AR (28D) to LP129RX/AUH (28AR) and LP133RX/AKA (28BE) units |
| 50493S (7/67) | - | I | link | Installing modification kit 321706 on M35 typing reperforators to provide a "Full Chad Box" warning indicator |
| 50494S (7/67) | - | I | link | Installing modification kit 319820 to convert a M37 friction feed typing unit to a sprocket feed typing unit |
| 50498S (2/68) | - | I | link | Installing modification kits 182196 and 182197 to permit operation of M32 and M33 (respectively) perforator units with dry non-oiled tape |
| 50499S (4/68) | - | I | link | Installing the 319385 modification kit to add two-speed gearshift to M35 KSR |
| 50511S | x | I | link | 28 skintight KSR and RO - low-level RFI kit installation (NAVSHIPS 0967-280-1010) |
| 50603S (1/68) | - | I | link | Installing the 325967 modification kit to convert M35 printer line feed clutch from 6-stop to 3-stop |
| 50606S (3/68) | - | I | link | Installing the 321474 modification kit to equip early design keyboard perforators (LKPE, LKTP) with improved clutch trip mechanism |
| | | | | Installing the 321940 modification kit to adapt M35 sprocket feed printer with |

| | | | | |
|----------------|---------|---|----------------------|--|
| 50607S (11/67) | - | I | link | improved paper and form handling |
| 50608S (11/67) | - | I | link | Installing the 327102 modification kit to provide improved parts for the LPW300 paper winder |
| 50612S (12/67) | - | I | link | Installing the 323790 modification kit to adapt M35 8-1/2 inch sprocket feed typing unit for use with 2-1/2 inch long by 8-1/2 inch wide forms |
| 50633S (3/68) | - | I | link | Installing the 195834 modification kit to male LCXB800 TD base compatible with LRB301 reperf base |
| 51055S (11/81) | 325-078 | S | no link | Instructions for configuration and assembly of feature groups and keytops for the 43 Buffered Teleprinters used in the Bell System |
| 60198S | - | S | link | Engineering specification for the Model 28 transmitter distributor (LBXD800 and Model 35 transmitter distributor (LBXD801) |
| 60324S | - | S | link | Engineering specification for equipment comprising the Teletype Automatic Switching Package (TASP) |
| 60235s | - | S | link | Engineering specification for the automatic line switching system originating and terminating station teletypewriter equipment (Delta Airlines system) |
| 60660s | - | S | link | (partial) Canadian ticker |
| 62953s | - | S | link | Engineering specification for the 6591 Display Terminal and 56C607 Terminal Controller |
| 62979s | - | S | link | Engineering specification for 6542 Communications Controller (Mini) |